

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER HHVI325JR22 Dustbuster Cordless Lithium Hand Vacuum User Manual

BLACK+DECKER HHVI325JR22

BLACK+DECKER HHVI325JR22 Dustbuster Cordless Lithium Hand Vacuum User Manual

Model: HHVI325JR22

[Introduction](#)

[Safety Information](#)

[Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your BLACK+DECKER HHVI325JR22 Dustbuster Cordless Lithium Hand Vacuum. Please read this manual thoroughly before operating the appliance and retain it for future reference. This lightweight and portable hand vacuum is designed for quick clean-ups on various surfaces including hard floors, carpets, furniture, and car interiors.



Image: The BLACK+DECKER HHVI325JR22 Dustbuster Cordless Lithium Hand Vacuum, showcasing its compact design and ink blue accents.

2. IMPORTANT SAFETY INFORMATION

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Do not use the appliance in wet conditions or immerse it in water.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not operate the appliance if it has been dropped, damaged, left outdoors, or dropped into water.
- Do not handle the charger or appliance with wet hands.
- This appliance is intended for household use only.
- Unplug the charger from the outlet before cleaning or performing any maintenance.

3. PRODUCT COMPONENTS

Your BLACK+DECKER HHVI325JR22 Hand Vacuum includes the following items:

- (1) HHVI325JR22 Hand Vacuum
- (1) Jack Plug Charger
- (1) Wall Mount
- (1) Extendable Crevice Tool
- (1) Flip-Up Brush

- (1) VF110 Filter (pre-installed)



Image: Side view of the hand vacuum, illustrating the main body and dirt bowl.

4. SETUP AND INITIAL CHARGING

4.1 Initial Charging

Before first use, fully charge the hand vacuum for approximately **16 hours**. This ensures optimal battery performance and longevity. Connect the jack plug charger to the charging port on the vacuum and plug it into a standard wall outlet.

4.2 Wall Mount Installation

The included wall mount provides convenient storage and charging. Choose a suitable location near an electrical outlet. Secure the wall mount to the wall using appropriate hardware (not included) for your wall type. Once mounted, the vacuum can be stored on the mount and connected to the charger.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To turn the vacuum on, slide the power switch to the "ON" position. To turn it off, slide the switch to the "OFF" position.

5.2 Using Attachments

The HHVI325JR22 is equipped with versatile attachments for various cleaning tasks:

- **Rotating Nozzle:** The nozzle pivots to allow access to hard-to-reach areas, such as under furniture or on top of shelves.
- **Pull-Out Crevice Tool:** Extend this tool for precise cleaning in tight spaces like between couch cushions or car seats. Ensure it is pulled out far enough to lock into place for stable use.



Image: A hand demonstrating the extension of the pull-out crevice tool for reaching narrow spaces.

- **Flip-Up Brush:** This brush is integrated into the nozzle and can be flipped up for dusting delicate surfaces or vacuuming upholstery.



Image: A hand demonstrating how to flip up the brush attachment for use on upholstery or for dusting.

5.3 General Cleaning Tips

For optimal performance, ensure the dirt bowl is not overfilled and the filter is clean. The cyclonic action helps keep debris away from the filter, maintaining strong suction.



Image: A person using the hand vacuum to clean debris from stairs, demonstrating its maneuverability.

6. MAINTENANCE

Regular maintenance ensures your hand vacuum operates efficiently.

6.1 Emptying the Dirt Bowl

The translucent, bagless dirt bowl allows you to see when it needs emptying. To empty, detach the dirt bowl from the main unit and dispose of the debris into a waste bin. It is recommended to empty the dirt bowl after each use or when debris reaches the "MAX FILL" line.

6.2 Cleaning the Dirt Bowl and Filter

Both the dirt bowl and the VF110 filter are washable. Detach the dirt bowl and remove the filter. Rinse both under running water until clean. Allow them to air dry completely before reassembling. Do not use hot water or harsh detergents. Ensure all parts are thoroughly dry before reattaching to the vacuum to prevent damage.

Washable dirt bowl and filter



Image: Hands cleaning the detachable dirt bowl and filter under running water in a kitchen sink.

6.3 Filter Replacement

The VF110 filter should be replaced periodically, depending on usage, to maintain optimal suction and air quality. Replacement filters can be purchased from authorized BLACK+DECKER retailers.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the vacuum for 16 hours initially, or until fully charged.
Reduced suction power.	Dirt bowl is full or filter is clogged.	Empty the dirt bowl and clean or replace the filter.
Vacuum is unusually loud.	Obstruction in the nozzle or dirt bowl.	Turn off and unplug the vacuum. Check for and remove any obstructions. Ensure dirt bowl and filter are correctly assembled.
Battery does not hold a charge.	Battery has reached the end of its lifespan.	Contact customer support for battery replacement options or consider replacing the unit.

8. PRODUCT SPECIFICATIONS

Model Number:	HHVI325JR22
Brand:	BLACK+DECKER
Power Source:	Cordless, Lithium-Ion Battery (12V MAX* nominal 10.8V)

Filter Type:	Cloth (VF110)
Capacity:	0.81 Pounds (dirt bowl)
Product Dimensions:	12.5"L x 7.9"W x 5.3"H
Item Weight:	2.42 pounds
Noise Level:	75 Decibels
Special Features:	Bagless, Lightweight, Portable, Washable Filter

*Maximum initial battery voltage (measured without a workload) is 12 volts. Nominal voltage is 10.8 volts.

9. WARRANTY INFORMATION

This BLACK+DECKER product is covered by a **2-year limited warranty** from the date of purchase. This warranty covers defects in material or workmanship. It does not cover damage due to normal wear and tear, misuse, abuse, neglect, accident, or unauthorized repair. For full warranty terms and conditions, please refer to the documentation included with your product or visit the official BLACK+DECKER website.

10. CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty claims, please contact BLACK+DECKER customer service. You can find contact information on the official BLACK+DECKER website or through the retailer where you purchased the product.

Online Resources: www.blackanddecker.com