

Armitron 40/8377DGN

Armitron Sport Digital Chronograph Watch User Manual

MODEL: 40/8377DGN

1. Introduction

This manual provides detailed instructions for the Armitron Sport Men's 40/8377DGN Digital Chronograph Watch. Please read this manual thoroughly to understand the watch's features and ensure proper operation and longevity.

Key Features:

- Olive green resin case with graphic top ring and LCD display.
- Functions include chronograph, lap time, alarm, dual time, military time, and backlight with three-second delay.
- Equipped with Quartz Movement for accurate timekeeping.
- Water resistant to 100m (330ft), suitable for swimming and snorkeling.
- Comfortable black neoprene strap with hook-and-loop closure.

2. Watch Components

Familiarize yourself with the various parts and buttons of your Armitron Sport watch:



Image 2.1: Front view of the Armitron Sport 40/8377DGN watch, highlighting the digital display and button labels.

- **Display:** Shows time, seconds, day, and date.
- **MODE Button (Left-Bottom):** Cycles through different modes (Time, Chronograph, Alarm, Dual Time).
- **RESET Button (Left-Top):** Used to reset values or adjust settings in various modes.
- **ST/STP Button (Right-Top):** Starts/stops functions like chronograph or adjusts settings.
- **LIGHT Button (Right-Bottom):** Activates the backlight for visibility in low light conditions.

3. Initial Setup

Setting Time and Date:

1. In Time Mode, press and hold the **MODE** button until the seconds begin to flash.
2. Press the **RESET** button to cycle through the settings: Seconds > Hour > Minute > Year > Month > Day.
3. Use the **ST/STP** button to adjust the flashing value.
4. Press the **MODE** button again to exit the setting mode.

12/24 Hour Format (Military Time):

While in Time Mode, press the **ST/STP** button to toggle between 12-hour and 24-hour (military) time formats.

4. Operating Functions

Chronograph (Stopwatch) Mode:

1. Press the **MODE** button repeatedly until 'CHRONO' or 'STW' appears on the display.
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to pause the stopwatch.
4. Press **RESET** to clear the stopwatch to zero.
5. For Lap Time: While the stopwatch is running, press **RESET** to display the lap time. The stopwatch continues to run in the background. Press **RESET** again to return to the running stopwatch display.

Alarm Mode:

1. Press the **MODE** button until 'ALARM' appears.
2. Press and hold the **RESET** button until the hour flashes.
3. Use **ST/STP** to adjust the hour. Press **RESET** to move to minutes.
4. Use **ST/STP** to adjust the minutes.
5. Press **MODE** to confirm and exit.
6. To activate/deactivate the alarm, press **ST/STP** in Alarm Mode. An alarm icon will appear/disappear.

Dual Time Mode:

This feature allows you to set and view a second time zone.

1. Press the **MODE** button until 'DUAL TIME' or 'T2' appears.
2. Press and hold the **RESET** button until the hour flashes.

- 3. Use **ST/STP** to adjust the hour. Press **RESET** to move to minutes.
- 4. Use **ST/STP** to adjust the minutes.
- 5. Press **MODE** to confirm and exit.

Backlight:

Press the **LIGHT** button (Right-Bottom) to illuminate the display for approximately three seconds.

Video 4.1: A 21-second product video showcasing the Armitron Sport Men's 40/8377DGN watch from various angles, demonstrating its design and features.

5. Maintenance and Care

Water Resistance:

Your Armitron Sport watch is water resistant to 100 meters (330 feet). This means it is suitable for swimming and snorkeling. However, it is **not** suitable for scuba diving. Avoid operating buttons underwater to prevent water ingress.

WATER RESISTANT CHART	
 NOT WATER RESISTANT	NOT WATER RESISTANT
 ACCIDENTAL SPLASHES	WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
 SWIMMING	WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling
 SNORKELING	WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving

Image 5.1: Water Resistance Chart, illustrating the capabilities of watches at different depth ratings. This watch is rated for 100m (330ft).

Cleaning:

Wipe the watch case and strap with a soft, damp cloth. For neoprene straps, mild soap and water can be used, but ensure it is thoroughly rinsed and dried.

Battery Replacement:

The watch uses 1 Lithium Metal battery (included). When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.

6. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set properly or accidental button press.	Re-set the time and date as per Section 3.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try pressing all buttons simultaneously for a few seconds to reset. If issue persists, replace battery.
Water inside the watch.	Buttons pressed underwater or seal compromised.	Immediately take to a qualified watch technician for inspection and repair. Do not attempt to dry it yourself.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Armitron customer support.

7. Specifications

Feature	Detail
Model Number	40/8377DGN
Movement	Quartz
Case Diameter	51mm
Water Resistance	100m (330ft)
Strap Material	Neoprene
Battery Type	1 Lithium Metal (included)
Product Dimensions	4 x 2.8 x 2.6 inches
Item Weight	4 ounces
Country of Origin	China



Image 7.1: The Armitron Sport 40/8377DGN watch worn on a wrist, providing a visual reference for its size and fit.

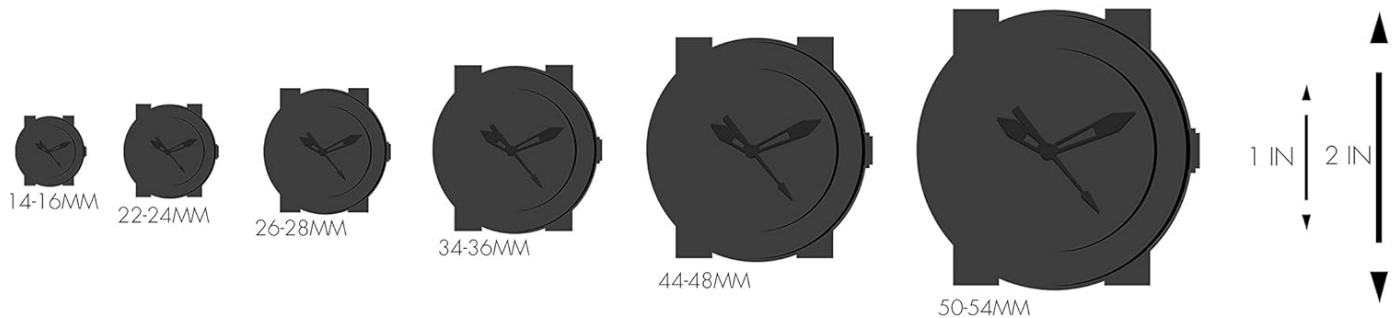


Image 7.2: A watch size comparison chart, illustrating different watch diameters to help users understand the 51mm case size of this model in context.

8. Warranty and Support

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Armitron website. Contact details for customer service are typically available on the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question