

[Manuals.plus](#) /

› [eTradewinds](#) /

› eTradewinds Digital Kitchen Timer Model eT-24 User Manual

eTradewinds eT-24

eTradewinds Digital Kitchen Timer Model eT-24 User Manual

Model: eT-24 | Brand: eTradewinds

PRODUCT OVERVIEW

The eTradewinds Digital Kitchen Timer Model eT-24 is a versatile timing device designed for various household and professional applications. It features a large display, multiple mounting options, and user-friendly controls for efficient time management.

Key Features

- Counts up/down (99 minutes, 59 seconds) with Auto-Memory for repeated tasks.
- Silent button presses eliminate annoying beeps when setting time.
- Large, bright, and easy-to-read LCD display.
- Loud 80dB+ alarm, audible for 62 seconds, or can be manually shut off.
- Strong Neodymium earth magnet with anti-scratch appliance saver foam for secure attachment.
- Adjustable fold-out kickstand (0-90 degrees) for countertop use.
- Lanyard attachment slot for portability.
- Convenient battery-saving auto shut-off after 3 minutes of inactivity.
- Includes 1 AAA battery.

SETUP

Battery Installation

The timer requires one AAA battery (included).

1. Locate the battery compartment on the back of the timer.
2. Lift the fold-out stand to access the battery cover.
3. Slide the battery cover off.
4. Insert one AAA battery, ensuring correct polarity (+/-).

5. Replace the battery cover and close the stand.

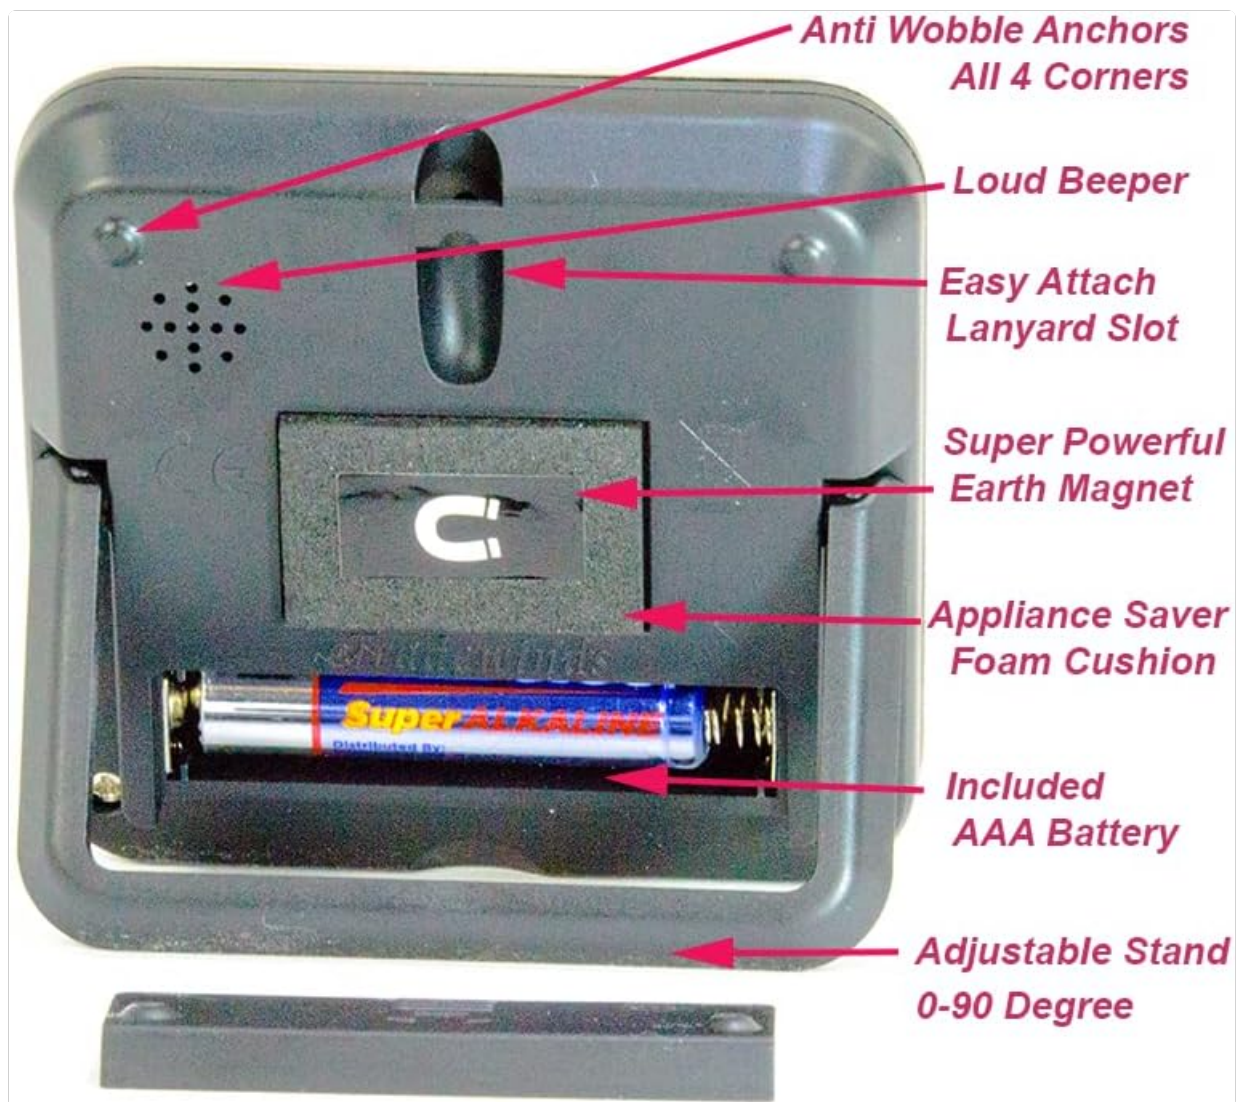


Image: Back view of the timer, highlighting the battery compartment, strong magnet, and adjustable kickstand.

OPERATING INSTRUCTIONS

Power On/Off

To turn the timer on, press any button. The timer will automatically shut off after 3 minutes of inactivity to conserve battery life.

Setting Time (Countdown)

1. Ensure the display shows "00:00". If not, press the "MIN" and "SEC" buttons simultaneously to reset.
2. Press the "MIN" button to set the desired minutes. Press and hold for rapid advancement.
3. Press the "SEC" button to set the desired seconds. Press and hold for rapid advancement.
4. Press the "START/STOP" button to begin the countdown.

Using Count-Up Function

1. Ensure the display shows "00:00". If not, press the "MIN" and "SEC" buttons simultaneously to reset.
2. Press the "START/STOP" button to begin counting up from zero.

Pausing and Resuming

During either count-up or countdown, press the "START/STOP" button to pause. Press it again to resume.

Resetting the Timer

To reset the timer to "00:00" at any time, press the "MIN" and "SEC" buttons simultaneously.

Auto-Memory Feature

After a countdown completes and the alarm sounds, the timer will retain the last set time in its memory until it is manually reset. This is useful for repeated tasks.



Image: Front view of the timer with its large display and clearly labeled MIN, SEC, and START/STOP buttons.

Video: Demonstrates the setup and basic operation of the eTradewinds Digital Kitchen Timer, including setting and resetting functions.

MOUNTING OPTIONS

Magnetic Attachment

The timer features a powerful Neodymium earth magnet on its back, allowing it to be securely attached to any magnetic surface, such as a refrigerator or oven. An anti-scratch appliance saver foam protects surfaces.

Fold-Out Kickstand

An adjustable fold-out kickstand is located on the back, allowing the timer to be placed on a countertop or desk at an optimal viewing angle (0-90 degrees).

Lanyard Slot

A lanyard attachment slot is provided for portability, allowing the timer to be hung around the neck, belt, or wrist (lanyard not included).

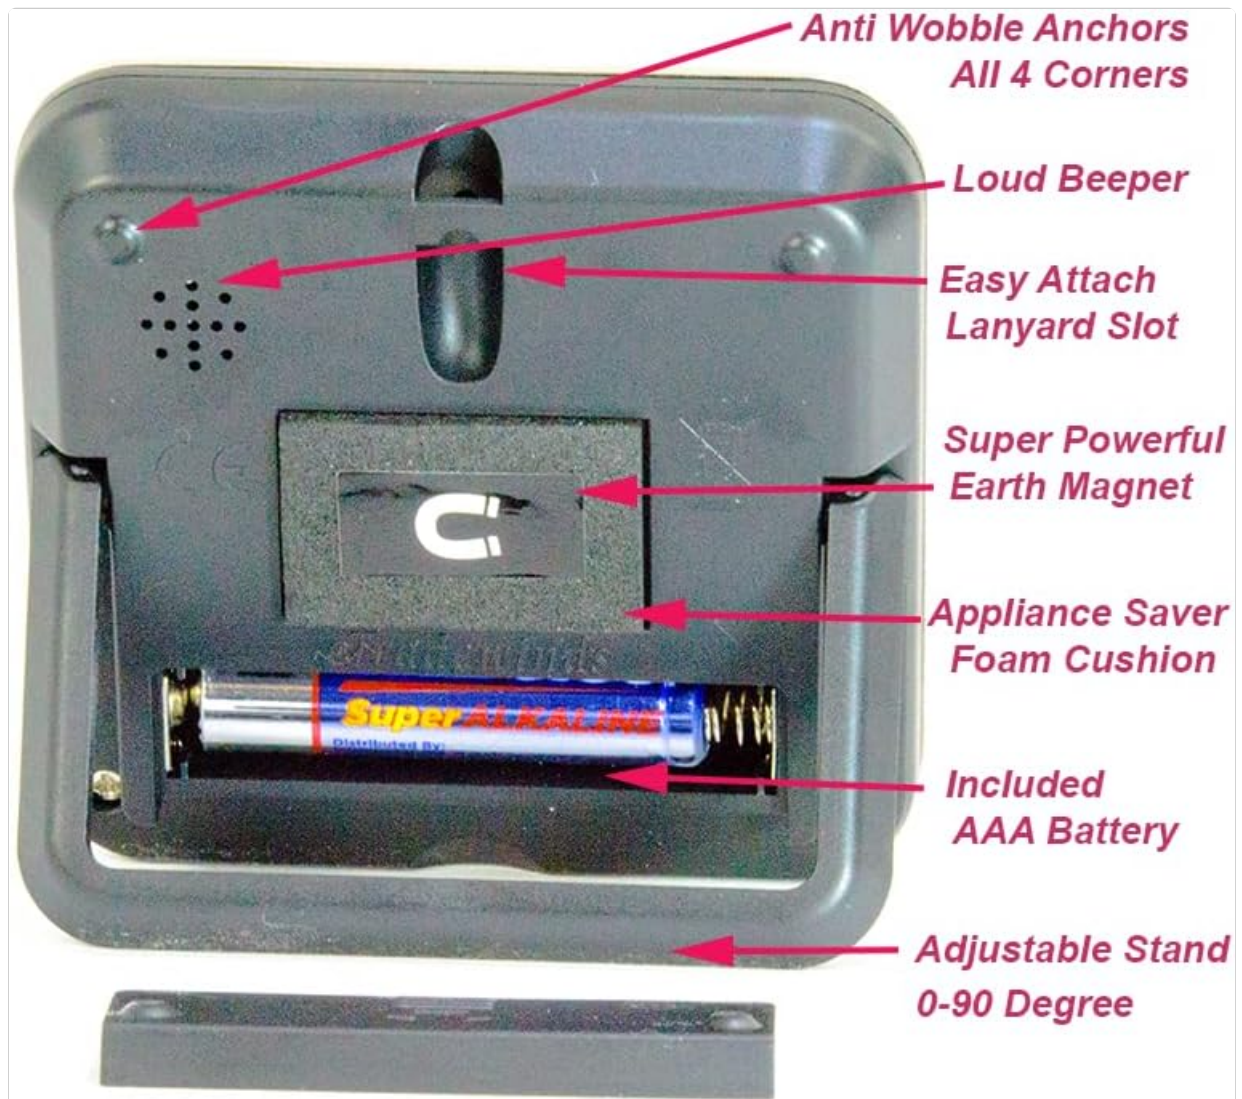


Image: The back of the timer, illustrating the strong magnet, adjustable kickstand, and lanyard slot for various mounting and carrying options.



Image: Close-up of the timer's lanyard attachment point, demonstrating how a lanyard can be used.

MAINTENANCE

Cleaning

Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement

Replace the AAA battery when the display dims or the timer functions inconsistently. Follow the battery installation steps outlined in the Setup section.

TROUBLESHOOTING

Timer Not Turning On

- Ensure the AAA battery is correctly installed with the proper polarity.
- Replace the battery with a fresh one.

Alarm Not Audible

- Check if the timer is placed in an area where the sound might be muffled.
- Ensure the battery has sufficient power.

PRODUCT SPECIFICATIONS

Specification	Detail
Color	Plumberry

Specification	Detail
Brand	eTradewinds
Material	Stainless Steel
Product Dimensions	1"D x 3"W x 3"H
Item Weight	2.4 ounces
Number of Settings	1
UPC	011542378854
Model Number	eT-24
Included Components	1 AAA Battery

WARRANTY AND SUPPORT

Lifetime Residential User Replacement

eTradewinds offers a lifetime replacement warranty for residential use. Should a component on your timer ever fail to function properly (excluding battery), eTradewinds will replace it free of charge and cover shipping within the USA. There are no expired time limits for this warranty.

Contact Support

For any support inquiries or warranty claims, please contact eTradewinds via Amazon, or use the email or phone number provided with your product. Our support team is available to assist you.



Lifetime

Residential User Replacement

We absolutely promise an immediate timer replacement should a component on your timer ever fail. If you're not 100% happy, please let us know through your buyers account or timer box insert info and we promise to make it right.

Because we stand behind our products, We offer a

Lifetime Replacement

We aim to please even if it costs us money

Thank you for looking!



Image: Details of the eTradewinds Lifetime Residential User Replacement policy.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question