

Moser 1901.0460

Moser 1901 Lithium Professional Hair Clipper User Manual

Model: 1901.0460

1. INTRODUCTION

Thank you for choosing the Moser 1901 Lithium Professional Hair Clipper. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new hair clipper. Please read these instructions thoroughly before first use and keep them for future reference.



Image 1: Moser 1901 Lithium Professional Hair Clipper. This image shows the sleek design of the clipper with its LED charge indicator and power button.

2. SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Read all instructions before using this appliance.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning, putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken comb, as facial injury may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF", then remove plug from outlet.
- This appliance is designed for use with 100-240V AC power. Ensure the correct voltage is used.

3. PACKAGE CONTENTS

Carefully unpack your Moser 1901 Lithium Professional Hair Clipper and check that all items are present and in good condition. The package should contain:

- Moser 1901 Lithium Professional Hair Clipper
- 8 Slide-on Attachment Combs (3, 6, 9, 12, 16, 18, 22, 25 mm)
- Energy-efficient Plug-in Transformer (100-240V compatible)
- Cleaning Brush
- Blade Oil
- Scissors
- Pouch
- EU to US Plug Converter (if applicable for your region)



Image 2: Moser 1901 Lithium Pro LED packaging. This image illustrates the product's branding and highlights key features like "Lithium Pro LED" and "Made in Europe".

4. SETUP

4.1 Initial Charging

Before first use, fully charge your hair clipper. The Moser 1901 features a Lithium-Ion battery for optimal performance.

1. Ensure the clipper is switched off.
2. Connect the plug-in transformer to the charging port on the clipper.
3. Plug the transformer into a suitable electrical outlet (100-240V).

4. The LED charge indicator will illuminate, showing the charging status.
5. Allow approximately 3 hours for a full charge. A full charge provides up to 1.67 hours of operating time.
6. Once fully charged, disconnect the transformer.

4.2 Attaching Guide Combs

To achieve desired hair lengths, attach one of the 8 slide-on guide combs.

1. Select the desired comb length (3, 6, 9, 12, 16, 18, 22, or 25 mm).
2. Align the comb with the clipper blade and slide it firmly into place until it clicks.
3. To remove, gently pull the comb away from the blade.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

Press the power button located on the front of the clipper to turn it on or off.

5.2 Hair Cutting Tips

- For best results, use on clean, dry hair.
- Always start with a longer guide comb and gradually reduce the length if desired.
- Hold the clipper with the blade flat against the head and move it slowly against the direction of hair growth.
- Overlap strokes to ensure an even cut.
- Regularly clean hair from the blade during use to maintain cutting efficiency.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your Moser hair clipper.

6.1 Cleaning the Blades

1. After each use, turn off and unplug the clipper.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to brush away loose hairs from the blades.
4. For a more thorough cleaning, the blade set can be carefully removed (refer to specific instructions if provided with the product for blade removal, otherwise, only brush clean).

6.2 Oiling the Blades

To maintain cutting performance and prevent rust, oil the blades regularly.

1. After cleaning, apply 1-2 drops of the provided blade oil across the top of the blades.
2. Turn the clipper on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

6.3 Storage

Store the clipper in a dry, cool place, away from children. Use the provided pouch for protection.

7. TROUBLESHOOTING

If you encounter issues with your clipper, refer to the following common problems and solutions:

- **Clipper does not turn on:**
 - Ensure the battery is charged. Connect to the power adapter and charge for 3 hours.
 - Check if the power adapter is properly connected to both the clipper and the electrical outlet.
- **Clipper pulls hair or cuts poorly:**
 - The blades may be dull or dirty. Clean and oil the blades as described in the Maintenance section.
 - Ensure hair is clean and dry before cutting.
 - The guide comb might be incorrectly attached. Re-attach firmly.
- **Clipper gets hot during use:**
 - This can be normal during extended use. Allow the clipper to cool down.
 - Ensure blades are clean and oiled to reduce friction.

8. SPECIFICATIONS

Model Number	1901.0460
Device Type	Hair Clipper
Cutting Lengths	0.9 mm (without comb), 3, 6, 9, 12, 16, 18, 22, 25 mm (with combs)
Cutting Width	46 mm
Blade Material	Diamond-cut "Made in Germany" full metal cutter set
Battery Type	Lithium-Ion
Operating Time	Up to 1.67 hours (100 minutes)
Charging Time	Approximately 3 hours
Input Voltage	100-240 Volts AC
Cable Length	1.9 m
Dimensions (Product)	7.72 x 9.92 x 3.15 inches
Weight	0.68 Kilograms (1.5 Pounds)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Moser website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact the manufacturer's customer service department.

