

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux Precision Brushroll Clean Upright Vacuum EL8802A User Manual](#)

Electrolux EL8802A

Electrolux Precision Brushroll Clean Upright Vacuum

Model: EL8802A

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Always unplug the vacuum cleaner from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PRODUCT OVERVIEW

The Electrolux Precision Brushroll Clean Upright Vacuum EL8802A is designed for effective cleaning

across various floor types. It features a multi-cyclonic system for consistent suction and Brushroll Clean Technology to simplify brushroll maintenance.





Figure 1: Full view of the Electrolux Precision Upright Vacuum EL8802A, showcasing its design and main components.

Key Features:

- **Multi-Cyclonic System:** Maintains consistent suction power.
- **Brushroll Clean Technology:** Removes tangled hair from the brushroll with a simple press.
- **One-Touch Quick-Release Wand:** Provides extended reach for high and low areas.
- **Deluxe Stretch Hose:** Offers 12 feet of reach for versatile cleaning.
- **3-in-1 Versa Tool:** Designed for cleaning corners, crevices, and stairs.
- **Adjustable Height Settings:** Suitable for various floor types, from bare floors to carpets.
- **Sealed HEPA Filtration:** Captures fine dust and allergens.

ASSEMBLY

Your Electrolux Precision Upright Vacuum comes partially assembled. Follow these steps to complete the assembly:

1. **Attach the Handle:** Insert the handle assembly into the main vacuum body until it clicks securely into place. Ensure the handle is firmly seated.
2. **Connect the Hose:** Attach the deluxe stretch hose to the hose inlet port on the main body. Twist or push until it locks.
3. **Store Accessories:** Place the 3-in-1 Versa Tool and any other included accessories into their designated storage slots on the vacuum.

Ensure all connections are secure before operating the vacuum cleaner.

OPERATING INSTRUCTIONS

Powering On and Off

- Plug the power cord into a suitable electrical outlet.
- Press the power button located on the main body or handle to turn the vacuum ON or OFF.

Adjusting Floor Type Settings

The vacuum features adjustable height settings for optimal cleaning on different surfaces.



Figure 2: The vacuum head positioned on a transition between a hard floor and carpet, illustrating its versatility.

- Locate the floor type selector on the vacuum head.
- Select the appropriate setting:
 - **Hard Floor:** For bare floors, tile, and hardwood. The brushroll may stop or spin at a lower speed.
 - **Low Pile Carpet:** For short-pile carpets and rugs.
 - **High Pile Carpet:** For thicker carpets and rugs.

Using the Quick-Release Wand and Attachments

The quick-release wand and deluxe stretch hose allow for extended reach cleaning.



Figure 3: A user cleaning stairs with the vacuum's hose and wand attachment, demonstrating its extended reach capability.

1. Press the quick-release button on the handle to detach the wand.
2. Attach the desired 3-in-1 Versa Tool or other accessory to the end of the wand or directly to the hose.
3. Use the tool to clean upholstery, crevices, corners, or stairs.
4. When finished, remove the attachment and reinsert the wand into the vacuum body until it clicks.

MAINTENANCE

Emptying the Dust Cup

Empty the dust cup after each use or when the "Full" indicator is visible to maintain optimal suction.

1. Ensure the vacuum is unplugged.
2. Press the dust cup release button and lift the dust cup away from the vacuum body.
3. Position the dust cup over a trash receptacle.
4. Press the bottom release latch to open the dust cup and empty its contents.
5. Close the dust cup bottom securely and reattach the dust cup to the vacuum until it clicks.

Brushroll Clean Technology

The exclusive Brushroll Clean Technology removes tangled hair from the brushroll automatically.



Figure 4: A foot activating the Brushroll Clean pedal, demonstrating the ease of maintaining the brushroll.

1. Ensure the vacuum is plugged in and powered ON.
2. With the vacuum in the upright position, gently press the Brushroll Clean pedal (usually located near the brushroll housing) with your foot.
3. Hold the pedal down for approximately 5-10 seconds. The brushroll will engage a cleaning mechanism.
4. Release the pedal. Tangled hair should now be cut and deposited into the dust cup.

Note: For stubborn tangles, manual cleaning may still be required. Always unplug the vacuum before manual brushroll inspection or cleaning.



Figure 5: An underside view of the vacuum head, showing the brushrolls and their housing, important for maintenance.

Cleaning Filters

Regularly clean the filters to maintain suction performance and air quality. The vacuum uses a washable HEPA filter.

1. Ensure the vacuum is unplugged.
2. Remove the dust cup. The primary filter (often a cyclonic cone filter) is usually located inside or directly below the dust cup.
3. Remove the HEPA filter, typically located in a separate compartment, often at the back or side of the vacuum. Refer to your specific model's diagram for exact location.
4. Tap loose dirt from filters over a trash can.
5. Rinse washable filters under cool running water until the water runs clear. Do not use detergent.

6. Allow filters to air dry completely for at least 24 hours before reinserting. Do not use a dryer or other heating methods.
7. Reinstall all filters and the dust cup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum will not turn on.	Not plugged in; circuit breaker tripped; power switch off.	Check plug; reset circuit breaker; ensure power switch is ON.
Loss of suction.	Dust cup full; filters clogged; hose or nozzle clogged; brushroll jammed.	Empty dust cup; clean/replace filters; check and clear hose/nozzle for blockages; clear brushroll.
Brushroll not spinning.	Brushroll jammed with debris; belt broken; floor setting incorrect.	Unplug and clear brushroll; check belt (contact service if broken); adjust floor setting to carpet mode.
Unusual noise.	Blockage in hose/nozzle; foreign object in brushroll; motor issue.	Check and clear blockages; unplug and remove foreign objects from brushroll; if noise persists, contact customer support.

SPECIFICATIONS

- Model:** EL8802A
- Brand:** Electrolux
- Type:** Corded Upright Vacuum
- Filter Type:** Cyclonic, Sealed HEPA
- Dust Cup Capacity:** 1.14 Liters
- Hose Length:** 12 Feet
- Power Source:** Corded Electric
- Noise Level:** 79 Decibels
- Product Dimensions:** 13 x 12.75 x 42.5 inches (L x W x H)
- Item Weight:** 16 pounds
- Recommended Surfaces:** Carpet, Hard Floor, Tile Floor, Hardwood, Rug, Bare Floor, Sofa, Upholstery

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Electrolux website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.electrolux.com/support

Customer Service: Refer to your regional Electrolux contact information for phone support.

© 2024 Electrolux. All rights reserved.