

NEXTORCH Saint Torch 10

NEXTORCH Saint Torch 10 User Manual

Model: Saint Torch 10

INTRODUCTION

The NEXTORCH Saint Torch 10 is an ultra-bright rechargeable search light designed for high performance and extended use. It features a single Cree XHP70 LED, delivering a powerful beam of up to 3200 lumens. Equipped with a 10400mAh high-capacity rechargeable battery pack, it provides up to 120 hours of light. The 16.8V AC direct quick charge design allows for a full charge in approximately 4 hours. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Saint Torch 10.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using this product. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- Do not look directly into the light beam. The high intensity light can cause temporary vision impairment or permanent eye damage.
- Keep out of reach of children.
- Do not disassemble the flashlight or battery pack. Refer all servicing to qualified personnel.
- Use only the provided charger and battery pack. Using unauthorized accessories may damage the product and void the warranty.
- Avoid exposing the flashlight to extreme temperatures or direct sunlight for prolonged periods.
- Ensure the charging port is clean and dry before connecting the charger.

PACKAGE CONTENTS



Image: The Saint Torch 10 flashlight, its charger, and a sling, neatly organized within its durable protective carrying case.

Verify that all items are present and in good condition upon opening the package:

- NEXTORCH Saint Torch 10 Flashlight
- 10400mAh Rechargeable Battery Pack (pre-installed or separate)
- AC Direct Quick Charger
- Shoulder Sling
- Protective Polymer Case
- User Manual (this document)

PRODUCT OVERVIEW



Image: A detailed view of the NEXTORCH Saint Torch 10 flashlight, highlighting its large reflector and textured body. A "HOT" warning symbol is visible near the head.

The Saint Torch 10 features a robust design with intuitive controls. Key components include:

- **Head/Reflector:** Houses the Cree XHP70 LED and proprietary scale reflection system for optimal beam focus.
- **Control Button:** A single button for power on/off and mode selection.
- **LED Battery Charge Indicator:** Four small LEDs indicating remaining battery power.
- **Body:** Durable aluminum alloy construction with anti-slip knurling.
- **Charging Port:** Located on the body for direct AC charging.

- **Tail Cap:** Secures the battery pack.



Image: A close-up view of the flashlight's side, showing the rectangular control button and the four small circular LED battery indicators.

SETUP

1. Battery Installation (if not pre-installed)



Image: The Saint Torch 10 flashlight with its main body separated from the battery compartment, revealing the internal connections.

1. Unscrew the tail cap or the main body section of the flashlight.
2. Insert the 10400mAh rechargeable battery pack with the positive (+) terminal facing towards the head of the flashlight.
3. Carefully screw the tail cap or body section back on, ensuring it is fully tightened to maintain water resistance.

2. Initial Charging



Image: The Saint Torch 10 flashlight lying next to its AC charger, with the charging cable connected to the flashlight's charging port.

1. Locate the charging port on the flashlight body.
2. Connect the AC direct quick charger to the flashlight's charging port.
3. Plug the charger into a standard AC power outlet (16.8V).
4. The LED battery indicators will illuminate to show charging progress. A full charge takes approximately 4 hours.
5. Once fully charged, disconnect the charger from the flashlight and the power outlet.

OPERATING INSTRUCTIONS

Power On/Off

- Press and hold the control button for approximately 1 second to turn the flashlight ON or OFF.

Mode Selection

With the flashlight ON, short press the control button to cycle through different brightness modes (e.g., Low, Medium, High, Turbo). The sequence may vary based on the specific firmware version.

Special Modes (Strobe/SOS)

To access special modes like Strobe or SOS, typically a quick double-press or triple-press of the control button is required. Refer to the quick start guide included with your product for exact activation sequences.

Battery Indicator

The four LED indicators on the body provide real-time battery status:

- **4 LEDs:** 75-100% battery
- **3 LEDs:** 50-75% battery
- **2 LEDs:** 25-50% battery
- **1 LED:** Below 25% battery, recharge soon.

MAINTENANCE

- **Cleaning:** Wipe the flashlight body with a soft, damp cloth. Do not use abrasive cleaners or solvents. Keep the lens clean for optimal light output.
- **O-rings:** Periodically inspect and lubricate the O-rings with silicone grease to maintain water resistance. Replace if damaged.
- **Battery Care:** For long-term storage, charge the battery pack to approximately 50% and store in a cool, dry place. Recharge every 3-6 months to prevent deep discharge.
- **Storage:** Store the flashlight and its accessories in the provided protective polymer case when not in use to prevent damage.



Image: The closed, black, rugged protective polymer case with the NEXTORCH logo embossed on the front, designed for storing the Saint Torch 10.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Flashlight does not turn on.	Low or depleted battery. Battery not properly installed. Loose connections.	Recharge the battery pack. Ensure battery is inserted correctly. Tighten all sections of the flashlight body.

Problem	Possible Cause	Solution
Light output is dim or flickers.	Low battery. Dirty lens. Loose connections.	Recharge the battery pack. Clean the lens with a soft cloth. Tighten all sections of the flashlight body.
Flashlight gets hot during use.	Normal operation at high output modes.	This is normal for high-lumen flashlights. Reduce brightness mode if discomfort occurs. Ensure adequate ventilation.
Charger indicator not working.	Charger not properly connected. Power outlet issue.	Ensure charger is fully plugged into flashlight and wall outlet. Try a different power outlet.

SPECIFICATIONS

Feature	Detail
Model	Saint Torch 10
Light Source	Cree XHP70 LED
Max Output	3200 Lumens
Battery	10400mAh Rechargeable Battery Pack
Max Runtime	120 hours
Charging Time	Approx. 4 hours (16.8V AC Direct Quick Charge)
Dimensions	33.02 x 12.7 x 24.13 cm (Product Dimensions as packaged)
Weight	1.86 kg
Included Components	Tactical Flashlight, Charger, Sling, Protective Case

WARRANTY AND SUPPORT

NEXTORCH products are manufactured to high quality standards. For warranty information, product registration, or technical support, please refer to the official NEXTORCH website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please visit:www.nextorch.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question