

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Magimix](#) /

> [Magimix 3100 6 mm Slicing Disc Instruction Manual](#)

## Magimix 881121-3100

# Magimix 3100 6 mm Slicing Disc Instruction Manual

Model: 881121-3100

## INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Magimix 3100 6 mm Slicing Disc. This accessory is designed exclusively for use with the Magimix 3100 food processor to prepare various ingredients with precision. Please read this manual thoroughly before installation and operation.

## SAFETY INSTRUCTIONS

- **Always unplug** the Magimix 3100 food processor from the power outlet before installing, removing, or cleaning the slicing disc.
- The slicing disc features a sharp stainless steel blade. **Handle with extreme care** to prevent injury. Always hold the disc by its plastic hub.
- Ensure the disc is correctly seated on the motor shaft before operating the food processor.
- Never attempt to slice ingredients by hand or push them into the feed tube with your fingers. Always use the provided pusher.
- Keep hands and utensils away from the moving blade during operation.
- Do not use the disc if it is damaged or bent. Contact customer support for a replacement.
- This disc is intended for food preparation only. Do not use it for non-food items.

## SETUP

The Magimix 3100 6 mm Slicing Disc is designed specifically for the Magimix 3100 food processor.

1. Ensure your Magimix 3100 food processor is unplugged and the main bowl is securely in place on the motor base.
2. Carefully place the 6 mm slicing disc onto the motor shaft inside the main bowl. Ensure it sits flat and securely.
3. Place the lid onto the main bowl and lock it into position according to your food processor's

instructions.

4. The food processor is now ready for operation.



Image: The Magimix 3100 6 mm Slicing Disc. This image shows the circular disc with a central hub and a sharp, curved blade designed for slicing. The disc is made of stainless steel with a plastic hub.

## OPERATING INSTRUCTIONS

---

This 6 mm slicing disc is ideal for creating thick or large slices of various ingredients.

1. After setting up the disc as described above, plug in your Magimix 3100 food processor.
2. Prepare your ingredients by peeling them if necessary and cutting them into pieces that fit comfortably into the feed tube.
3. Turn on the food processor.
4. Carefully feed the ingredients into the feed tube. Use the pusher to guide the ingredients down towards the rotating blade. **Never use your fingers.**
5. The sliced ingredients will collect in the main bowl.
6. Once slicing is complete, turn off and unplug the food processor before removing the lid and disc.

**Recommended uses:** This disc is excellent for preparing vegetables for stews, such as carrots, potatoes, and celery. It is also suitable for slicing peppers, courgettes (zucchini), kiwi, beetroot, leek, melons, and aubergines (eggplant).

## MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance will ensure the longevity and performance of your slicing disc.

1. **Always unplug** the food processor before cleaning.
2. Carefully remove the slicing disc from the motor shaft, holding it by the plastic hub.

3. Wash the disc immediately after use to prevent food residue from drying on the blade.
4. The disc can be washed by hand using warm, soapy water and a soft brush to remove any food particles. Exercise extreme caution around the sharp blade.
5. Rinse thoroughly under running water.
6. Dry the disc completely with a soft cloth before storing to prevent water spots or corrosion.
7. Store the disc in a safe place where the blade is protected and cannot cause accidental injury.

## TROUBLESHOOTING

---

- **Disc does not fit:** Ensure you are using the Magimix 3100 food processor. This disc is not compatible with other models. Check for any obstructions on the motor shaft or inside the disc's hub.
- **Poor slicing results:** Ensure ingredients are firm and properly prepared (e.g., not overripe, cut to fit feed tube). The disc blade may be dull if slicing quality consistently declines; consider replacement.
- **Food processor does not start:** Check that the lid is correctly locked into place and the food processor is plugged in. The disc itself does not affect the motor's operation unless incorrectly installed and preventing the lid from closing.

## SPECIFICATIONS

---

- **Brand:** Magimix
- **Model Number:** 881121-3100
- **Disc Size:** 6 mm (for thick/large slices)
- **Blade Material:** Stainless Steel
- **Compatibility:** Magimix 3100 Food Processor only

## WARRANTY AND SUPPORT

---

For information regarding warranty, spare parts, or customer support, please refer to the documentation provided with your Magimix 3100 food processor or visit the official Magimix website. Keep your purchase receipt as proof of purchase.