

BLACK+DECKER JE2400BD-T

BLACK+DECKER 400-Watt Fruit and Vegetable Juice Extractor

Model: JE2400BD-T

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your BLACK+DECKER 400-Watt Fruit and Vegetable Juice Extractor. Please read all instructions thoroughly before first use and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure cover is properly locked in place before appliance is turned on.
- Do not open cover while the juicer is operating.

- Always make sure the juicer is unplugged before assembling, disassembling, or cleaning.

PARTS AND FEATURES

- **Main Unit:** The core of the juicer, housing the 400-watt motor and controls.
- **Pulp Container:** An integrated 28 oz. container designed to collect pulp, reducing countertop space.
- **Stainless Steel Cutter and Strainer:** The durable component responsible for extracting juice from fruits and vegetables.
- **Clear Cover:** Transparent lid that secures the internal components during operation.
- **Fruit and Vegetable Pusher:** Used to guide produce into the feeding chute for optimal juice extraction.
- **Intuitive ON/OFF Switch:** Simple control for starting and stopping the juicer.



Image: The complete BLACK+DECKER 400-Watt Fruit and Vegetable Juice Extractor, showcasing its compact black

design with clear components.



INTUITIVE ON/OFF SWITCH

Image: A close-up view of the intuitive ON/OFF switch located on the front of the juicer's base.



DURABLE STAINLESS STEEL CUTTER AND STRAINER

Image: A detailed view of the durable stainless steel cutter and strainer, highlighting its sharp blades and fine mesh.



INCLUDES

removable pulp container, stainless steel cutter/strainer, clear cover and fruit & vegetable pusher

Image: All included components of the juicer laid out, including the removable pulp container, stainless steel cutter/strainer, clear cover, and fruit and vegetable pusher.

SETUP

Follow these steps to assemble your juicer before use:

1. Place the motor base on a clean, dry, and stable surface.
2. Ensure the integrated pulp container is correctly seated within the motor base.
3. Carefully insert the stainless steel cutter and strainer into the motor base, ensuring it is firmly in place.
4. Place the clear cover onto the assembled base, aligning the locking tabs.
5. Secure the cover by engaging the locking clips on both sides of the motor base. The unit will not operate unless the cover is properly locked.
6. Position a juice collection glass or container under the juice spout.

OPERATING INSTRUCTIONS

To operate your BLACK+DECKER Juice Extractor:

1. Prepare your fruits and vegetables by washing them thoroughly. For larger items, cut them into pieces that fit comfortably into the feeding chute. Most fruits and vegetables do not require peeling or coring, but remove large seeds or pits.
2. Ensure the juicer is properly assembled and a glass is placed under the spout.
3. Plug the power cord into a standard electrical outlet.
4. Turn the juicer ON using the intuitive ON/OFF switch.
5. Gradually feed the prepared fruits and vegetables into the feeding chute.
6. Use the fruit and vegetable pusher to gently guide the produce down the chute. Do not force the produce, as this can strain the motor.
7. Once juicing is complete, turn the juicer OFF and unplug it from the outlet.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your juicer. All removable parts are dishwasher-safe for convenience.



Image: The disassembled juicer parts, illustrating which components are safe for dishwasher cleaning.

1. Always unplug the juicer from the power outlet before cleaning or disassembling.

2. Unlock the cover and carefully remove it.
3. Remove the stainless steel cutter and strainer. Be cautious as the blades are sharp.
4. Empty the pulp from the integrated pulp container.
5. Rinse all removable parts (cover, cutter/strainer, pulp container, pusher) under running water to remove any large food particles.
6. Wash these parts in warm, soapy water or place them on the top rack of your dishwasher.
7. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
8. Dry all parts thoroughly before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; cover not properly locked.	Ensure power cord is securely plugged in. Check that the cover is fully locked into place.
Poor juice extraction or excessive pulp.	Strainer/cutter is clogged; produce fed too quickly.	Clean the strainer/cutter thoroughly. Feed produce slowly and evenly.
Unit vibrates excessively or makes unusual noise.	Strainer/cutter is not properly seated.	Turn off and unplug the unit. Re-seat the strainer/cutter firmly.

SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Name:** JE2400BD-T
- **Color:** Black
- **Maximum Power:** 400 Watts
- **Capacity:** 2 Liters (Pulp Container)
- **Product Dimensions:** 8"D x 10"W x 12.75"H
- **Item Weight:** 5 pounds
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Blade Material:** Stainless Steel
- **Special Feature:** Dishwasher Safe (removable parts)

WARRANTY AND SUPPORT

For warranty information, product registration, or further assistance, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt for proof of purchase.