

[Manuals.plus](#) /

> [Sekonda](#) /

> Sekonda Women's 37mm Multi-dial Quartz Watch Model 2158 Instruction Manual

Sekonda 2158

Sekonda Women's 37mm Multi-dial Quartz Watch Model 2158 Instruction Manual

Model: 2158

INTRODUCTION

This manual provides detailed instructions for the Sekonda Women's 37mm Multi-dial Quartz Watch, Model 2158. This timepiece features a round rose gold-plated stone-set case, a grey sunray dial with day/date display and a 24-hour readout. It is fitted with a rose gold-plated stainless steel bracelet and is water-resistant up to 50 meters. Please read this manual thoroughly to ensure proper use and care of your watch.

PACKAGE CONTENTS

Upon opening your Sekonda watch package, you should find the following items:

- Sekonda Women's 37mm Multi-dial Quartz Watch (Model 2158)
- Presentation Box
- Watch Cushion
- Instruction Guide
- 2-Year Guarantee Information



Watch Used In Box
An Example Only

Image: The Sekonda watch, Model 2158, displayed within its black presentation box, resting on a watch cushion.



Image: An empty Sekonda black presentation box with a watch cushion inside.



Image: The Sekonda Instruction Guide and 2 Year Guarantee booklet, along with a bracelet gauge, as included in the package.

SETUP

Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into its normal position to start the watch.

Setting the Date and Day

Your watch features a multi-dial display for day and date. To set these:

1. Pull the crown out to the first click position.
2. Turn the crown in one direction (usually clockwise) to adjust the date.
3. Turn the crown in the opposite direction (usually counter-clockwise) to adjust the day.
4. Once the date and day are set, push the crown back into its normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.

OPERATING INSTRUCTIONS

Water Resistance

This Sekonda watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for everyday use, including showering and swimming in shallow water. However, it is **not** suitable for diving or snorkeling. Always ensure the crown is fully pushed in before exposing the watch to water.

Important: Do not operate the crown or push buttons while the watch is wet or submerged in water.

Multi-dial Functions

The watch features a multi-dial display that includes:

- **Day Display:** Indicates the current day of the week.
- **Date Display:** Shows the current day of the month.
- **24-Hour Readout:** Provides a 24-hour format time display, useful for distinguishing AM/PM.

These functions operate automatically once the time, day, and date are correctly set.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and bracelet regularly with a soft, dry cloth.
- For stainless steel bracelets, a slightly damp cloth can be used, followed by a dry cloth.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

Battery Replacement

Your Sekonda watch is powered by a quartz movement and requires one unknown type battery (included). When the watch stops or the second hand begins to skip, it indicates that the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

Storage

When not wearing your watch, store it in its presentation box or a soft pouch to protect it from dust and scratches. Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Depleted battery.	Replace the battery. It is recommended to have this done by a professional.
Time is incorrect.	Crown is not fully pushed in, or time needs to be reset.	Ensure the crown is fully pushed in. Reset the time as per the "Setting the Time" instructions.
Date/Day is incorrect.	Date/Day needs to be reset.	Reset the date and day as per the "Setting the Date and Day" instructions.

Problem	Possible Cause	Solution
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Seek professional inspection immediately to prevent damage to the movement.

SPECIFICATIONS

- **Model Number:** 2158
- **Brand:** Sekonda
- **Display Type:** Multi-dial
- **Movement:** Quartz
- **Case Material:** Rose Gold-plated, Stone-set
- **Case Diameter:** 37mm
- **Case Thickness:** 11mm
- **Band Material:** Rose Gold-plated Stainless Steel
- **Band Width:** 19mm
- **Dial Color:** Grey Sunray
- **Special Features:** Day/Date display, 24-hour readout, Water Resistant
- **Water Resistance Depth:** 50 Meters (5 ATM)
- **Clasp Type:** Adjustable Clasp
- **Dial Window Material Type:** Mineral Glass
- **Item Weight:** 82 grams
- **Battery:** 1 Unknown battery (included)

WARRANTY AND SUPPORT

Your Sekonda Women's 37mm Multi-dial Quartz Watch Model 2158 comes with a **2-Year Manufacturer's Guarantee**.

This warranty covers manufacturing defects under normal use from the date of purchase.

The guarantee does not cover:

- Battery life
- Normal wear and tear (e.g., scratches on case, glass, or strap)
- Damage caused by improper use, accidents, or unauthorized repairs
- Water damage if the watch was not used according to its water resistance specifications (e.g., crown not pushed in)

For warranty claims or technical support, please refer to the contact information provided in your included Guarantee booklet or visit the official Sekonda website.

For more information about Sekonda products, you can visit their brand store: [Sekonda Brand Store](#).

