



Manuals.plus /

› Memorex /

› Memorex MR4240 Portable AM/FM Pocket Radio User Manual

## Memorex MR4240

# Memorex MR4240 Portable AM/FM Pocket Radio User Manual

Model: MR4240

## INTRODUCTION

---

The Memorex MR4240 is a compact and portable AM/FM radio designed for personal listening. Its lightweight design, integrated belt clip, and included earbuds make it suitable for on-the-go use. This manual provides essential information for the proper setup, operation, and maintenance of your radio.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- 1 x Memorex MR4240 AM/FM Radio
- 1 x Pair of Earbuds
- 1 x Belt Clip (pre-attached or included separately)

## PRODUCT FEATURES

---

- AM/FM Radio Tuner
- Dynamic Bass System (DBS) for enhanced audio
- 3.5mm Headphone Jack
- Compact and Portable Design
- Integrated Belt Clip

## CONTROLS AND COMPONENTS

---



Image: Front view of the Memorex MR4240 Portable AM/FM Pocket Radio, showing the tuning dial, volume control, and headphone jack.

1. **Tuning Dial:** Used to select AM or FM radio frequencies.
2. **Volume Control:** Adjusts the audio output level.
3. **AM/FM Band Selector:** Switch to select between AM and FM radio bands.
4. **Headphone Jack (3.5mm):** Connects the included earbuds or other compatible headphones. This also functions as the antenna for FM reception.
5. **DBS (Dynamic Bass System) Switch:** Activates or deactivates bass enhancement.
6. **Battery Compartment:** Located on the back, for AAA batteries.
7. **Belt Clip:** For attaching the radio to clothing or a belt.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the radio.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

**Note:** Always use fresh batteries and remove them if the radio will not be used for an extended period.

## 2. Connecting Earbuds

Insert the 3.5mm plug of the included earbuds (or your preferred headphones) into the headphone jack on the radio. The earbuds also serve as the FM antenna, so they must be connected for optimal FM reception.

# OPERATING INSTRUCTIONS

---

## 1. Power On/Off and Volume Control

- To turn the radio on, rotate the Volume Control dial clockwise until you hear a click.
- Continue rotating the dial to adjust the volume to your desired level.
- To turn the radio off, rotate the Volume Control dial counter-clockwise until you hear a click and the sound ceases.

## 2. Selecting a Radio Band (AM/FM)

Locate the AM/FM band selector switch on the radio and slide it to your desired band (AM or FM).

## 3. Tuning to a Station

- Ensure your earbuds are connected for optimal reception.
- Slowly rotate the Tuning Dial until you hear a clear broadcast.
- For AM reception, the radio has an internal antenna. For FM reception, the earbud cable acts as the antenna; try adjusting its position for better signal.

## 4. Dynamic Bass System (DBS)

Slide the DBS switch to the 'ON' position to activate the dynamic bass enhancement feature for a richer audio experience. Slide it to 'OFF' to disable it.

## 5. Using the Belt Clip

The integrated belt clip allows you to conveniently attach the radio to your belt, pocket, or clothing for hands-free portability.

# MAINTENANCE

---

## Cleaning

Wipe the radio with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.

## Battery Replacement

Replace batteries when the sound becomes distorted or the radio fails to power on. Always replace both AAA batteries at the same time.

## Storage

When not in use for extended periods, store the radio in a cool, dry place and remove the batteries to prevent leakage.

# TROUBLESHOOTING

---

- **No Power:**  
Ensure batteries are inserted correctly with proper polarity. Check if batteries are depleted and replace them if necessary.

- **Poor Reception/Static:**

For FM, ensure earbuds are fully plugged in and try adjusting their position as they act as the antenna. For both AM and FM, try moving to a different location, away from potential interference sources like electronic devices or large metal objects. Adjust the tuning dial slowly and precisely.

- **No Sound:**

Check if the volume is turned up. Ensure earbuds are securely connected. Verify that the radio is powered on.

- **Tuning Dial Slips:**

The analog tuning dial may be sensitive. Handle with care to maintain your desired station.

## SPECIFICATIONS

<b>Model Number</b>	MR4240
<b>Brand</b>	Memorex
<b>Tuner Type</b>	AM/FM Analog
<b>Power Source</b>	2 x AAA Batteries
<b>Audio Output</b>	3.5mm Headphone Jack
<b>Special Features</b>	Dynamic Bass System (DBS), Portable, Belt Clip
<b>Item Weight</b>	0.12 Pounds (approximately 54 grams)
<b>Manufacturer</b>	MEM-CE LLC

## WARRANTY INFORMATION

This Memorex MR4240 Portable AM/FM Pocket Radio comes with a **90-day limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair. Please retain your proof of purchase for warranty claims.

## SUPPORT

For further assistance or inquiries regarding your Memorex MR4240 radio, please refer to the manufacturer's official website or contact their customer support services. Contact information can typically be found on the product packaging or the manufacturer's website.