

- [Manuals.plus](#) /
- > [Craftmade](#) /
  - > Craftmade BSCS-BN Lighted Doorbell Push Button User Manual

Craftmade BSCS-BN

# Craftmade BSCS-BN Lighted Doorbell Push Button User Manual

Model: BSCS-BN | Brand: Craftmade

PRODUCT OVERVIEW

The Craftmade BSCS-BN is a contemporary surface mount doorbell push button featuring an integrated LED light. Designed for outdoor use, this brushed nickel button provides a modern aesthetic and reliable functionality for your home's entrance.





Image: Front view of the Craftmade BSCS-BN Lighted Doorbell Push Button in brushed nickel finish.

## Safety Information

---

- This product operates on **120 Volts**. Ensure power is disconnected at the circuit breaker before installation or maintenance to prevent electrical shock.
- Installation should be performed by a qualified individual if you are unsure about electrical wiring.
- This doorbell push button is UL Approved for **OUTDOOR Locations** and is ADA Approved.
- Always check local laws and building codes before installing electrical products.

## Package Contents

---

The package typically includes:

- One (1) Craftmade BSCS-BN Surface Mount Contemporary Lighted Push Button in Brushed Nickel.
- Mounting hardware (screws).

## INSTALLATION GUIDE (SETUP)

Follow these steps for proper installation of your Craftmade doorbell push button:

1. **Turn Off Power:** Locate the circuit breaker controlling your doorbell circuit and turn off the power. Verify that the power is off using a voltage tester.
2. **Remove Old Doorbell (if applicable):** Carefully remove your existing doorbell button. Disconnect the wires.
3. **Prepare Mounting Surface:** This is a surface mount button. Ensure the mounting surface is clean and flat. The screw holes distance is approximately 3.38 inches.
4. **Connect Wiring:** Connect the existing doorbell wires to the terminals on the back of the Craftmade BSCS-BN button. Ensure connections are secure. The LED light is integrated and will illuminate when power is restored.
5. **Mount the Button:** Position the new doorbell button over the wires and align the screw holes. Secure the button to the surface using the provided mounting screws. Do not overtighten.
6. **Restore Power:** Turn the power back on at the circuit breaker.
7. **Test Functionality:** Press the doorbell button to ensure it activates your chime unit. The LED light should illuminate.

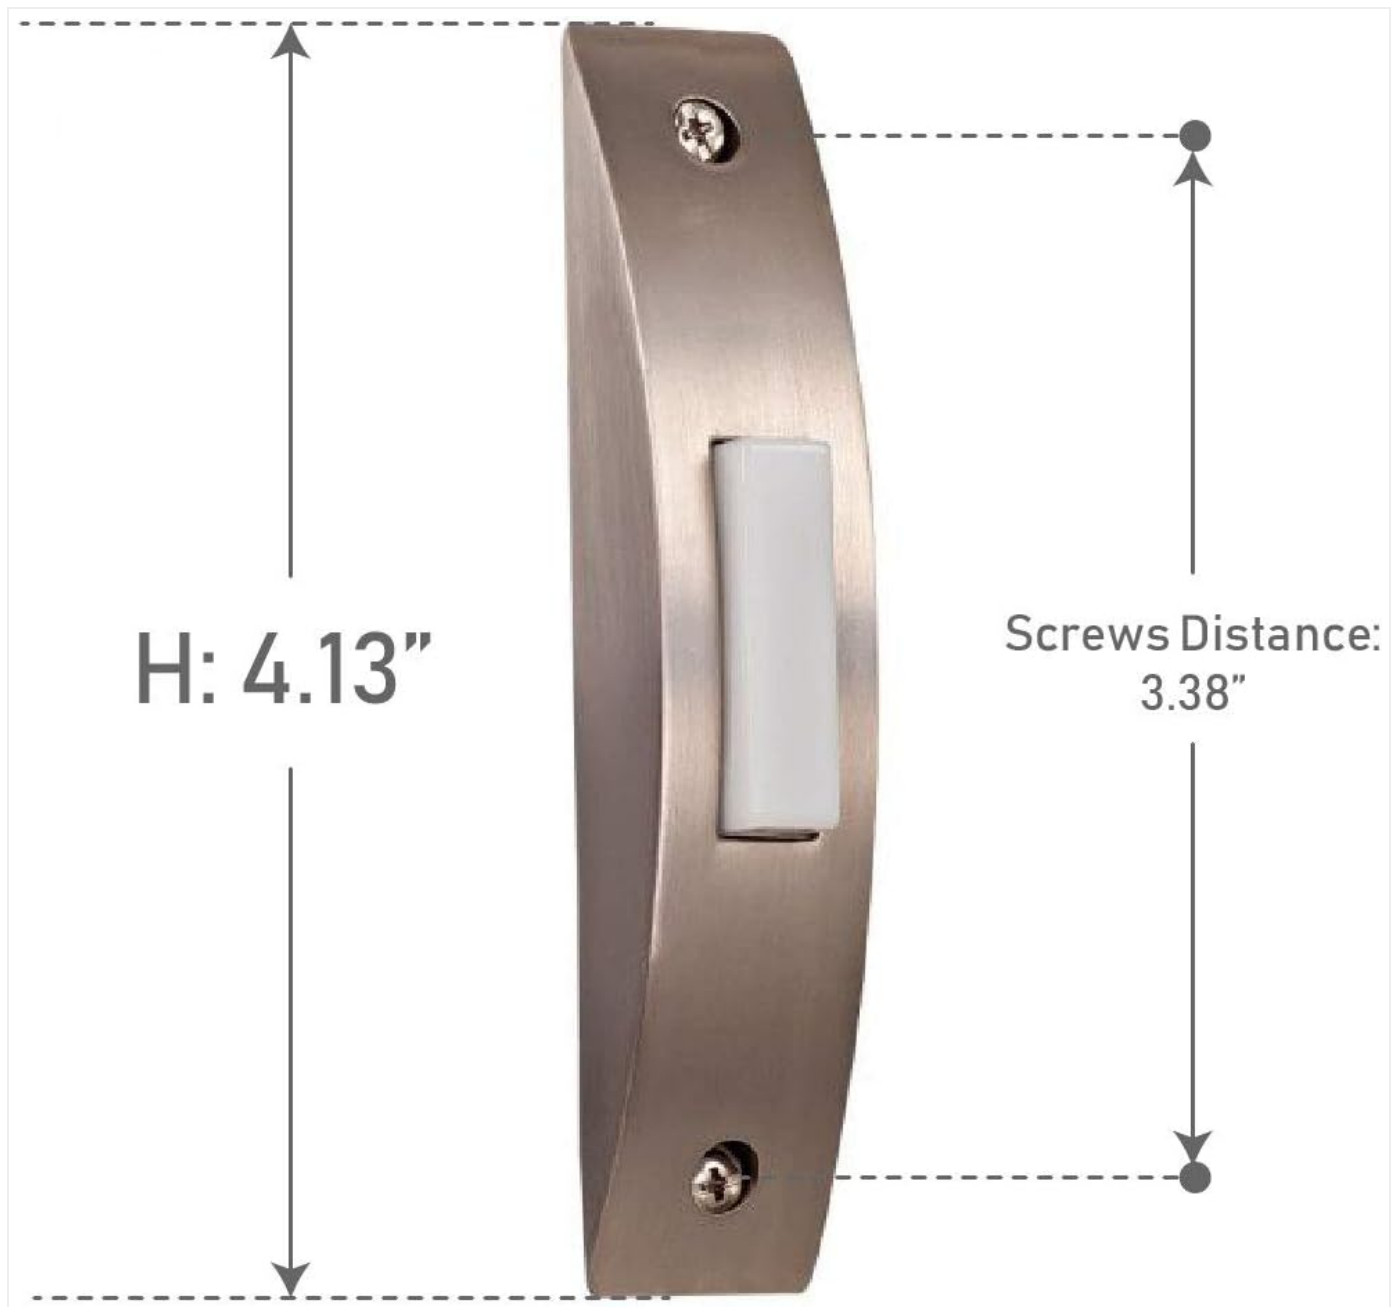


Image: Dimensions of the Craftmade BSCS-BN Doorbell Push Button, showing height (4.13") and screw distance (3.38").

## OPERATION

---

The Craftmade BSCS-BN doorbell push button is designed for simple operation:

- When power is supplied to the doorbell circuit, the integrated LED light on the push button will illuminate, providing visibility in low-light conditions.
- To activate your home's chime, simply press the push button firmly.

## MAINTENANCE

---

To ensure the longevity and appearance of your doorbell push button:

- Clean the brushed nickel finish periodically with a soft, damp cloth. Avoid abrasive cleaners or solvents, as these can damage the finish.
- Inspect the button and wiring connections annually for any signs of wear or corrosion, especially in outdoor environments.
- Ensure the area around the button is clear of debris or obstructions that might impede its operation.

## TROUBLESHOOTING

---

If you encounter issues with your doorbell push button, consider the following:

- **Doorbell Not Chiming:**
  - Check if the power is on at the circuit breaker.
  - Verify that the wires are securely connected to the doorbell button terminals and the chime unit.
  - Ensure your chime unit is functioning correctly.
- **LED Light Not Illuminating:**
  - Confirm power is supplied to the circuit.
  - Check for loose wiring connections at the button.
  - The LED is designed for long life, but in rare cases, it may fail. If all connections are secure and power is present, and the chime works but the LED does not, contact customer support.
- **Button Feels Stuck or Difficult to Press:**
  - Ensure no debris is lodged around the button mechanism.
  - Check if the mounting screws are overtightened, which can sometimes cause the button to bind. Loosen slightly if necessary.

## SPECIFICATIONS

---

|                        |                                         |
|------------------------|-----------------------------------------|
| Model Number           | BSCS-BN                                 |
| Brand                  | Craftmade                               |
| Dimensions (H x W x D) | 4.13 inches x 0.75 inches x 0.75 inches |
| Item Weight            | 2.39 ounces                             |

|                      |                                                 |
|----------------------|-------------------------------------------------|
| Finish               | Brushed Nickel                                  |
| Light Type           | LED                                             |
| Mounting Type        | Surface Mount                                   |
| Screw Holes Distance | 3.38 inches                                     |
| Voltage              | 120 Volts                                       |
| Power Source         | Corded-Electric                                 |
| Approvals            | UL Approved for Outdoor Locations, ADA Approved |

## WARRANTY AND SUPPORT

Craftmade provides the following warranty for this product:

- **Replacement Parts Policy:** All products purchased have a **30-day replacement parts policy** to ensure a fully working item.
- **Product Warranty:** All products are covered under a **1-year warranty** when purchased on Amazon. The warranty period begins on the day the product is originally shipped.
- **Coverage:** The warranty covers all items and conditions identified in the original manufacturer's warranty.
- **Exclusions:** Some items specifically not covered by the warranty include loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

For technical support or warranty claims, please contact Craftmade customer service. Refer to your purchase documentation for specific contact details or visit the official Craftmade website.

© 2023 Craftmade. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B01DG9W1KS>

More documents and user manuals: <https://manuals.plus/>