

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Audiovox](#) /

› [Audiovox RCR3273R 3-Device Universal Remote Control User Manual](#)

## Audiovox RCR3273R

# Audiovox RCR3273R 3-Device Universal Remote Control User Manual

### INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Audiovox RCR3273R 3-Device Universal Remote Control. Please read this guide thoroughly to ensure proper use and to maximize the functionality of your remote control.

### PRODUCT OVERVIEW

The Audiovox RCR3273R is a universal remote control designed to operate up to three different audio/video devices, such as TVs, VCRs, DVD players, and cable boxes. Its ergonomic design and clearly labeled buttons provide intuitive control over your home entertainment system.



An image of the Audiovox RCR3273R universal remote control, featuring a black casing with various gray and blue buttons for device selection, channel control, volume, and number input.

### SETUP

#### 1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

#### 2. Programming Your Devices

To program the remote control to operate your devices, you will need to enter specific codes. Refer to the code list provided with your remote (if applicable) or search for codes online for your specific device brands. The general programming steps are as follows:

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the desired device button on the remote (e.g., **TV**, **DVD**) for approximately 3 seconds until the indicator light illuminates.
3. While holding the device button, enter the 4-digit code for your device brand using the number buttons.
4. Release the device button. The indicator light should turn off.
5. Test the remote by pressing the **Power** button. If the device turns off, the programming was successful.
6. If the device does not respond, repeat the steps using a different code from the list for your brand.

*Note: If no code works, some universal remotes offer an auto-search feature. Consult your remote's specific instructions for this advanced programming method.*

---

## OPERATING INSTRUCTIONS

Once programmed, operating your devices with the Audiovox RCR3273R is straightforward:

- **Device Selection:** Press the corresponding device button (**TV**, **DVD**, **VCR/AUX**) to select the device you wish to control. The indicator light may briefly flash to confirm selection.
- **Power:** Press the **Power** button to turn the selected device on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Channel Control:** Use the **CH+** and **CH-** buttons to change channels.
- **Number Pad:** Use the number buttons (0-9) to directly enter channel numbers or other numerical inputs.
- **Mute:** Press the **MUTE** button to silence the audio.
- **Playback Controls:** Buttons such as **PLAY**, **STOP**, **PAUSE**, **REW**, and **FF** control playback functions for devices like DVD players or VCRs.

---

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or if the indicator light does not illuminate during operation. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

---

## TROUBLESHOOTING

- **Remote not working:**
  - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
  - Ensure you have selected the correct device button (e.g., TV for your television).

- Verify that the remote is pointed directly at the device's infrared sensor.
- Confirm that the device is powered on.

- **Device not responding after programming:**

- Re-attempt programming using a different code for your device brand.
- Ensure the device is turned on before starting the programming process.

- **Some buttons not working:**

- This may indicate an incorrect or partially compatible code. Try reprogramming with an alternative code.

---

## SPECIFICATIONS

<b>Brand</b>	Audiovox
<b>Model</b>	RCR3273R
<b>Connectivity Technology</b>	Infrared
<b>Controller Type</b>	Button Control
<b>Special Feature</b>	Universal
<b>Battery Type</b>	AAA (2 required)

---

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Audiovox website. Keep your purchase receipt as proof of purchase for any warranty claims.

---

## Related Documents - RCR3273R

	<p><a href="#"><u>Audiovox CDM-4500 User Manual: Dual Mode CDMA/AMPS Handheld Cellular Telephone</u></a></p> <p>Explore the features and operations of the Audiovox CDM-4500, a dual-mode CDMA/AMPS handheld portable cellular telephone. This user manual provides detailed instructions on setup, usage, phonebook management, and advanced functions.</p>
---	--

	<p><a href="#"><u>Audiovox CDM-9000 User Manual: Features, Operation, and Specifications</u></a></p> <p>Comprehensive user manual for the Audiovox CDM-9000 Tri-Mode CDMA/AMPS handheld portable cellular telephone. Learn about its features, system configuration, operation, phonebook, messaging, and more.</p>
	<p><a href="#"><u>Audiovox FR-130 Two-Way Family Radio Owner's Manual</u></a></p> <p>This manual provides instructions for operating the Audiovox FR-130 Two-Way Family Radio, including features, controls, battery installation, operation, and warranty information.</p>
	<p><a href="#"><u>Audiovox PRO-9175FT4 4-Channel Remote Start and Keyless Entry System Installation Manual</u></a></p> <p>Detailed installation instructions and wiring guide for the Audiovox PRO-9175FT4 4-Channel Remote Start and Keyless Entry System, covering component installation, wiring connections, and feature programming.</p>
	<p><a href="#"><u>AUDIOVOX AXC 571 Owner's Manual - Setup and Operation Guide</u></a></p> <p>Comprehensive guide for the AUDIOVOX AXC 571 audio system. Learn how to set up, operate, and troubleshoot your device with detailed instructions and safety information.</p>
	<p><a href="#"><u>Audiovox GMRS7001CH General Mobile Radio Service Owner's Manual</u></a></p> <p>This owner's manual provides detailed instructions for the Audiovox GMRS7001CH General Mobile Radio Service transceiver, covering its features, operation, and maintenance.</p>

## Documents - Audiovox – RCR3273R

	<p><a href="#"><u>RCA RCR3273R/RCR3373R Universal Remote Control: Owner's Manual &amp; Programming Guide</u></a></p> <p>Comprehensive owner's manual for the RCA RCR3273R and RCR3373R universal remote controls. Learn how to install batteries, program your remote using auto, brand, direct entry, or manual code search methods, access device menus, and troubleshoot common issues.</p>
<p>lang:en score:36 filesize: 2.29 M page_count: 2 document date: 2011-01-06</p>	

### [\[pdf\] User Manual Owner's Manual Installation Guide](#)

User ManualRCA RCR3273R Universal Remote Control OfficeSupply1019335008doi product assets s3 amazonaws pub Manual 1019335008 |||



**RCR3273R / RCR3373R Universal Remote Control Owner's Manual**  
Manual del Propietario parte posterior SAVE THIS MANUAL AND THE CODE LISTS Remote controls can sometimes lose their programming when you change the batteries. Make sure you keep the manual and code lists in a safe place so that you can r...  
lang:en **score:35** filesize: 2.29 M page\_count: 2 document date: 2011-01-06

### [RCA RCR3273R/RCR3373R Universal Remote Control Owner's Manual](#)



Comprehensive guide to programming and using the RCA RCR3273R and RCR3373R universal remote controls for TVs, VCRs, DVD players, and satellite receivers. Includes setup, code search methods, troubleshooting, and care instructions.

lang:en **score:30** filesize: 2.29 M page\_count: 2 document date: 2011-01-06



### [\[pdf\] User Manual Specifications Warranty](#)

sure you're aiming the remote at device's IR sensor. The Manual Code Search method may take a long time because five digit code. Retrieving actual and writing channel number from sub such as 59 1 Manually turn on Care Maintenance Keep dry RCR312WR WC RCR311BIN sku t RCR311STR RCR3273R RCR4258R RCR4358R rcaaudiovideo docs common voxxintl search Limited Lifetime Warranty Audiovox Electronics Corporation the Company warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defects will be repaired...

lang:en **score:22** filesize: 846.83 K page\_count: 2 document date: 2011-01-05



### [Universal Remote Control Brand Code Lists](#)

Comprehensive list of brand codes for programming universal remote controls for TVs, VCRs, DVDs, satellite receivers, cable boxes, and video accessories. Includes codes for various manufacturers.

lang:es **score:19** filesize: 96.21 K page\_count: 2 document date: 2011-01-05