

## Fisher-Price DYH07

# Fisher-Price Imaginext Ultra T-rex Instruction Manual

Model: DYH07 | Brand: Fisher-Price

## INTRODUCTION

---

The Fisher-Price Imaginext Ultra T-rex is an interactive dinosaur toy designed to provide engaging play for children aged 3 to 8 years. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and optimal use of the product.

## WHAT'S INCLUDED

---

Please ensure all components listed below are present before beginning assembly:

- Imaginext Ultra T-Rex - Ice figure
- Jail accessory
- Trap door accessory
- Weapon storage compartment
- Pterodactyl glider
- Ice boulder launcher
- Storage on back
- Tethered projectile claw
- 3 Imaginext cavemen figures with helmets and accessories
- 4 Ice boulders
- 4 Arrows



*Image: The Imaginext Ultra T-rex displayed with all its accessories, including cavemen figures, projectiles, and various play features.*

## SETUP

### Battery Installation

The Ultra T-rex requires 4 AA batteries (not included) for its electronic functions. To install batteries:

1. Locate the battery compartment, typically on the underside or back of the main body.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

### Assembly

Some assembly is required to attach the legs to the main body of the Ultra T-rex. Follow these steps carefully:

1. For easier assembly, it is recommended to lay the T-rex on its side when attaching the first leg. Align the leg with the corresponding slot on the body and firmly snap it into place.
2. When attaching the second leg, ensure all contact points are perfectly aligned. If you encounter difficulty, re-check alignment and apply firm, even pressure until the leg snaps securely into position.
3. Attach any additional accessories such as the jail, weapon storage, pterodactyl glider, ice boulder launcher, and tethered projectile claw to their designated spots on the T-rex.



*Image: The Imaginext Ultra T-rex fully assembled and standing in its upright position.*

## OPERATING INSTRUCTIONS

---

The Imaginext Ultra T-rex features three Power Pads that activate various functions:

- **Power Pad Behind Tail:** Turn this Power Pad to make the Ultra T-rex take four steps forward, accompanied by exciting sound effects.
- **Power Pad Above Left Hip:** Turn this Power Pad to raise the T-rex to its full height of 2.5 feet. This action also activates the LED lights in its spikes and eyes.
- **Third Power Pad (Mouth/Projectile):** Turn this Power Pad to open and close the T-rex's mouth, and to fire projectiles from its mouth.

Additional interactive features:

- **Ice Bomb Launchers:** Press the button located on the T-rex's chest and back to launch ice bombs.
- **Projectile Claw:** Press the lever to fire the tethered projectile claw.



*Image: A hand demonstrating the activation of a Power Pad on the Ultra T-rex.*

## Product Demonstration Video

*Video: An official product video demonstrating the various features and movements of the Fisher-Price Imaginext Ultra T-rex.*

## MAINTENANCE

To ensure the longevity and proper functioning of your Imaginext Ultra T-rex, follow these maintenance guidelines:

- **Cleaning:** Wipe the toy with a damp cloth to remove dust and dirt. Do not immerse the toy in water or use harsh cleaning agents.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage. Replace all batteries at the same time with new, high-quality AA batteries.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter any issues with your Imaginext Ultra T-rex, refer to the following common problems and solutions:

- **Toy Not Responding:**
  - Check if the batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
  - Ensure the ON/OFF switch is in the 'ON' position.
- **Legs Not Moving/Toy Not Walking:**
  - Verify that both legs are securely snapped into their respective slots. Improper assembly can prevent movement.
  - Ensure the Power Pad behind the tail is fully turned to activate the walking mechanism.
- **Projectiles Not Firing:**
  - Confirm that projectiles (ice boulders, arrows) are properly loaded into their launchers.
  - Ensure the Power Pad or lever for the specific launcher is fully activated.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	30 x 8 x 16 inches
Item Weight	6 pounds
Item Model Number	DYH07
Manufacturer Recommended Age	36 months - 8 years
Batteries Required	4 AA batteries (not included)
Manufacturer	Fisher-Price

Release Date	July 2, 2018
--------------	--------------

## **SAFETY INFORMATION**

---

Please read and follow all safety warnings to prevent injury or damage:

- Keep small parts and projectiles away from children under 3 years of age to prevent choking hazards.
- Do not aim projectiles at eyes or face.
- Use only projectiles supplied with this toy. Do not modify projectiles or the toy.
- Adult supervision is recommended during play.
- Dispose of batteries responsibly.

## **WARRANTY AND SUPPORT**

---

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Fisher-Price website. Keep your purchase receipt as proof of purchase.