

## SKMEI SKMEI 1142

# SKMEI 1142 Digital Sports Watch User Manual

Model: SKMEI 1142

## 1. PRODUCT OVERVIEW

The SKMEI 1142 is a Japanese-Quartz LED display sports watch designed for durability and multifunctionality. It features a digital display, 50-meter water resistance, and various functions including alarm, chronograph, and backlight, making it suitable for daily wear and sports activities.

Key features include:

- Digital time display with hour, minutes, and seconds.
- Functions: Alarm, Auto Date, Chronograph, Water Resistant, Complete Calendar, LED display, Shock Resistant, Stop Watch, Back Light.
- Four control buttons for different functions.
- Durable silicone band and stainless steel dial.



Figure 1: Overview of the SKMEI 1142 watch with labeled buttons and display indicators. This diagram highlights the EL Light Button, Mode Button, Reset Button, and Start/Stop Button, along with indicators for Week, Date, Time, and Alarm On.



Figure 2: Front view of the SKMEI 1142 digital sports watch, showcasing its sleek black design and clear LED display.

## 2. SETUP AND INITIAL CONFIGURATION

Upon first use or after a battery change, you may need to set the time and date. Refer to Figure 1 for button identification.

1. **Entering Setting Mode:** Press the **MODE** button repeatedly until the desired setting (e.g., time, date, alarm) begins to flash.
2. **Adjusting Values:** While a value is flashing, use the **START/STOP** button to increase the value or the

**RESET** button to decrease it (if applicable).

3. **Navigating Settings:** Press the **MODE** button to move to the next setting parameter (e.g., from hours to minutes, then to date).
4. **Exiting Setting Mode:** Once all settings are adjusted, press the **MODE** button until the display returns to the normal timekeeping mode.

The watch is powered by a Japanese IC chip set, ensuring accurate timekeeping.

## 3. OPERATING INSTRUCTIONS

---

The SKMEI 1142 watch offers several functions accessible via its four buttons.

### 3.1 Timekeeping Mode

This is the default display mode, showing the current time, day of the week, and date.



Figure 3: The watch display in normal timekeeping mode, showing "SAT 2-11" (Saturday, February 11th) and "15:47:40" (3:47:40 PM).

- To activate the backlight, press the **EL LIGHT** button. The display will illuminate for a few seconds.

### 3.2 Alarm Function

To set and activate the alarm:

1. From normal timekeeping mode, press the **MODE** button until the alarm time is displayed and flashing.
2. Use the **START/STOP** and **RESET** buttons to set the desired alarm hour and minute.
3. Press **MODE** to confirm and exit.
4. To turn the alarm on/off, press the **START/STOP** button while in alarm setting mode. An alarm icon will appear/disappear on the display.

### 3.3 Chronograph (Stopwatch)

To use the stopwatch function:

1. From normal timekeeping mode, press the **MODE** button until the stopwatch display (00:00:00) appears.
2. Press **START/STOP** to start the stopwatch.
3. Press **START/STOP** again to pause/resume.
4. Press **RESET** to reset the stopwatch to zero.

## 4. WATER RESISTANCE

---

The SKMEI 1142 watch is rated for 50 meters (5ATM) water resistance, making it suitable for various water-related activities. This means it can withstand splashes, rain, showering, and shallow swimming.



Figure 4: Examples of activities suitable for the 50M water resistance of the SKMEI 1142 watch, including washing hands, exposure to rain, and swimming.

### Important Note:

- **DO NOT press any buttons while the watch is submerged in water.** Pressing buttons underwater can compromise the water resistance seal.
- Avoid exposing the watch to hot water or steam, as this can damage the seals.

## 5. MAINTENANCE AND CARE

---

Proper care will ensure the longevity and performance of your SKMEI 1142 watch.

- **Cleaning:** Wipe the watch case and band regularly with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.
- **Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can damage the case, band, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (very hot or very cold) for prolonged periods, as this can affect battery life and internal components.
- **Battery Replacement:** When the display becomes dim or functions are erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure the water resistance is maintained.
- **Strap Care:** The silicone strap is durable but can be cleaned with soap and water. Avoid excessive stretching or sharp objects that could damage the strap.



Figure 5: Close-up details of the SKMEI 1142 watch, highlighting its high hardness glass, stainless steel screw back with 50M water resistance rating, durable silicone strap, and PC material buckle.

## 6. TROUBLESHOOTING

---

If you encounter issues with your SKMEI 1142 watch, try the following steps:

- **Display is Dim or Blank:**
  - Check if the battery needs replacement.
  - Ensure the watch is not exposed to extreme cold, which can temporarily affect LCD performance.
- **Buttons Not Responding:**
  - Ensure the watch is dry. Water or moisture can sometimes interfere with button operation.
  - Gently press each button to ensure it is not stuck.
- **Time is Inaccurate:**
  - Re-set the time following the "Setup and Initial Configuration" section.
  - A weak battery can sometimes affect timekeeping accuracy.

If problems persist, contact SKMEI customer support for further assistance.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand Name	SKMEI
Model Number	1142
Movement	Digital (Japanese-Quartz)
Dial Display	Digital LED
Water Resistance Depth	50 Meters (5ATM)
Dial Diameter	5.2 cm
Case Thickness	13mm
Band Material Type	Silicone
Band Length	27 cm
Band Width	2.0 cm
Clasp Type	Buckle (PC Material)
Case Shape	Round
Features	Auto Date, Diver, Alarm, Chronograph, Water Resistant, Complete Calendar, LED display, Shock Resistant, Stop Watch, Back Light

## 8. WARRANTY AND SUPPORT

Specific warranty details for the SKMEI 1142 watch are not provided in this manual. For warranty information, product support, or service inquiries, please contact the manufacturer, SKMEI, directly through their official website or authorized distributors.

Always refer to the official SKMEI resources for the most accurate and up-to-date information regarding your product.