

INSIGNIA NS-RMT415

Insignia NS-RMT415 4-Device Universal Remote Control User Manual

Model: NS-RMT415

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Insignia NS-RMT415 4-Device Universal Remote Control. This remote is designed to control up to four different audio/video devices, including televisions, cable/satellite boxes, DVD/Blu-ray players, and various streaming devices. Please read these instructions carefully to ensure proper use and to maximize the functionality of your remote control.

PRODUCT FEATURES

- Universal compatibility with over 150 TV brands.
- Controls up to 4 devices: TV, Cable/Satellite, DVD/Blu-ray, and Streaming Devices (e.g., Apple TV, Roku, Google Chromecast).
- Dedicated color keys (red, green, yellow, blue) for advanced cable, satellite, or Blu-ray disc functions.
- Advanced TV keys for picture-in-picture, swap, and sleep functions.
- Operating range of up to 23 feet (approximately 7 meters).
- Ergonomic design for comfortable handling.

REMOTE CONTROL LAYOUT



Figure 1: Insignia NS-RMT415 Universal Remote Control. This image displays the full layout of the remote, showing all buttons from the device selection buttons at the top to the Insignia branding at the bottom.

The Insignia NS-RMT415 remote control features a logical button layout for intuitive operation. Key sections include device selection buttons, navigation and menu controls, playback functions, numerical keypad, and special function buttons.

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover down and lift it off.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the

compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use fresh batteries for optimal performance. If the remote is not used for an extended period, remove the batteries to prevent leakage.

2. Programming Your Remote

The Insignia NS-RMT415 can be programmed to control up to four devices. There are typically two methods for programming: Direct Code Entry and Auto Code Search.

Direct Code Entry (Recommended)

This method requires a specific 3 or 4-digit code for your device's brand. A list of codes is usually provided in the full user manual (not included here) or can be found on the Insignia support website.

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the desired device button (**TV**, **DVD**, **STB**, or **STREAM**) for approximately 3 seconds until the red indicator light illuminates and remains lit.
3. Enter the 3 or 4-digit code for your device's brand using the number keys.
4. If the code is valid, the indicator light will turn off. Test the remote by pressing the **POWER** button. If the device turns off, the programming was successful.
5. If the device does not respond, repeat the process with another code from the list for your brand.

Auto Code Search

If you cannot find a code or prefer not to use direct entry, the remote can search for the correct code automatically.

1. Turn on the device you wish to program.
2. Press and hold the desired device button (**TV**, **DVD**, **STB**, or **STREAM**) for approximately 3 seconds until the red indicator light illuminates and remains lit.
3. While the indicator light is lit, press the **POWER** button once. The indicator light will flash, indicating it is searching.
4. Point the remote at your device and repeatedly press the **CH+** (Channel Up) button slowly, pausing briefly after each press. The remote sends a different power code with each press.
5. When your device turns off, immediately press the **OK** button to save the code. The indicator light will turn off.
6. Test the remote's functions (e.g., volume, channel). If all functions work, programming is complete. If not, repeat the auto code search process.

OPERATING INSTRUCTIONS

Once programmed, select the desired device by pressing its corresponding button (**TV**, **DVD**, **STB**, or **STREAM**) before issuing commands. The indicator light will briefly flash to confirm the device selection.

Button Functions Overview

Button	Function
POWER	Turns the selected device on or off.
TV, DVD, STB, STREAM	Selects the device to be controlled.
SET	Used for programming the remote.

Button	Function
MENU	Accesses the menu of the selected device.
INFO	Displays information about the current program or content.
GUIDE	Opens the electronic program guide (EPG).
EXIT	Exits menus or on-screen displays.
OK	Confirms selections in menus.
Arrow Buttons (Up, Down, Left, Right)	Navigates through menus and options.
LIST	Accesses recorded programs or a list of channels.
Red, Green, Yellow, Blue Buttons	Special functions, often context-sensitive for cable/satellite boxes or Blu-ray players.
Playback Controls (Stop, Play, Rewind, Fast Forward, Skip Back, Skip Forward, Pause)	Controls media playback on DVD/Blu-ray players or streaming devices.
VOL + / -	Adjusts the volume level.
MUTE	Mutes or unmutes the audio.
CH + / -	Changes channels.
LAST	Returns to the previously viewed channel.
Number Pad (0-9, -, ENTER)	Direct channel entry and numerical input.
VOD	Accesses Video On Demand services.
HOME	Returns to the home screen of streaming devices or smart TVs.
PAGE (Up/Down)	Scrolls through pages in guides or menus.
LIVE	Switches to live TV.
INPUT	Cycles through video input sources on a TV.
OPT	Accesses options or settings menu.
WIDE	Adjusts screen aspect ratio or picture mode.

MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light does not respond as expected. Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Insignia NS-RMT415 universal remote, refer to the following common solutions:

- **Remote not responding:**

- Ensure fresh AA batteries are correctly installed.
- Point the remote directly at the device's IR sensor.
- Check for obstructions between the remote and the device.
- Verify that the correct device button (TV, DVD, STB, STREAM) is selected.

- **Device not programming:**

- Double-check the device code entered. Try alternative codes for your brand.
- Ensure the device is turned on before starting the programming process.
- If using Auto Code Search, press the CH+ button slowly and deliberately, and press OK immediately when the device turns off.
- Ensure batteries are fresh, as low battery power can affect programming.

- **Some functions not working after programming:**

- The current code may not be fully compatible. Try other codes for your device's brand.
- Some advanced functions may not be supported by all universal remote codes.

SPECIFICATIONS

- **Model Number:** NS-RMT415
- **Brand:** Insignia
- **Color:** Black
- **Supported Devices:** Up to 4 (TV, Cable/Satellite, DVD/Blu-ray, Streaming Devices)
- **Operating Range:** Up to 23 feet (7 meters)
- **Power Source:** 2 AA batteries (not included)
- **Product Dimensions:** 8 x 2 x 1 inches (20.3 x 5.1 x 2.5 cm)
- **Item Weight:** 5.7 ounces (161.6 grams)

WARRANTY AND SUPPORT

This Insignia NS-RMT415 Universal Remote Control includes a **1-Year Product Warranty** from the manufacturer. For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official Insignia support website.

For the most up-to-date device codes and troubleshooting tips, please visit the Insignia customer support portal.



 <p>INSIGNIA USER GUIDE 3-Device Universal Remote NS-RMT3D18</p> <p>Technical specifications and other information are not provided in this user guide.</p>	<p>Insignia NS-RMT3D18 3-Device Universal Remote User Guide</p> <p>Comprehensive user guide for the Insignia NS-RMT3D18 3-Device Universal Remote. Learn to set up, program, and troubleshoot your remote for TVs, Blu-ray/DVD players, and cable/satellite/streaming devices, including popular brands like Samsung, Sony, LG, and Philips.</p>
 <p>INSIGNIA™ DEVICE CODES CÓDIGOS DE LOS DISPOSITIVOS</p> <p>Five-device/Eight-device Universal Remote Control remoto universal para cinco/ocho dispositivos NS-RMT5D21/NS-RMT8D21</p>	<p>Insignia Universal Remote Device Codes for NS-RMT5D21 and NS-RMT8D21</p> <p>Find comprehensive device codes for Insignia's 5-device and 8-device universal remotes (models NS-RMT5D21 and NS-RMT8D21) to control your TV, Blu-ray, DVD, STB, and streaming devices.</p>
 <p>INSIGNIA™ DEVICE CODES CÓDIGOS DE LOS DISPOSITIVOS</p> <p>Five-device/Eight-device Universal Remote Control remoto universal para cinco/ocho dispositivos NS-RMT5D21/NS-RMT8D21</p>	<p>Insignia Universal Remote Device Codes (NS-RMT5D21/NS-RMT8D21)</p> <p>A comprehensive list of device codes for Insignia five-device and eight-device universal remotes (models NS-RMT5D21 and NS-RMT8D21), covering TV, AUX, STB, Blu-ray, DVD, Streaming, and Audio devices.</p>

INSIGNIA

USER GUIDE

4-Device Universal Remote

NS-RMT415



Before using our new product, please read these instructions to prevent any damage.

[Insignia 4-Device Universal Remote NS-RMT415 User Guide](#)

Learn how to set up and use your Insignia 4-Device Universal Remote (NS-RMT415) with this comprehensive user guide. Covers programming, features, and troubleshooting.

INSIGNIA

USER GUIDE

4-Device Universal Remote

NS-RMT415



Before using your new product, please read these instructions to prevent any damage.

[Insignia NS-RMT415 4-Device Universal Remote User Guide](#)

 
Comprehensive user guide for the Insignia NS-RMT415 4-Device Universal Remote. Learn how to set up, program, and use your remote for TV, DVD, STB, and streaming devices. Includes troubleshooting tips and warranty information.

INSIGNIA

USER GUIDE

4-Device Universal Remote

NS-RMT415



Before using your new product, please read these instructions to prevent any damage.

[INSIGNIA NS-RMT415 4-Device Universal Remote User Guide](#)

Comprehensive user guide for the INSIGNIA NS-RMT415 4-Device Universal Remote. Learn setup, programming, operation, and troubleshooting for TVs, DVD players, set-top boxes, and streaming devices.