



Manuals.plus /

- › STREET WISE SECURITY PRODUCTS /
- › Streetwise Ladies Choice 21,000,000 Stun Gun User Manual

STREET WISE SECURITY PRODUCTS SRUSSWLC21BWC

Streetwise Ladies Choice 21,000,000 Stun Gun User Manual

Model: SRUSSWLC21BWC | Brand: STREET WISE SECURITY PRODUCTS

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Streetwise Ladies Choice 21,000,000 Stun Gun. Designed for personal defense, this device integrates a stun function, a loud alarm, and an LED flashlight. Please read this manual thoroughly before operating the device.

2. IMPORTANT SAFETY INFORMATION

WARNING: Misuse of this device can result in serious injury or legal consequences. Always use responsibly and in accordance with local laws.

- **Legal Restrictions:** Stun guns are restricted in certain areas. Do not purchase or possess this device if you reside in or intend to ship to: HI, IL, MA, MI, NJ, NY, RI, WI, Annapolis (MD), Baltimore (MD), Baltimore County (MD), District of Columbia, or Philadelphia.
- **Age Requirement:** You must be 18 years or older to purchase and use this product.
- **International Shipments:** International shipments are not permitted.
- **Keep Out of Reach of Children:** This device is not a toy and should be stored securely away from children.
- **Proper Handling:** Never point the stun gun at yourself or others unless in a genuine self-defense situation.
- **Avoid Water:** Do not expose the device to water or extreme moisture.
- **Storage:** Store in a cool, dry place.

3. PRODUCT OVERVIEW

The Streetwise Ladies Choice Stun Gun is designed for ease of use and effective personal defense. It

features a comfortable grip, a powerful stun function, a bright LED flashlight, and a loud alarm.



This image displays the Streetwise Ladies Choice 21,000,000 Stun Gun, featuring a distinctive black and white chevron pattern. The device is ergonomically designed to fit comfortably in a hand, with visible finger indentations. The front of the stun gun shows the flashlight lens and the stun electrodes, which are actively sparking, indicating its operational state. A wrist strap is also visible, providing an additional layer of security against accidental drops or disarming.

Key Features:

- **Stun Function:** High-voltage discharge for personal defense.
- **Loud Alarm:** Piercing sound to attract attention and deter threats.
- **LED Flashlight:** Bright illumination for visibility in low-light conditions.
- **Built-in Charger:** Convenient wall charger integrated into the device.
- **Safety Switch:** Prevents accidental discharge.
- **Holster:** Included for easy carrying and accessibility.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the stun gun for 8-10 hours.
2. Locate the built-in charging prongs on the bottom of the device.
3. Slide the charging prongs out and plug the unit directly into a standard wall outlet (110V).
4. The charging indicator light will illuminate during charging.
5. Once fully charged, unplug the device and retract the charging prongs.

Note: Do not overcharge the device, as this can reduce battery life. Regular charging (e.g., once a month for 1-2 hours) is recommended to maintain optimal battery performance.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the controls before an emergency. The main slide switch on the side of the unit controls the functions.

5.1 Activating the Safety Switch

- The safety switch is located on the side of the unit.
- To activate any function (flashlight, alarm, or stun), the safety switch must be in the 'ON' position.
- Always return the safety switch to the 'OFF' position when not in use to prevent accidental activation.

5.2 Using the LED Flashlight

1. Ensure the safety switch is in the 'ON' position.
2. Slide the main function switch up one notch. The LED flashlight will illuminate.
3. To turn off the flashlight, slide the main function switch back down to the 'OFF' position.

5.3 Activating the Loud Alarm

1. Ensure the safety switch is in the 'ON' position.
2. Slide the main function switch up two notches. The loud alarm will sound.
3. To deactivate the alarm, slide the main function switch back down to the 'OFF' position.

5.4 Activating the Stun Function

1. Ensure the safety switch is in the 'ON' position.
2. Slide the main function switch up to the highest position (usually marked with a lightning bolt symbol).
3. Press and hold the separate stun activation button (often located on the opposite side or bottom of the unit, or integrated with the slide switch).
4. The stun electrodes will emit an electrical arc and a loud crackling sound.
5. To cease the stun function, release the stun activation button and slide the main function switch back to the 'OFF' position.

Caution: Test firing the stun gun into the air for a brief moment (less than 1 second) can be a deterrent. Avoid prolonged test firing, as this can drain the battery and potentially damage the unit.

6. MAINTENANCE

- **Cleaning:** Wipe the exterior of the device with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Care:** Recharge the battery regularly, even if not used, to maintain its lifespan. A full discharge followed by a full charge every few months is recommended.
- **Storage:** Store the stun gun in its holster in a secure location, away from extreme temperatures and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stun gun not working/no spark	Battery low; Safety switch off; Function switch not in stun position; Stun button not pressed.	Charge the unit; Ensure safety switch is ON; Ensure function switch is in stun position; Press stun activation button firmly.
Flashlight not working	Battery low; Safety switch off; Function switch not in flashlight position.	Charge the unit; Ensure safety switch is ON; Ensure function switch is in flashlight position.
Alarm not sounding	Battery low; Safety switch off; Function switch not in alarm position.	Charge the unit; Ensure safety switch is ON; Ensure function switch is in alarm position.
Unit not charging	Prongs not fully extended; Outlet not working; Unit damaged.	Ensure prongs are fully extended and securely plugged in; Try a different outlet; Contact customer support if unit is damaged.

8. SPECIFICATIONS

Feature	Detail
Model Number	SRUSSWLC21BWC
Brand	STREET WISE SECURITY PRODUCTS
UPC	747906611106
Dimensions (L x W x H)	6.4 x 2.9 x 1.9 inches
Weight	0.16 Kilograms
Material	Acrylonitrile Butadiene Styrene (ABS), Plastic
Color	Black, White (Chevron Pattern)
Included Components	Stun gun pouch
Power Source	Rechargeable (Built-in Charger)

9. WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation provided at the time of purchase or contact the manufacturer directly. General product support can often be found on the STREET WISE SECURITY PRODUCTS website or by contacting their customer service department.

Always ensure you are purchasing from an authorized retailer to guarantee product authenticity and warranty coverage.