

[Manuals.plus](#) /

› [GLOBO](#) /

› GLOBO LIGHTING 2491K Retro Style Green Table Lamp User Manual

GLOBO 108745

GLOBO LIGHTING 2491K Retro Style Green Table Lamp

Model: 108745 | Brand: GLOBO

INTRODUCTION

Thank you for purchasing the GLOBO LIGHTING 2491K Retro Style Green Table Lamp. This manual provides essential information for the safe and efficient use of your new lamp. Please read these instructions carefully before installation and retain them for future reference.



Figure 1: GLOBO LIGHTING 2491K Retro Style Green Table Lamp, illuminated.

SAFETY INSTRUCTIONS

- Ensure the power supply is disconnected before installation, cleaning, or bulb replacement.
- This lamp is designed for indoor use only. Do not expose to moisture or extreme temperatures.
- Use only bulbs with an E27 base and a maximum wattage of 60W. Exceeding this limit may cause overheating and damage.
- Do not touch the bulb immediately after use, as it may be hot.
- Keep the lamp away from flammable materials.
- If the power cord is damaged, it must be replaced by a qualified electrician to avoid hazards.
- Do not attempt to modify the lamp in any way.

PACKAGE CONTENTS

Verify that all components are present and undamaged:

- 1 x GLOBO LIGHTING 2491K Table Lamp (Base, Arm, Shade)
- 1 x Power Cable (integrated)

- *Note: An E27 bulb is not included and must be purchased separately.*

SETUP

1. **Unpack the Lamp:** Carefully remove all packaging materials. Inspect the lamp for any signs of damage.
2. **Choose a Location:** Place the lamp on a stable, flat surface, such as a desk or table, ensuring it is away from edges and heat sources.
3. **Install the Bulb:**
 - Ensure the lamp is unplugged from the power outlet.
 - Gently screw an E27 bulb (max 60W) into the lamp's socket located inside the shade. Do not overtighten.



Figure 2: Bulb installation area within the shade.

OPERATING INSTRUCTIONS

1. **Connect to Power:** Plug the power cable into a standard 230V electrical outlet.
2. **Turn On/Off:** The lamp is operated by a pull chain switch.
 - To turn the lamp ON, gently pull the chain once.
 - To turn the lamp OFF, gently pull the chain again.



Figure 3: Location of the pull chain switch.

3. **Adjust the Shade:** The lamp features an adjustable shade. Gently tilt the green shade to direct the light as desired. Avoid excessive force to prevent damage to the joint.

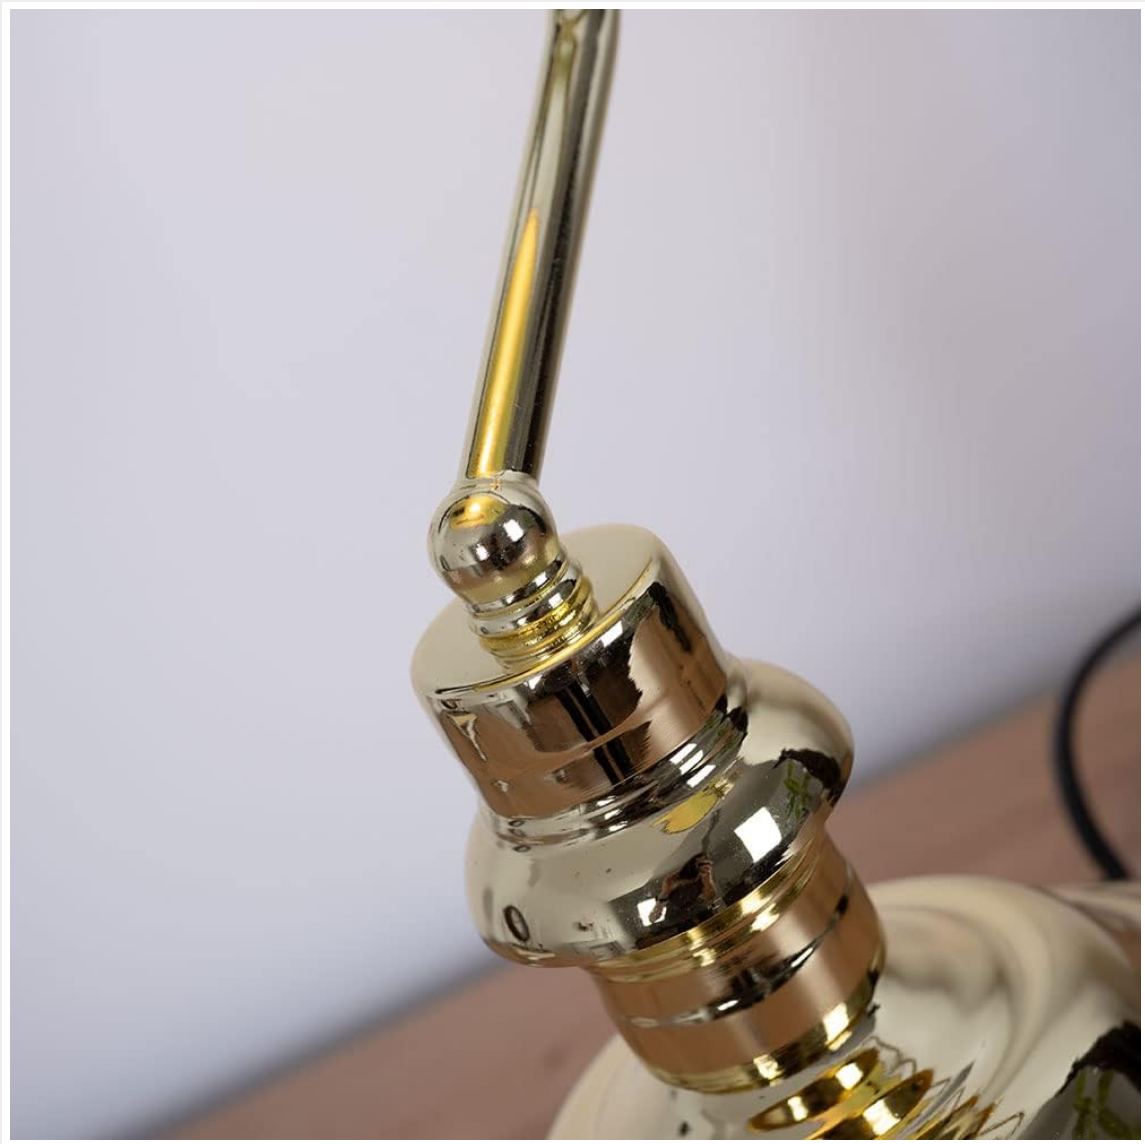


Figure 4: Adjustable joint for shade positioning.

MAINTENANCE

- **Cleaning:** Always unplug the lamp before cleaning. Use a soft, dry cloth to wipe the metal base and acrylic shade. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Bulb Replacement:**
 - Ensure the lamp is unplugged and the bulb has cooled down completely.
 - Unscrew the old E27 bulb counter-clockwise.
 - Screw in a new E27 bulb (max 60W) clockwise until secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet. Bulb is loose or faulty. Pull chain switch is faulty.	Check if the outlet is working by plugging in another device. Unplug the lamp, check if the bulb is screwed in properly, or replace the bulb. If the switch is faulty, contact customer support. Do not attempt to repair yourself.
Light flickers.	Loose bulb connection. Faulty bulb.	Unplug the lamp and tighten the bulb. Replace the bulb.

SPECIFICATIONS

Feature	Detail
Model Number	108745
Brand	GLOBO LIGHTING
Lamp Type	Table Lamp
Material	Metal (Base), Acrylic (Shade)
Shade Color	Green
Dimensions (L x W x H)	19 cm x 25 cm x 36 cm
Item Weight	1.38 Kilograms
Bulb Base	E27
Max Wattage	60W
Voltage	230V
Switch Type	Pull Chain
Usage	Indoor Use Only



Figure 5: Product dimensions.

WARRANTY INFORMATION

Warranty information for this product is not specified in the provided product data. Please refer to your purchase documentation or contact your retailer for details regarding warranty coverage.

SUPPORT

For technical assistance, replacement parts, or further inquiries, please contact your retailer or the manufacturer,

GLOBO LIGHTING. Ensure you have your model number (108745) and proof of purchase available when seeking support.