

[Manuals.plus](#) /

› [Barbie](#) /

› Barbie Doll House Playset, 3-Story Townhouse with 4 Rooms & Rooftop Lounge, Furniture & Accessories Including Swinging Chair (Amazon Exclusive)

Barbie DLY32

Barbie 3-Story Townhouse Playset Instruction Manual

Model: DLY32

PRODUCT OVERVIEW

The Barbie 3-Story Townhouse is a deluxe playset offering extensive play space across three levels. It features four distinct rooms and a rooftop lounge, designed to inspire imaginative storytelling. The townhouse is designed for easy storage, folding compactly when not in use.

Key Features:

- Three stories of play space.
- Four rooms: kitchen, living room, bathroom, and bedroom.
- Rooftop lounge with a pop-up umbrella.
- Child-activated elevator for inter-floor travel.
- Contemporary furniture and accessories included.
- Foldable design for convenient storage.



Image: The Barbie 3-Story Townhouse fully assembled, showcasing its three levels, multiple rooms, and rooftop lounge. A child is seated beside the playset, illustrating its scale.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

Adult supervision is recommended during assembly and play.

ASSEMBLY INSTRUCTIONS

Follow these steps for proper assembly of your Barbie 3-Story Townhouse. Refer to the included visual guide for detailed diagrams.

- 1. Unpack Components:** Carefully remove all pieces from the packaging. Verify all parts are present against the parts list in the user manual (PDF).
- 2. Assemble Base Structure:** Connect the main floor sections. Ensure all locking mechanisms click into place securely.
- 3. Install Elevator:** Position the elevator shaft in the designated central area. Ensure the child-activated elevator mechanism operates smoothly.
- 4. Attach Upper Floors and Roof:** Secure the second and third floor sections. The rooftop lounge includes a pop-up umbrella feature; ensure it extends and retracts correctly.
- 5. Place Furniture and Accessories:** Arrange the kitchen table and chairs, sofa, bed, bathtub, and swinging chair in their respective rooms. Utilize the closet space for doll fashions.



Image: A close-up of the Barbie 3-Story Townhouse during assembly, highlighting the elevator mechanism with a Barbie doll inside. The kitchen and living room areas are visible.

Your browser does not support the video tag.

Video: Official product video demonstrating the assembly and key features of the Barbie 3-Story Townhouse, including the folding mechanism and elevator operation.

OPERATING INSTRUCTIONS

The Barbie 3-Story Townhouse offers interactive features for enhanced play.

- **Elevator Operation:** Place a Barbie doll (sold separately) inside the elevator. Use the child-activated mechanism to move the elevator between floors.
- **Rooftop Lounge:** When the elevator reaches the second floor, the rooftop lounge automatically opens, revealing a pop-up umbrella for a sunny play area. The bathtub can be placed on the rooftop to serve as a spa.
- **Swinging Chair:** The living room features a contemporary swinging chair that can be opened to allow dolls to swing either inside or outside the house.



Image: Two children engaged in play with the Barbie 3-Story Townhouse, demonstrating its expansive open configuration and various play areas.



Image: Two Barbie dolls enjoying the rooftop lounge of the townhouse, complete with a pop-up umbrella and seating, illustrating the

outdoor play possibilities.

MAINTENANCE AND CARE

To ensure the longevity of your Barbie 3-Story Townhouse, follow these simple care guidelines:

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** When not in use, fold the townhouse compactly as instructed in the assembly section. Store in a dry, cool place away from direct sunlight to prevent fading and material degradation.
- **Handling:** Handle all moving parts, especially the elevator and folding sections, with care to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Elevator not moving smoothly.	Obstruction in the shaft or improper alignment.	Check for any small objects blocking the elevator path. Ensure the townhouse is fully unfolded and locked into position.
Rooftop umbrella not popping up.	Mechanism jammed or not fully extended.	Gently assist the umbrella mechanism. Ensure the elevator reaches the top floor completely.
Parts feel loose after assembly.	Connections not fully secured.	Re-check all snap-together connections and latches to ensure they are firmly engaged.

SPECIFICATIONS

- **Model Number:** DLY32
- **Product Dimensions:** 16.14 x 7.09 x 29.33 inches
- **Item Weight:** 8.82 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Batteries:** AAA batteries required (not included)
- **Country of Origin:** Mexico
- **Manufacturer:** Mattel

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official Mattel website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question