

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PLAY](#) /

› **PLAY Discovery Baby Phone Model 2671 User Manual**

## PLAY 2671

# PLAY Discovery Baby Phone Model 2671 User Manual

Model: 2671

## INTRODUCTION

This manual provides instructions for the safe and proper use of your PLAY Discovery Baby Phone, Model 2671. This toy is designed for pretend play, encouraging social skills and imaginative development in children aged 24 months to 10 years.

## SAFETY INFORMATION

Please read all safety information before using this product. This product contains no specific safety warnings beyond general toy safety. Ensure children play under adult supervision. Do not immerse the toy in water. Keep away from heat sources.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x PLAY Discovery Baby Phone (Model 2671)



Image: The PLAY Discovery Baby Phone, Model 2671, shown in its retail packaging. The packaging features the toy phone, brand logo, and age recommendation (18m+).

## SETUP: BATTERY INSTALLATION

1. Locate the battery compartment on the back of the PLAY Discovery Baby Phone.
2. Using a small screwdriver (not included), unscrew the battery compartment cover.
3. Insert the required batteries (type and quantity typically specified on the compartment itself, assuming AAA or AA) ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

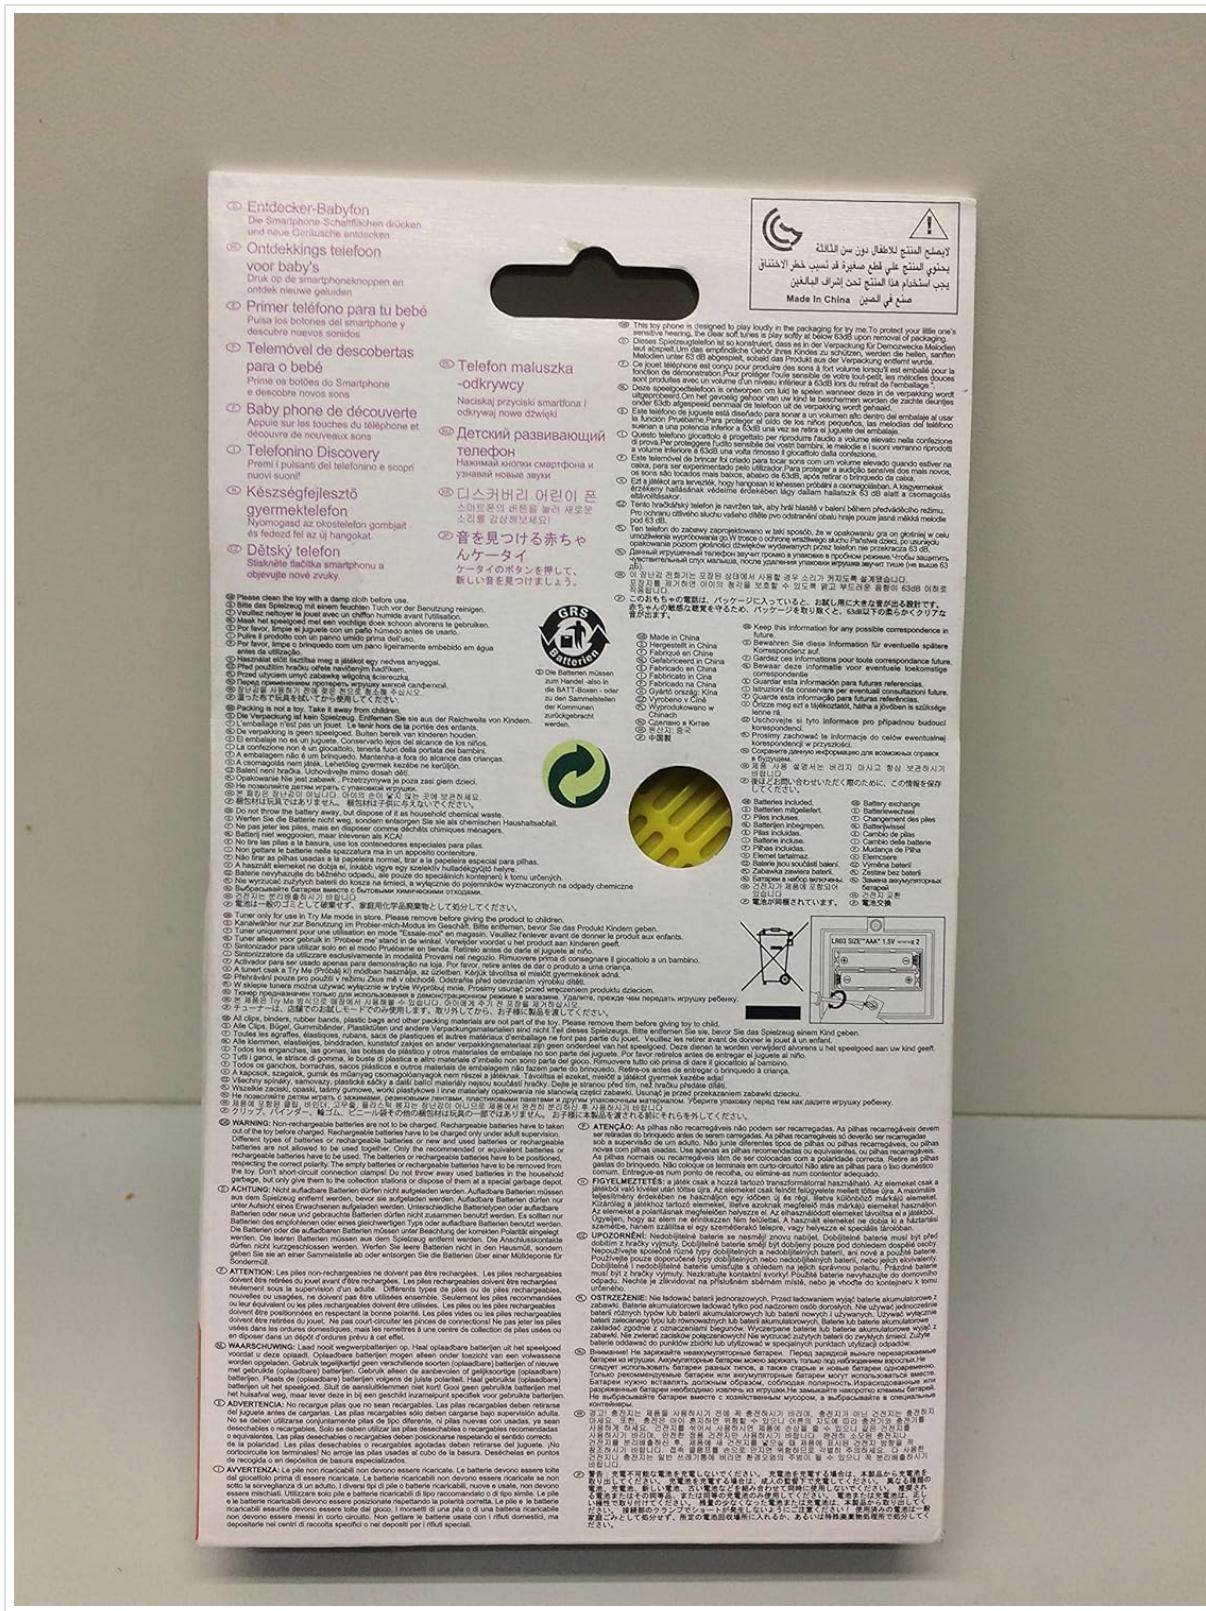


Image: The reverse side of the product packaging, which includes multi-language instructions and an illustration of the battery compartment for installation.

## OPERATING INSTRUCTIONS

The PLAY Discovery Baby Phone is designed for simple, intuitive play.

- Power On/Off:** Locate the power button (often depicted as a circle with a vertical line) on the front of the phone. Press it to turn the toy on or off.
- Sound Activation:** Press any of the colorful icon buttons on the screen to activate different sounds

and phrases. Each button is designed to trigger a unique audio response.

- **Pretend Play:** Encourage imaginative play by pretending to make calls, send messages, or interact with the various app icons.

## MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or very low sound.	Batteries are low or incorrectly installed.	Replace with fresh batteries, ensuring correct polarity. Check that the battery compartment cover is securely fastened.
Toy does not turn on.	Batteries are dead or missing.	Install new batteries or ensure existing batteries are fresh and correctly inserted.

## SPECIFICATIONS

Model Number	2671
Brand	PLAY
Product Type	Pretend Phones & Smartphones (Toy)
Recommended Age	24 months - 10 years
Product Dimensions	4.33 x 1.18 x 7.87 inches (11 x 3 x 20 cm)
Item Weight	5 ounces (141.75 grams)
Country of Origin	China
Release Date	January 1, 2017



Image: A visual representation of the product's packaging dimensions, indicating a height of 8.4 inches (21 cm).

## **WARRANTY AND SUPPORT**

---

For information regarding warranty, returns, or customer support, please refer to the retailer's policy where the product was purchased or visit the official PLAY brand website.