

Jensen JCR-210

JENSEN JCR-210 AM/FM Digital Dual Alarm Clock Radio with Nature Sounds

User Instruction Manual

1. INTRODUCTION AND OVERVIEW

The JENSEN JCR-210 is a versatile and compact AM/FM dual alarm clock radio designed to enhance your daily routine. It features a clear 1.2-inch green LED display with dimmer control, a digital AM/FM tuner with 10 AM and 10 FM presets for easy access to your favorite stations, and a built-in Aux-in jack for connecting external audio devices. A unique feature of the JCR-210 is its selection of four soothing nature sounds (White Noise, Ocean, Rain Forest, and Campfire) that can be used for waking up, falling asleep, or simply relaxing. The unit operates on 120V AC power and includes a battery backup system to preserve your settings during power outages.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before operating this product. Keep this manual for future reference. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Only use attachments/accessories specified by the manufacturer. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

3. PACKAGE CONTENTS

- JENSEN JCR-210 AM/FM Digital Dual Alarm Clock Radio
- AC Power Adapter
- User Manual (this document)

4. PRODUCT FEATURES

- AM/FM Receiver with Digital Tuning and 10 AM + 10 FM Presets
- Auxiliary Input Jack for Connecting Your iPod, MP3 or other Digital Audio Players
- Wake to Radio, Alarm or Nature Sound
- 4 Selectable Nature Sounds (White Noise, Ocean, Rain Forest, Campfire)
- Sleep and Snooze Functions
- 1.2-inch Green LED Display
- Dimmer Control
- Power: AC120V 60Hz
- Battery Back-up for Clock: 2 x 'AAA' (UM-4) (Not Included)

5. CONTROLS AND INDICATORS



Figure 5.1: Front view of the JENSEN JCR-210 clock radio, showing the large green LED display and front speaker.



Figure 5.2: Top view of the JENSEN JCR-210 clock radio, highlighting the control buttons for time setting, alarm, nature sounds, volume, and snooze.



4 selectable nature sounds (ocean, rain forest, white noise, campfire)

Figure 5.3: Side view of the JENSEN JCR-210 clock radio, showing the speaker grille.

Button Functions:

- **TIME SET/MEMORY+ (M+)**: Used to set the time and save radio presets.
- **HOUR (◀◀)**: Adjusts the hour during time setting; tunes radio frequency down.
- **MINUTE (▶▶)**: Adjusts the minute during time setting; tunes radio frequency up.
- **N.S. REPEAT**: Repeats the current nature sound.
- **N.S. SELECT**: Cycles through the available nature sounds.
- **VOLUME +/-**: Adjusts the audio volume.
- **MODE/ALARM OFF**: Switches between modes (Radio, AUX, Time); turns off active alarm.
- **SNOOZE/SLEEP/DIMMER**: Activates snooze, sets sleep timer, or adjusts display brightness.
- **ALARM 1 / ALARM 2**: Buttons for setting and activating Alarm 1 and Alarm 2.

6. SETUP

6.1 Power Connection

Plug the AC power adapter into the DC IN jack located on the back of the unit, then plug the adapter into a standard 120V AC wall outlet. The unit is now ready for operation.

6.2 Battery Backup Installation

The JCR-210 requires 2 x 'AAA' (UM-4) batteries (not included) for battery backup. This feature ensures that your

time and alarm settings are retained in the event of a power interruption. To install the batteries:

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 2 'AAA' batteries according to the polarity diagram (+ or -) inside the compartment.
3. Close the battery compartment cover securely.

Note: The battery backup only maintains time and alarm settings; the display will not illuminate and the alarm will not sound during a power outage.

6.3 Setting the Time

1. Press and hold the **TIME SET/MEMORY+** button until the display starts flashing.
2. Press the **HOUR** button to adjust the hour. Press and hold for rapid adjustment.
3. Press the **MINUTE** button to adjust the minute. Press and hold for rapid adjustment.
4. Press **TIME SET/MEMORY+** again to confirm and save the time.

7. OPERATING INSTRUCTIONS

7.1 Radio Operation (AM/FM)

1. Press the **MODE/ALARM OFF** button repeatedly until "RADIO" appears on the display.
2. Press the **HOUR (◀◀)** or **MINUTE (▶▶)** buttons to manually tune to your desired frequency. Press and hold for automatic station scanning.
3. Adjust the volume using the **VOLUME +/-** buttons.

Setting Radio Presets:

The unit can store up to 10 AM and 10 FM radio stations.

1. Tune to the desired station.
2. Press the **TIME SET/MEMORY+ (M+)** button once. The preset number will flash.
3. Use the **HOUR (◀◀)** or **MINUTE (▶▶)** buttons to select the desired preset number (P01-P10).
4. Press **TIME SET/MEMORY+ (M+)** again to save the station to the selected preset.
5. To recall a preset station, press the **TIME SET/MEMORY+ (M+)** button repeatedly in radio mode to cycle through saved presets.

7.2 Alarm Setting (Alarm 1 & Alarm 2)

The JCR-210 features two independent alarms.

1. Press and hold the **ALARM 1** or **ALARM 2** button until the alarm time flashes.
2. Press the **HOUR** button to adjust the alarm hour.
3. Press the **MINUTE** button to adjust the alarm minute.
4. Press the **ALARM 1** or **ALARM 2** button again to select the alarm source: Buzzer, Radio, or Nature Sound.
5. If selecting Radio, tune to the desired station. If selecting Nature Sound, use **N.S. SELECT** to choose the sound.
6. Press the **ALARM 1** or **ALARM 2** button one more time to confirm and activate the alarm. An alarm icon will appear on the display.

Turning Off an Alarm:

- When the alarm sounds, press the **MODE/ALARM OFF** button to turn it off for 24 hours. The alarm icon will remain, indicating it's set for the next day.
- To completely deactivate an alarm, press the corresponding **ALARM 1** or **ALARM 2** button until the alarm icon disappears from the display.

7.3 Nature Sounds

The JCR-210 offers four built-in nature sounds for relaxation or waking up.



Figure 7.1: Icons representing the four selectable nature sounds: Ocean waves, Rain forest, White noise, and Campfire.

- Press the **N.S. SELECT** button to cycle through the nature sounds: White Noise, Ocean, Rain Forest, Campfire.
- Press **N.S. REPEAT** to replay the current nature sound.
- Adjust volume with **VOLUME +/-**.

7.4 Sleep and Snooze Functions

Sleep Timer:

The sleep timer allows you to fall asleep to radio or nature sounds, which will automatically turn off after a set period.

1. While listening to the radio or nature sounds, press the **SNOOZE/SLEEP/DIMMER** button repeatedly to cycle through sleep timer options (e.g., 90, 60, 30, 15 minutes, OFF).
2. The unit will automatically turn off after the selected time.

Snooze:

When an alarm sounds, press the **SNOOZE/SLEEP/DIMMER** button to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after the snooze period.

7.5 Dimmer Control

To adjust the brightness of the 1.2-inch green LED display, press the **SNOOZE/SLEEP/DIMMER** button when the unit is not in alarm or sleep mode. Cycle through the available brightness levels (High, Low, Off).

7.6 Auxiliary Input (AUX-IN)

Connect your iPod, MP3 player, or other digital audio players to the AUX-IN jack located on the back of the unit using a 3.5mm audio cable (not included).

1. Press the **MODE/ALARM OFF** button repeatedly until "AUX" appears on the display.
2. Start playback on your connected audio device.
3. Adjust the volume using the **VOLUME +/-** buttons on the JCR-210 and/or your connected device.

8. MAINTENANCE

8.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish. Ensure the unit is unplugged before cleaning.

8.2 Battery Replacement

If the battery backup is not functioning correctly (e.g., time/settings are lost after a power outage), replace the 2 'AAA' batteries in the battery compartment as described in Section 6.2.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Display is off	Power adapter not connected or outlet is dead.	Ensure AC adapter is securely plugged into the unit and a working wall outlet.
Time/Alarm settings lost after power outage	Battery backup not installed or batteries are dead.	Install or replace 2 'AAA' batteries in the battery compartment.
Alarm does not sound	Alarm not set or deactivated; volume too low.	Verify alarm is set and active (alarm icon visible). Increase volume if alarm source is radio/nature sound.
Poor radio reception	Antenna not extended; interference.	Fully extend the FM wire antenna. For AM, rotate the unit for best reception. Move unit away from other electronic devices.
Aux-in audio distorted or no sound	Cable not fully inserted; volume too low on device or unit.	Ensure 3.5mm audio cable is fully inserted. Adjust volume on both the JCR-210 and the connected audio device.

10. SPECIFICATIONS

Feature	Description
Brand	Jensen
Model Number	JCR-210
Display Type	Digital (1.2" Green LED)
Power Source	AC120V 60Hz
Battery Backup	2 x 'AAA' (UM-4) batteries (not included)
Radio Tuner	AM/FM Digital Tuner
Presets	10 AM, 10 FM
Alarm Features	Dual Alarm, Wake to Radio/Buzzer/Nature Sound
Nature Sounds	White Noise, Ocean, Rain Forest, Campfire
Connectivity	Auxiliary Input Jack (3.5mm)
Product Dimensions	5.8"W x 4.5"H (approximate)
Item Weight	1.1 Pounds
Material	Plastic

11. WARRANTY AND SUPPORT

11.1 Warranty Information

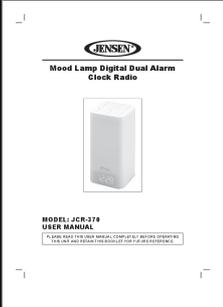
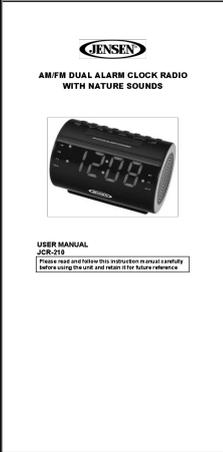
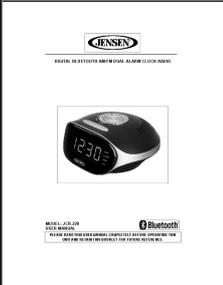
This JENSEN JCR-210 unit is covered by a 90-day limited warranty from the date of original purchase. This warranty covers manufacturing defects in materials and workmanship. It does not cover damage caused by misuse, accident, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

11.2 Additional Support

For further assistance or to download the official PDF user manual, please visit the product support page or refer to the following link:

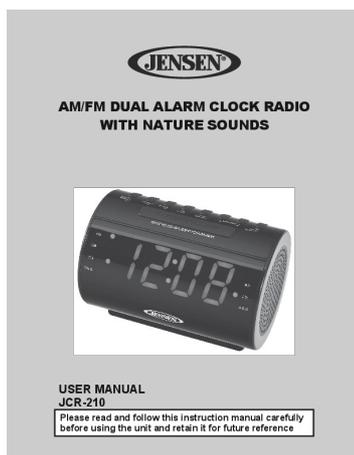
[Download Official User Manual \(PDF\)](#)

Related Documents - JCR-210

	<p>Jensen JCR-370 Mood Lamp Digital Dual Alarm Clock Radio User Manual</p> <p>Discover the Jensen JCR-370 Mood Lamp Digital Dual Alarm Clock Radio. This user manual details setup, dual alarms, mood lighting, FM radio, nature sounds, AUX input, and USB charging for optimal use.</p>
	<p>Jensen JCR-210 AM/FM Dual Alarm Clock Radio with Nature Sounds - User Manual</p> <p>Comprehensive user manual for the Jensen JCR-210 AM/FM Dual Alarm Clock Radio with Nature Sounds. Learn how to set the clock, use the radio, nature sounds, alarms, and sleep timer. Includes safety instructions and specifications.</p>
	<p>Jensen JCR-228 Digital Bluetooth AM/FM Dual Alarm Clock Radio User Manual</p> <p>Comprehensive user manual for the Jensen JCR-228 Digital Bluetooth AM/FM Dual Alarm Clock Radio. This guide covers setup, safety instructions, operation of radio, Bluetooth, alarms, auxiliary input, sleep timer, specifications, troubleshooting, and warranty information.</p>

 <p>JENSEN DUAL ALARM CLOCK RADIO WITH AUTO TIME SET</p> <p>USER MANUAL JCR-230</p> <p>PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.</p>	<p>Jensen JCR-230 Dual Alarm Clock Radio with Auto Time Set User Manual</p> <p>Comprehensive user manual for the Jensen JCR-230 Dual Alarm Clock Radio with Auto Time Set. Learn about setup, operation, safety instructions, features, troubleshooting, and warranty.</p>
 <p>JENSEN DIGITAL AM/FM DUAL ALARM CLOCK RADIO WITH WAVE SENSOR</p> <p>JCR-231 USER MANUAL</p> <p>PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.</p>	<p>Jensen JCR-231 Digital AM/FM Dual Alarm Clock Radio with Wave Sensor User Manual</p> <p>Comprehensive user manual for the Jensen JCR-231 digital AM/FM dual alarm clock radio with wave sensor, covering setup, operation, safety instructions, troubleshooting, and warranty information.</p>
 <p>JENSEN AM/FM Digital Dual Alarm Clock Radio WITH UNDER PILLOW VIBRATOR</p> <p>MODEL: JCR-255 USER MANUAL</p> <p>PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.</p>	<p>Jensen JCR-255 AM/FM Digital Dual Alarm Clock Radio with Under Pillow Vibrator User Manual</p> <p>Comprehensive user manual for the Jensen JCR-255 AM/FM Digital Dual Alarm Clock Radio with Under Pillow Vibrator, covering setup, operation, safety, and troubleshooting.</p>

Documents - Jensen – JCR-210



[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Jensen JCR 210 JCR210 manualsandmore |||
AM/FM DUAL ALARM CLOCK RADIO WITH NATURE SOUNDS USER MANUAL JCR-210 Please read and follow this instruction manual carefully before using the unit and retain it for future reference **WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNL...**

lang:en score:30 filesize: 3.87 M page_count: 13 document date: 2019-07-24



**AM/FM DUAL ALARM CLOCK RADIO
WITH NATURE SOUNDS**



**USER MANUAL
JCR-210**

Please read and follow this instruction manual carefully before using the unit and retain it for future reference.

[\[pdf\]](#) User Manual Owner's Manual Installation Guide Instructions

Owner Manual Modern Contemporary Digital No Electric Tabletop Clock with Alarm in Black Jensen
jnn1220 JCR 210Jensen 210owner manualsecure img1 ag wfcnd dm document dca6d67b 8324 4b8a
9f15 6c6689982213 owner manual AM FM Dual Radio Nature Sounds Reviews Wayfairsecure
manualassets |||

**AM/FM DUAL ALARM CLOCK RADIO WITH NATURE SOUNDS USER MANUAL
JCR-210** Please read and follow this instruction manual carefully before using the unit
and retain it for future reference **WARNING TO PREVENT FIRE OR SHOCK
HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE
OR OTHER OUTLET UNL...**

lang:en score:18 filesize: 10.01 M page_count: 13 document date: 2015-10-16