



Manuals.plus /

› **Skullcandy /**

› Skullcandy Crusher Wireless Bluetooth Headphones User Manual

Skullcandy S6CRW-K591

Skullcandy Crusher Wireless Bluetooth Headphones User Manual

Model: S6CRW-K591

Brand: Skullcandy

1. INTRODUCTION AND OVERVIEW

The Skullcandy Crusher Wireless Headphones provide a unique audio experience with multi-sensory bass that allows you to not just hear, but also feel your music. Designed for comfort and extended use, these over-ear headphones feature noise isolation and long battery life, making them suitable for various activities from entertainment to fitness.



Figure 1.1: Skullcandy Crusher Wireless Headphones. These headphones are designed for immersive audio with powerful bass.

2. WHAT'S IN THE BOX

Upon unboxing your Skullcandy Crusher Wireless Headphones, please ensure all the following components are present:

- Crusher® Wireless Headphones
- USB-C Charging Cable
- Backup AUX Cable
- Quick Start & User Guides



Figure 2.1: Included components with the Skullcandy Crusher Wireless Headphones. The package contains the headphones, charging cable, AUX cable, and a travel bag.

3. PRODUCT FEATURES

The Skullcandy Crusher Wireless Headphones are equipped with several features designed to enhance your listening experience:

- **Patented Multi-Sensory Crusher Bass Technology:** Features two full-range 40mm audio drivers and additional dual bass drivers for an immersive sound experience you can feel.
- **Extended Battery Life:** Enjoy up to 40 hours of playtime on a single charge.
- **Rapid Charge:** A quick 10-minute charge provides an extra 3 hours of playtime.
- **Noise Isolating Over-Ear Fit:** The closed-back design offers exceptional passive isolation, reducing external noise.
- **Integrated Microphone:** For hands-free calling.
- **Foldable Design:** For easy storage and portability.

Crusher Wireless



**BLUETOOTH®
WIRELESS**



**CRUSHER
BASS**



**50 HOURS
OF BATTERY**

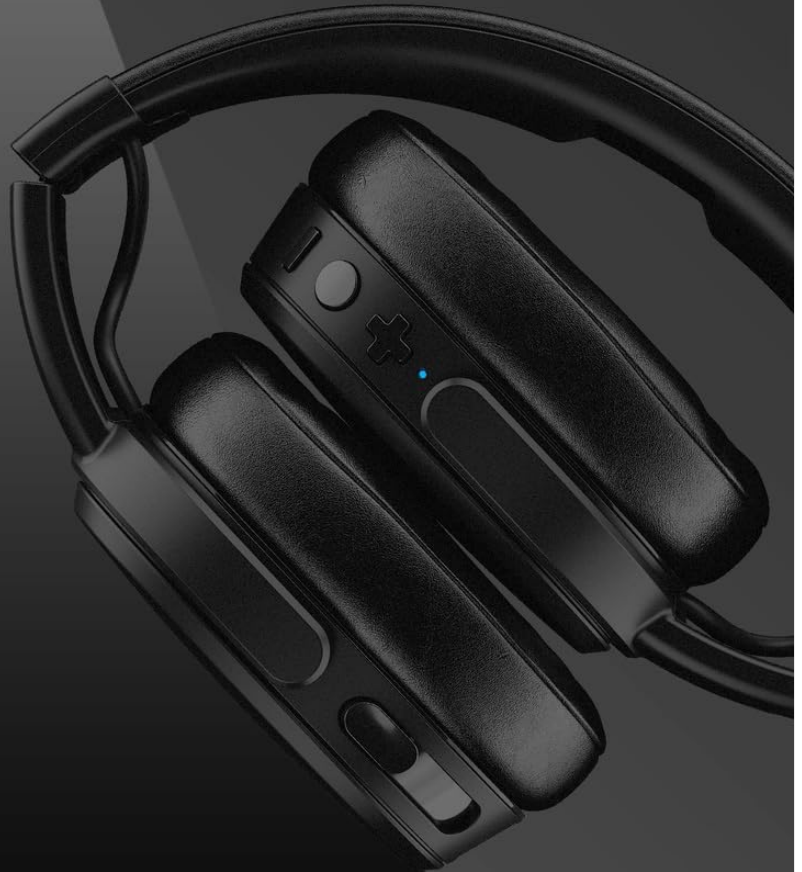


Figure 3.1: Key features of the Crusher Wireless Headphones, including Bluetooth connectivity, Crusher Bass, and extended battery life.



USER GUIDE

Crusher Wireless



Figure 3.2: The multi-sensory bass technology provides an immersive audio experience.

4. SETUP

4.1. Charging Your Headphones

Before initial use, fully charge your Skullcandy Crusher Wireless Headphones. Use the provided USB-C charging cable to connect the headphones to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status.

- A full charge provides up to 40 hours of listening time.
- For quick power, a 10-minute charge yields approximately 3 hours of playtime.

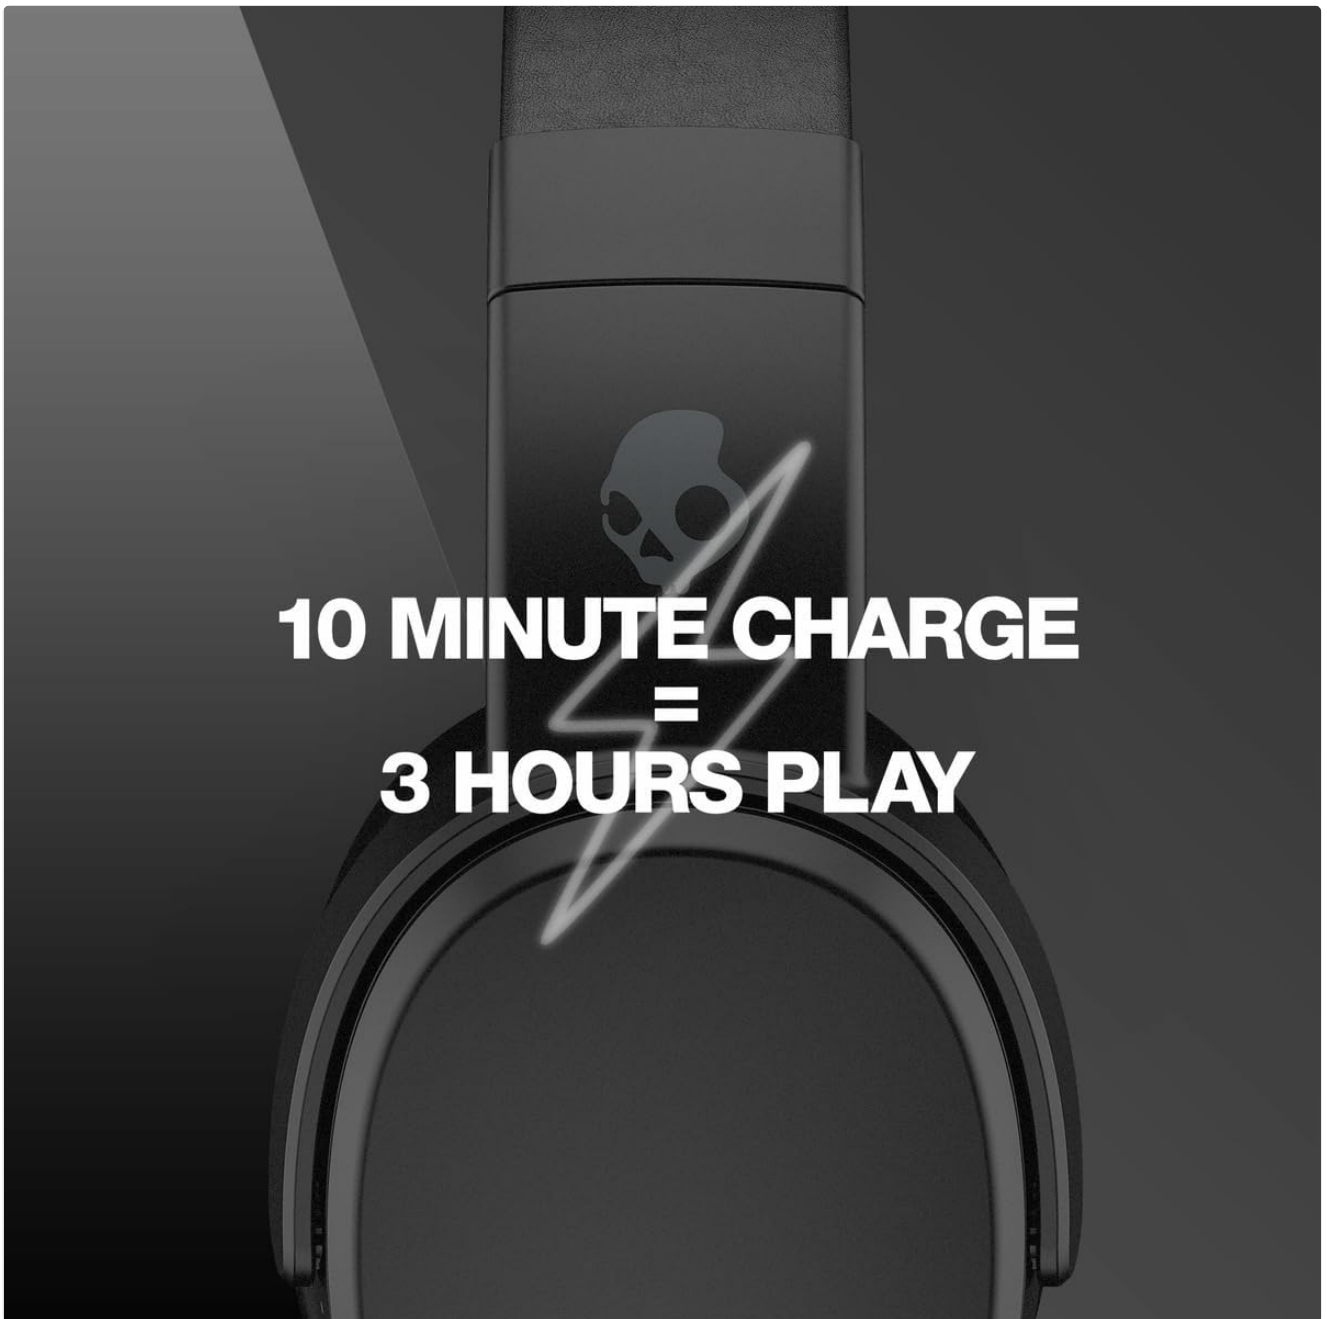


Figure 4.1: The rapid charge feature provides significant playtime from a short charge.

4.2. Bluetooth Pairing

To connect your headphones wirelessly to a device:

1. Ensure your headphones are powered off.
2. Press and hold the main power button for 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Crusher Wireless" from the list of found devices.
5. Once connected, the LED indicator will turn solid blue.

4.3. Wired Connection (AUX)

For a wired connection, use the provided Backup AUX Cable:

1. Plug one end of the AUX cable into the 3.5mm audio jack on your headphones.
2. Plug the other end into the audio output jack of your device.
3. The headphones will automatically switch to wired mode.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **Power On:** Press and hold the main power button for 3 seconds.
- **Power Off:** Press and hold the main power button for 3 seconds.

5.2. Volume Control

Adjust the listening volume using the dedicated buttons on the earcup:

- **Volume Up:** Press the '+' button.
- **Volume Down:** Press the '-' button.

5.3. Bass Control

The unique multi-sensory bass can be adjusted to your preference:

- **Increase Bass:** Slide the bass slider upwards.
- **Decrease Bass:** Slide the bass slider downwards.



Figure 5.1: Location of volume controls and the adjustable bass slider on the earcup.

5.4. Call Management

Manage phone calls using the multi-function button:

- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.

5.5. Music Playback

Control your music playback using the multi-function button:

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press the multi-function button twice.
- **Previous Track:** Press the multi-function button three times.

6. MAINTENANCE

6.1. Cleaning

To maintain the condition of your headphones:

- Wipe the earcups and headband with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture in any openings.

6.2. Storage

When not in use, store your headphones properly:

- Store them in the provided travel bag to protect them from dust and scratches.
- Avoid storing in extreme temperatures (hot or cold) or high humidity.
- Do not place heavy objects on top of the headphones.

7. TROUBLESHOOTING

If you encounter issues with your Skullcandy Crusher Wireless Headphones, try the following solutions:

Problem	Possible Solution
Headphones won't power on	Ensure the headphones are fully charged. Connect to a power source and wait a few minutes before attempting to power on.
Cannot pair via Bluetooth	Ensure headphones are in pairing mode (flashing blue/red LED). Turn off and on your device's Bluetooth. Forget the device in your Bluetooth settings and try pairing again.
No sound or distorted audio	Check volume levels on both headphones and connected device. Ensure Bluetooth connection is stable or AUX cable is fully inserted. Try restarting both devices.
Bass is too strong/weak	Adjust the bass slider on the earcup to your desired level.

8. SPECIFICATIONS

Key technical specifications for the Skullcandy Crusher Wireless Headphones:

- **Model Name:** Crusher Wireless
- **Item Model Number:** S6CRW-K591
- **Connectivity Technology:** Bluetooth 4.1 (backward compatible)
- **Wireless Communication Technology:** Bluetooth
- **Audio Driver Size:** 40 Millimeters (full-range) + Dual Bass Drivers
- **Frequency Range:** 20Hz - 20kHz
- **Impedance:** 32 Ohm
- **Battery Life:** Up to 40 Hours
- **Rapid Charge:** 10 minutes charge = 3 hours play
- **Noise Control:** Sound Isolation (Passive)
- **Headphones Jack:** 3.5 mm Jack
- **Control Type:** Volume Control, Bass Slider, Multi-function Button
- **Item Weight:** 9.7 ounces
- **Product Dimensions:** 7 x 6.88 x 3.54 inches

9. WARRANTY AND SUPPORT

Your Skullcandy Crusher Wireless Headphones come with a 1-year US warranty. For detailed warranty information and support, please refer to the official warranty document.

You can access the full warranty document here: [Skullcandy Warranty \(PDF\)](#)

For further assistance or technical support, please visit the official Skullcandy support website or contact their customer service.