

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Severin](#) /
- › [SEVERIN 3-in-1 Microwave Oven with Grill and Hot Air Function User Manual](#)

Severin MW 7865

SEVERIN 3-in-1 Microwave Oven with Grill and Hot Air Function

User Manual

Model: MW 7865

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your new SEVERIN 3-in-1 Microwave Oven with Grill and Hot Air Function, Model MW 7865. Please read this manual thoroughly before using the appliance and keep it for future reference.

Your SEVERIN microwave oven is a versatile appliance designed to heat, grill, and bake. It offers ten different power levels, including dedicated defrost and grilling functions, along with nine automatic cooking programs for a wide variety of dishes. The microwave, grill, and hot air functions can be used independently or in combination. The digital multifunction display with its modern LCD and timer ensures intuitive operation. For quick heating, a 'Quick' button allows for direct full-power start. Two included grill racks provide additional cooking space.



Figure 1: Front view of the SEVERIN 3-in-1 Microwave Oven, Model MW 7865, showing the control panel, door handle, and viewing window.

SETUP AND INSTALLATION

Unpacking

1. Carefully remove the microwave oven from its packaging.
2. Remove all packing materials, including any protective film or tape from the appliance and accessories.
3. Check for any damage during transit. If the appliance appears damaged, do not use it and contact your retailer.

Placement

Place the microwave oven on a stable, flat, heat-resistant surface, such as a kitchen countertop. Ensure there is adequate ventilation around the appliance. Do not block any ventilation openings.

- Allow at least 20 cm (7.9 inches) of space above the oven.
- Allow at least 10 cm (3.9 inches) of space at the rear and sides.
- Keep the appliance away from heat sources and moisture.

The product dimensions are approximately 45.7 cm (length) x 40 cm (width) x 26.3 cm (height).



Figure 2: Dimensions of the SEVERIN Microwave Oven, showing approximate length, width, and height for proper placement.

Power Connection

Ensure the voltage indicated on the appliance's rating label matches your local mains voltage (230V). Plug the power cord into a properly grounded wall socket. Do not use extension cords or adapters.

Included Components

The package includes:

- 1 x SEVERIN Microwave Oven with Grill and Convection (Model MW 7865)
- 1 x User Manual (this document)
- 2 x Grill Racks
- 1 x Glass Turntable



Figure 3: Interior view of the microwave oven, showing the glass turntable and one of the included grill racks in place.

OPERATING INSTRUCTIONS

Control Panel Overview

The microwave oven features a digital multifunction display and a control panel with various buttons and a rotary knob for easy operation.



Figure 4: Detailed view of the digital control panel, showing the display, buttons, and rotary knob.

Basic Operation (Microwave)

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Select the desired power level (10 levels available) using the appropriate button or rotary knob.
4. Set the cooking time using the timer function.
5. Press the Start button to begin cooking.

Grill Function

The grill function is ideal for browning and crisping food. Use the included grill racks for best results.

1. Place food on a grill rack.
2. Select the grill function.
3. Set the desired grilling time.
4. Press Start.

Hot Air (Convection) Function

The hot air function allows for baking and roasting, similar to a conventional oven.

1. Place food in an oven-safe dish.
2. Select the hot air function and desired temperature.
3. Set the cooking time.
4. Press Start.

Combination Cooking

This appliance allows you to combine microwave, grill, and hot air functions for versatile cooking results. Refer to the specific combination programs in the full manual for detailed instructions.

Automatic Programs

The oven features nine automatic cooking programs, including a pizza function, for convenient preparation of common dishes. Simply select the program and the appliance will automatically set the optimal cooking time and power.

Defrost Function

Use the defrost function to safely thaw frozen foods. You can typically defrost by weight or by time.

Quick Start

The 'Quick' button allows for an immediate start at full microwave power, typically for 30-second intervals, which can be extended by pressing the button repeatedly.

CARE AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your SEVERIN microwave oven. Always unplug the appliance from the power outlet before cleaning.

Cleaning the Interior

- Wipe the interior cavity, including the stainless steel inner material, with a damp cloth and mild detergent after each

use.

- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.
- Ensure the waveguide cover (usually on the right side of the interior) is clean and free of food particles.

Cleaning the Exterior

- Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Wipe the control panel gently with a dry or slightly damp cloth. Avoid excessive moisture.

Cleaning Accessories

- The glass turntable and grill racks can be washed in warm, soapy water or in a dishwasher.
- Ensure all accessories are completely dry before placing them back into the oven.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse/circuit breaker.
Food not heating/cooking properly.	Incorrect power level/time set; Food not suitable for microwave; Ventilation blocked.	Adjust power level and cooking time; Use microwave-safe dishes; Ensure adequate ventilation around the oven.
Display not working.	Power interruption; Appliance malfunction.	Unplug the oven for a few minutes, then plug it back in; If problem persists, contact customer service.
Unusual noise during operation.	Turntable not correctly placed; Food container touching oven walls.	Ensure turntable is correctly seated; Adjust food container position.

If the problem persists after trying these solutions, please contact SEVERIN customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Severin
Model Information	MW 7865
Product Dimensions (L x W x H)	45.7 x 40 x 26.3 cm
Weight	14.07 kg (approx. 31.02 lbs)
Capacity	20 Liters
Annual Energy Consumption	2 Kilowatt-hours per year

Feature	Specification
Installation Type	Countertop
Special Features	10 power levels (including defrost, grill), Acoustic signal, Automatic programs, Hot air function
Oven Cooking Mode	Convection
Color	Black and Silver
Voltage	230V
Wattage	800 watts
Material Types	Stainless Steel
Inner Material	Stainless Steel
Control Type	Button

WARRANTY AND SUPPORT

Warranty Information

SEVERIN products are manufactured to high quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official SEVERIN website for detailed warranty terms and conditions applicable in your region.

Customer Support

For technical assistance, spare parts, or any questions regarding your SEVERIN microwave oven, please contact SEVERIN customer support. Contact details can typically be found on the official SEVERIN website or in the warranty documentation.

You can also visit the [SEVERIN Store on Amazon](#) for more product information and support resources.

© 2024 SEVERIN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - MW 7865



[SEVERIN Mikrowelle mit Grillfunktion - Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für die SEVERIN Mikrowelle mit Grillfunktion, Modellreihen MW 7892, MW 7893, MW 7894, MW 7898. Erfahren Sie mehr über Sicherheit, Bedienung und Funktionen wie Aufтаuen, Erwärmen und Grillen.



[SEVERIN MW 7892/7893/7894/7898 Mikrowelle Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für die SEVERIN Retro-Mikrowelle mit Grillfunktion, Modelle MW 7892, MW 7893, MW 7894, MW 7898. Enthält Sicherheitshinweise, Bedienung, Programme und technische Daten in mehreren Sprachen.



ART-Nr.	MW 17/15	MW 78/03
SE	Gebräuchsanweisung	Wirkungsweise
SE	Gebräuchsanweisung für use	Wirkungsweise
SE	Gebräuchsanweisung für use	Wirkungsweise
NL	Gebruiksaanwijzing	Wirkungsweise
ES	Instrucciones de uso	Norma de indicaciones
IT	Manuale d'uso	Norme a conoscere
DE	Druckanweisung	Wirkungsweise
PL	Instrukcja użycia	Kierunki użytkowania
GR	Οδηγίες σφραγίδων	Εφαρμογή σφραγίδων
RU	Руководство по эксплуатации	Инструкция по эксплуатации

Severin MW 7775 / MW 7803 Microwave Oven User Manual

Comprehensive user manual for the Severin MW 7775 and MW 7803 microwave ovens, covering operation, safety instructions, and features like microwave, grill, and hot air functions.



ART-NR	MW 1776	
BE	Gebrachter Kasten	Winkelblech
BB	Instrumente für viele	Wasser-eisen
FE	Mede d'engol	Feuer-eisen-anter
NL	Ondekoratieve kasten	Magazin-eisen
NO	Onversierde kasten	Werk-eisen
PL	Moniale d'esse	Perme anemoneide
SI	Preparatienkasten	Wirkstoffe-pot
SE	Ordnungsarbitri	Wirkstoffe-szug
SK	Kräpftisch	Wirkstoffe-basis
PT	Manual de antropologia	Werde-ordine
DE	Medizinische anatomie	Wirkstoffe-makrobiotis
GR	Olfaktori spirosc	Alpha-oxigen, eng respiro

SEVERIN MW 7778 Mikrowelle Bedienungsanleitung | Grill & Heißluft

Entdecken Sie die SEVERIN MW 7778 Mikrowelle mit dieser vollständigen Bedienungsanleitung. Erfahren Sie alles über Funktionen, Sicherheit, Bedienung und Pflege für Ihr Küchengerät.



ART.-NO.	MW 7360	ART.-NO.	MW 7361
DE	Deutschsprachiges	DE	Deutschsprachiges
EN	Englischsprachiges	EN	Englischsprachiges
FR	Franssprachiges	FR	Franssprachiges
NL	Nederlandstalig	NL	Nederlandstalig
ES	Instructions de mise en service	ES	Instructions de mise en service
IT	Manuale d'uso	IT	Manuale d'uso
SC	Deutschsprachiges	SC	Deutschsprachiges
CH	Deutschsprachiges	CH	Deutschsprachiges
PL	Polnischsprachiges	PL	Polnischsprachiges

SEVERIN MW 7760 Mikrowelle mit Grill – Bedienungsanleitung

Umfassende Bedienungsanleitung für die SEVERIN MW 7760 Mikrowelle mit Grill. Enthält Informationen zu Sicherheit, Bedienung, Funktionen und technischen Daten von SEVERIN.



Severin PG 8107 Barbecue Grill Parts Diagram and Overview

An exploded view and parts list for the Severin PG 8107 Barbecue Grill, detailing all components for assembly and maintenance.

