

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bushnell](#) /

› [Bushnell Neo Ghost Golf GPS User Manual](#)

Bushnell 368222

Bushnell Neo Ghost Golf GPS User Manual

Model: 368222

1. INTRODUCTION

Thank you for choosing the Bushnell Neo Ghost Golf GPS. This compact and easy-to-use device is designed to provide accurate golf course distances, enhancing your game experience. It features preloaded courses, auto course recognition, auto hole advance, and displays distances to the front, center, and back of greens, along with custom hazard and layup distances.

This manual provides detailed instructions on how to set up, operate, and maintain your Neo Ghost Golf GPS, ensuring optimal performance and longevity.

2. SAFETY INFORMATION

Please read and understand all safety information before using your Bushnell Neo Ghost Golf GPS. Failure to follow these instructions could result in injury or damage to the device.

- Do not attempt to disassemble or modify the device. This will void the warranty and could cause damage.
- Keep the device away from extreme temperatures, direct sunlight, and high humidity.
- Avoid dropping the device or subjecting it to severe impacts.
- Use only the charging cable provided or approved by Bushnell.
- Do not immerse the device in water. While designed for outdoor use, it is not fully waterproof.
- Dispose of the device and its battery responsibly according to local regulations.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Bushnell Neo Ghost Golf GPS.



Figure 3.1: Front view of the Bushnell Neo Ghost Golf GPS. The display shows current hole information and distances.



Figure 3.2: Back view of the Bushnell Neo Ghost Golf GPS, indicating the location and labels of the control buttons.



Figure 3.3: Top-down view of the Bushnell Neo Ghost Golf GPS, highlighting its compact and square design.

Controls and Ports:

- **PWR Button:** Power On/Off.
- **MENU Button:** Access settings and options.
- **SHOT Button:** Measure shot distance.
- **UP/DOWN Buttons:** Navigate through menus or adjust settings.
- **SELECT Button:** Confirm selections.
- **USB Port:** For charging and data transfer (e.g., course updates).

4. SETUP

4.1 Charging the Device

Before first use, fully charge your Bushnell Neo Ghost Golf GPS. A full charge provides approximately 10 hours of battery life, sufficient for multiple rounds of golf.

1. Connect the small end of the supplied USB cable to the USB port on the Neo Ghost device.
2. Connect the large end of the USB cable to a USB charging adapter (not included) or a computer's USB port.
3. The device display will indicate charging status. Charging typically takes a few hours.
4. Once fully charged, disconnect the device from the charging cable.

4.2 Initial Power On and Settings

1. Press and hold the **PWR** button until the Bushnell logo appears on the screen.
2. Upon first power-on, you may be prompted to select a language or unit of measure (Yards/Meters). Use the **UP/DOWN** buttons to navigate and **SELECT** to confirm.
3. The device is preloaded with over 30,000 courses worldwide. No initial course download is typically required before playing.

5. OPERATING INSTRUCTIONS

5.1 Starting a Round

1. Power on the device by pressing and holding the **PWR** button.
2. Ensure you are outdoors with a clear view of the sky for optimal GPS signal acquisition. The device will automatically search for nearby golf courses.
3. Once a course is found, the device will automatically recognize it and display the current hole number and distances.
4. If multiple courses are nearby, use the **UP/DOWN** buttons to select the correct course and press **SELECT**.

5.2 Understanding the Display

The main display shows key information for the current hole:

- **Hole Number:** Indicates the current hole you are playing.
- **Par:** The par for the current hole.
- **Distances:** Displays distances to the front, center, and back of the green. The largest number is typically the center distance.

5.3 Auto Hole Advance

The Neo Ghost automatically advances to the next hole as you move from one green to the next tee box. This feature ensures you always have the correct hole information without manual intervention.

5.4 Hazard and Layup Distances

The device can display up to four custom hazard and layup distances per hole. To view these:

- While on a hole, press the **UP** or **DOWN** button to cycle through the available hazard and layup distances.
- The display will show the distance and a brief identifier for the hazard (e.g., "Bunker," "Water," "Layup").

5.5 Shot Distance Measurement

To measure the distance of your shot:

1. At your starting point (e.g., tee box or where you hit your shot), press the **SHOT** button. The display will show "0.0".
2. Walk to where your ball landed. The distance displayed will continuously update, showing the distance from your starting point.
3. To reset for another shot, press the **SHOT** button again.

5.6 Menu Navigation

To access the device's menu for settings and options:

1. Press the **MENU** button.
2. Use the **UP/DOWN** buttons to scroll through menu options (e.g., "Settings," "About," "Exit").
3. Press **SELECT** to enter a sub-menu or confirm an option.

4. Press **MENU** again to go back to the previous screen or exit the menu.

6. MAINTENANCE

6.1 Cleaning

To keep your Neo Ghost in optimal condition:

- Wipe the device with a soft, clean, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Ensure the USB port is clean and dry before charging.

6.2 Storage

When not in use for extended periods:

- Store the device in a cool, dry place, away from direct sunlight.
- Avoid storing in extremely hot or cold environments.
- For long-term storage, charge the battery to about 50% to preserve its lifespan. Recharge every few months if not used.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device will not power on.	Battery is depleted.	Charge the device fully using the supplied USB cable.
No GPS signal or course found.	Not outdoors, obstructed view of sky, or device needs more time.	Ensure you are in an open area with a clear view of the sky. Wait a few minutes for the device to acquire satellites.
Incorrect distances displayed.	Device is on the wrong course or hole.	Verify the displayed course and hole number. If incorrect, manually select the correct course from the menu or advance/go back a hole. Ensure the device has a strong GPS signal.
Battery life is shorter than expected.	Old battery, frequent use in cold weather, or backlight settings.	Ensure the device is fully charged. Avoid extreme cold. Adjust backlight settings to a lower level if possible. Battery degradation is normal over time.

8. SPECIFICATIONS

Detailed technical specifications for the Bushnell Neo Ghost Golf GPS.



Figure 8.1: Size comparison of the Bushnell Neo Ghost Golf GPS with a standard golf ball.

Feature	Detail
Model Name	Neo Ghost
Model Number	368222
Color	White
Item Dimensions (LxWxH)	2.2 x 2.2 x 0.67 inches (5.6 x 5.6 x 1.7 cm)
Item Weight	0.1 Kilograms (approx. 3.5 oz)
Screen Size	1.4 Inches
Battery Life	Up to 10 Hours
Connectivity Technology	USB
Preloaded Courses	30,000+ worldwide
Included Components	1 x Golf Ball Tracker (Bushnell Neo Ghost GPS), USB Charging Cable
Special Feature	Tournament legal
Auto Features	Auto Course Recognition, Auto Hole Advance
Distance Readings	Front, Center, Back of Green; up to four custom hazard/layout distances per hole

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Bushnell products are manufactured to the highest standards and are designed to provide reliable performance. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or visit the official Bushnell website. Keep your proof of purchase for warranty claims.

9.2 Customer Support

If you encounter any issues or have questions regarding your Bushnell Neo Ghost Golf GPS that are not covered in this manual, please contact Bushnell Customer Service. You can find contact information, FAQs, and additional resources on the official Bushnell website:

www.bushnellgolf.com/support/

When contacting support, please have your product model number (368222) and a description of your issue ready.

