

SMINIKER 1

Sminiker Professional Cordless Hair Clippers

Model: 1

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the Sminiker Professional Cordless Hair Clippers. This manual provides essential information for the safe and effective operation, maintenance, and care of your hair cutting kit. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

- **Do not disassemble the product:** Attempting to disassemble the clipper can cause damage and voids the warranty.
- **Cleaning:** The product should only be cleaned with a cloth dampened with a little water or mild soap liquid. Do not immerse the unit in water.
- **Children:** This product is safe for use on children, but adult supervision is recommended during operation.
- **Power Source:** Use only the provided USB cord for charging. Ensure the power input is within the specified range of 100V-240V 50/60HZ.
- **Blade Care:** The R-shaped rounded edge design of the blade helps prevent accidental skin injury. Handle blades with care.

3. PACKAGE CONTENTS

Your Sminiker Professional Cordless Hair Clippers kit includes the following items:

- 1 x Sminiker Cordless Hair Clippers
- 1 x USB Cord

- 1 x Cleaning Brush
- 9 x Comb Attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm, plus additional sizes)
- 2 x Scissors
- 1 x Long Comb
- 1 x Hairdressing Cape

4. PRODUCT OVERVIEW

The Sminiker Professional Cordless Hair Clippers are designed for efficient and precise hair cutting. Key features include:

- **Blades:** Equipped with a titanium blade combined with a ceramic movable blade for sharp, long-lasting cutting performance. The titanium blade resists rust.
- **Motor:** Features an upgraded precision motor for low vibration and ultra-quiet operation (approximately 50 dB), ensuring comfort during use.
- **Length Adjustment:** Offers 5 precise length settings directly on the clipper, in addition to multiple guide combs for various hair lengths.
- **Power:** Can be used cordlessly with its built-in lithium battery or corded while charging.



Figure 1: Sminiker Hair Clipper Features Overview



Figure 2: Quiet Operation Feature

5. SETUP AND CHARGING

Before initial use, ensure the clipper is fully charged.

1. **Charging:** Connect the USB cord to the clipper and a suitable power adapter (not included). The charging time is approximately 2-3 hours for a full charge.
2. **Battery Life:** A fully charged battery provides up to 8 hours of cordless operation.
3. **Corded Use:** The clipper can also be used directly with the power cord if the battery is low or uncharged.



2000mAh

Lithium battery

Sminiker

8
Hours
Runtime

2-3
Hours
Charging Time



Figure 3: Battery and Charging Information

Corded Use



Cordless Use

Figure 4: Corded and Cordless Operation

6. OPERATING INSTRUCTIONS

Follow these steps for effective hair cutting:

1. **Prepare Hair:** Ensure hair is clean and dry before cutting. Use the hairdressing cape to keep hair off clothing.
2. **Select Length:** Choose the desired hair length by adjusting the 5 precise length settings on the clipper body (0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm). For longer cuts, attach one of the comb guides (3mm, 6mm, 9mm, 12mm, 15mm, 18mm) to the clipper head.
3. **Begin Cutting:** Turn on the clipper. Hold the clipper against the hair, moving it slowly against the direction of hair growth. For an even cut, ensure the comb guide lies flat against the scalp.
4. **Even Trimming:** The leveled combs allow for easy and perfectly even trimming.

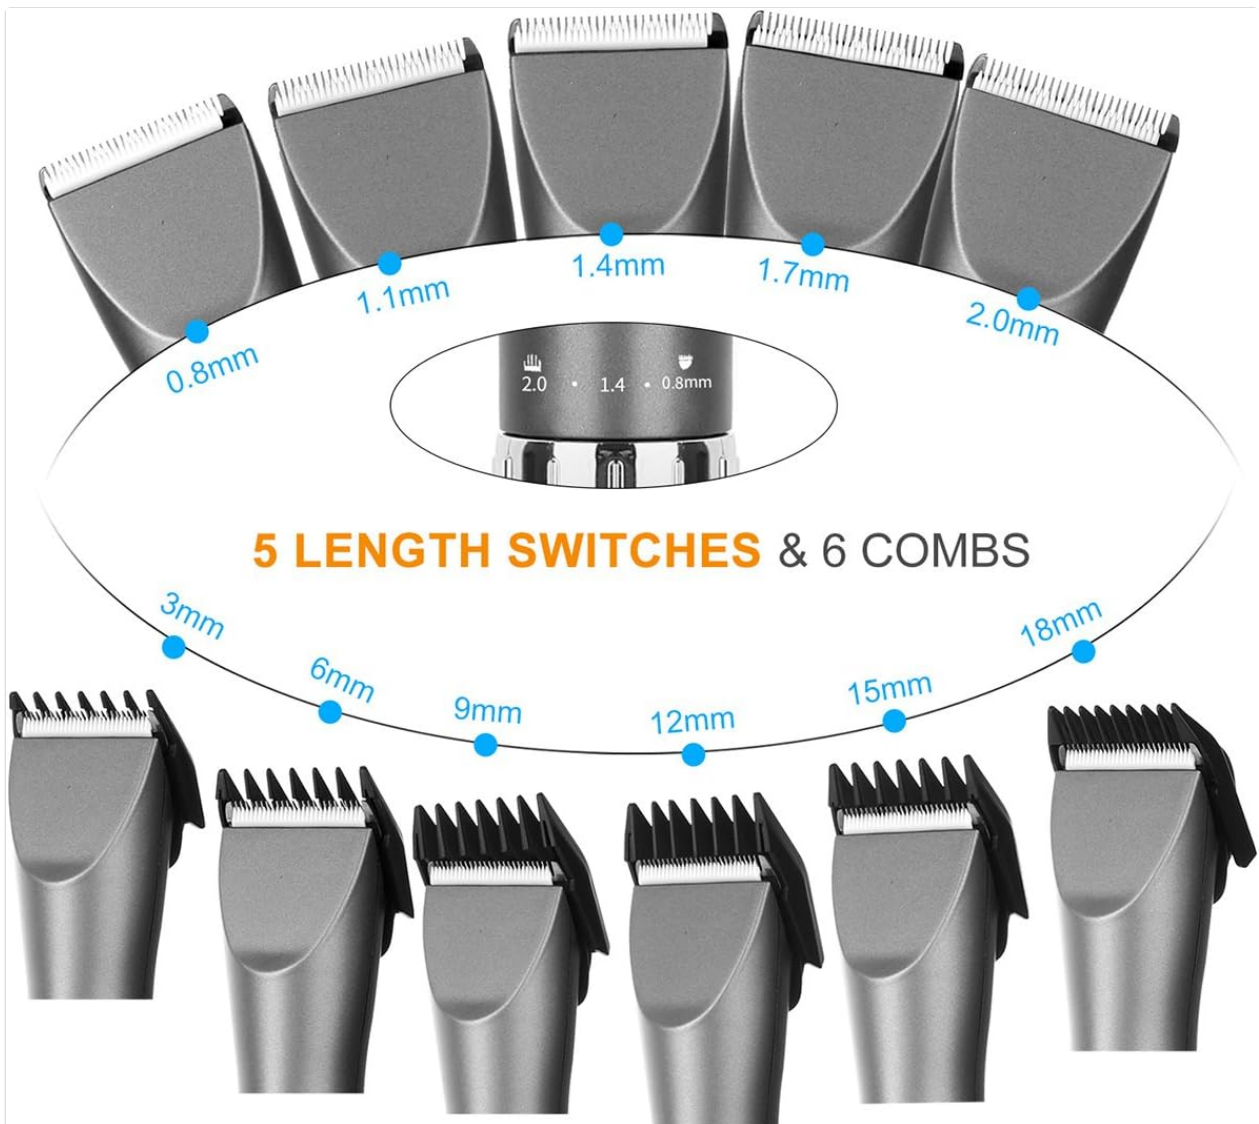


Figure 5: Length Settings and Comb Guides



Figure 6: Hair Clipper in Use

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your clippers.

1. **Cleaning the Blades:** After each use, turn off the clipper and remove any attached comb guides. Use the provided cleaning brush to remove loose hairs from the blades.
2. **Blade Disassembly:** To thoroughly clean or oil the blades, you may carefully disassemble them. Place your thumb on the blade and push it down to detach.
3. **Blade Installation:** To re-install, point the blade to the main handle, push them up until they click into place, and fix them securely.
4. **Oiling:** Apply a small drop of the included oil to the blades after cleaning to maintain smooth operation.
5. **General Cleaning:** Wipe the clipper body with a damp cloth and mild soap solution. Do not use abrasive cleaners or immerse the unit in water.

Blade Disassemble



Put your thumb on the blade



Push it down



Take it

Blade Installation



Point to main handle



Push them up



Fix them

Figure 7: Blade Disassembly and Installation

8. TROUBLESHOOTING

If you encounter issues with your Sminiker Hair Clippers, consider the following:

- **Clipper not turning on:** Ensure the battery is charged. If using corded, check the power connection.
- **Reduced cutting performance:** Clean the blades thoroughly and apply oil. Ensure no hair is trapped between the blades. Check if the comb guide is correctly attached.
- **Unusual noise:** Clean and oil the blades. If the noise persists, ensure the blades are correctly installed.

For further assistance, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Input Power	100V-240V 50/60HZ

Charging Time	2-3 hours
Runtime	8 hours
Net Weight	575g (1.28 Pounds)
Power Cord Length	Approx. 180cm
Blade Material	Ceramic, Titanium
Item Model Number	1

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included in your package or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.