

FRANKE 110.0361.903

Franke 110.0361.903 Wall-Mounted Range Hood User Manual

Model: 110.0361.903 | Brand: FRANKE

Introduction	Safety	Overview	Setup	Operation	Maintenance	Troubleshooting
				Warranty & Support		
		Specifications				

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Franke 110.0361.903 Wall-Mounted Range Hood. Please read this manual thoroughly before using the appliance to ensure safe and efficient operation. Retain this manual for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or personal injury.

- Ensure the electrical supply matches the voltage specified on the rating plate.
- Installation must be performed by a qualified technician in accordance with local regulations.
- Do not flambé under the range hood.
- Regularly clean grease filters to prevent fire hazards.
- Do not leave frying food unattended.
- Ensure adequate ventilation in the room when the range hood is used simultaneously with gas or other fuel-burning appliances.
- Disconnect the appliance from the main power supply before any cleaning or maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

The Franke 110.0361.903 is a stylish and efficient wall-mounted range hood designed to extract cooking fumes and odors from your kitchen. It features a 90 cm wide design with a white glass and stainless steel finish, offering both functionality and modern aesthetics.



Figure 3.1: Front view of the Franke 110.0361.903 Wall-Mounted Range Hood. This image displays the sleek white glass panel and stainless steel body, with touch controls visible on the front surface.

Key features include:

- 90 cm width, suitable for various hob sizes.
- White glass and stainless steel construction.

- Three fan speed levels plus an intensive boost function.
- Efficient air extraction with Ø 150/120 mm air ducts.
- Integrated aluminum grease filter for easy maintenance.
- Low noise operation, with a maximum sound level of 65 dB(A) and minimum of 53 dB(A).

4. INSTALLATION AND SETUP

Proper installation is crucial for the performance and safety of your range hood. Refer to the dimensional drawings and consult a qualified installer if you are unsure about any steps.

4.1 Mounting Dimensions

The following diagrams illustrate the necessary dimensions for mounting the range hood and its chimney. Ensure sufficient clearance from the cooking surface as per local building codes and manufacturer recommendations.

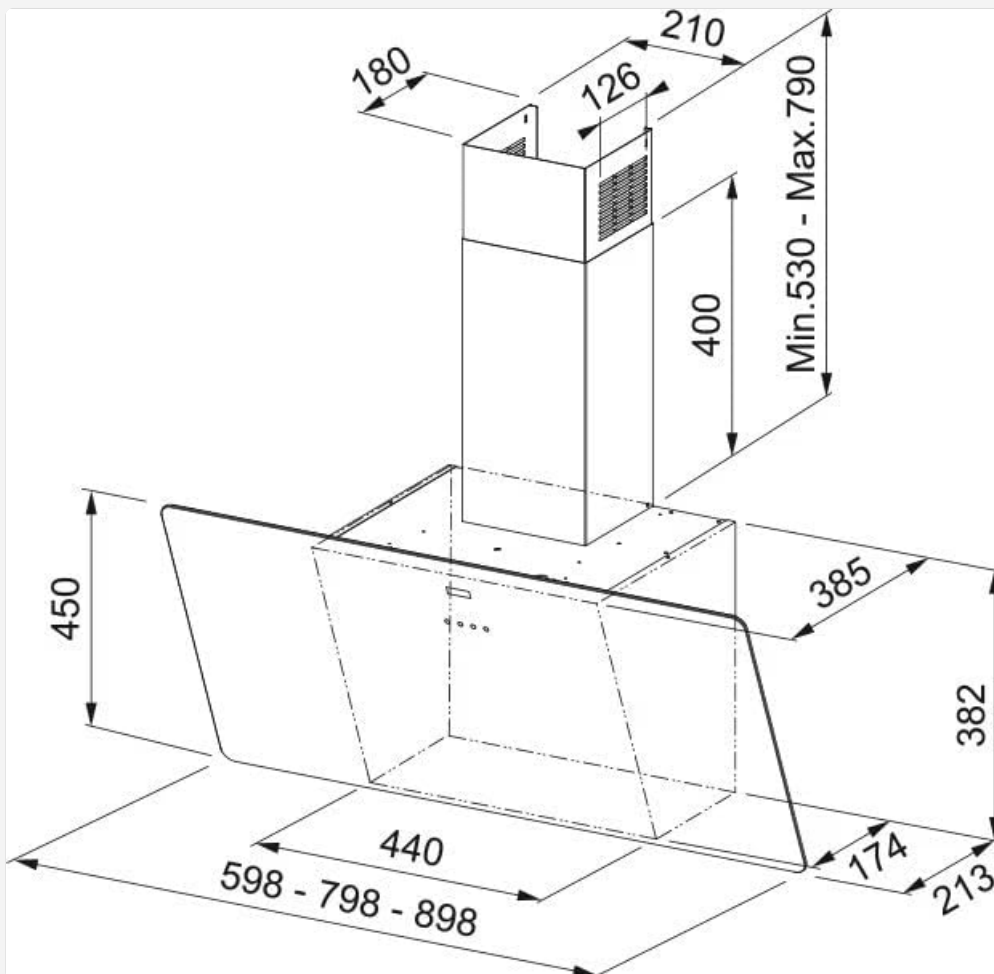


Figure 4.1: Front and top view dimensional drawing of the Franke 110.0361.903 range hood. This diagram shows the overall width (598-898mm), depth (213mm), and height of the hood body (450mm), along with chimney dimensions and ducting outlets.

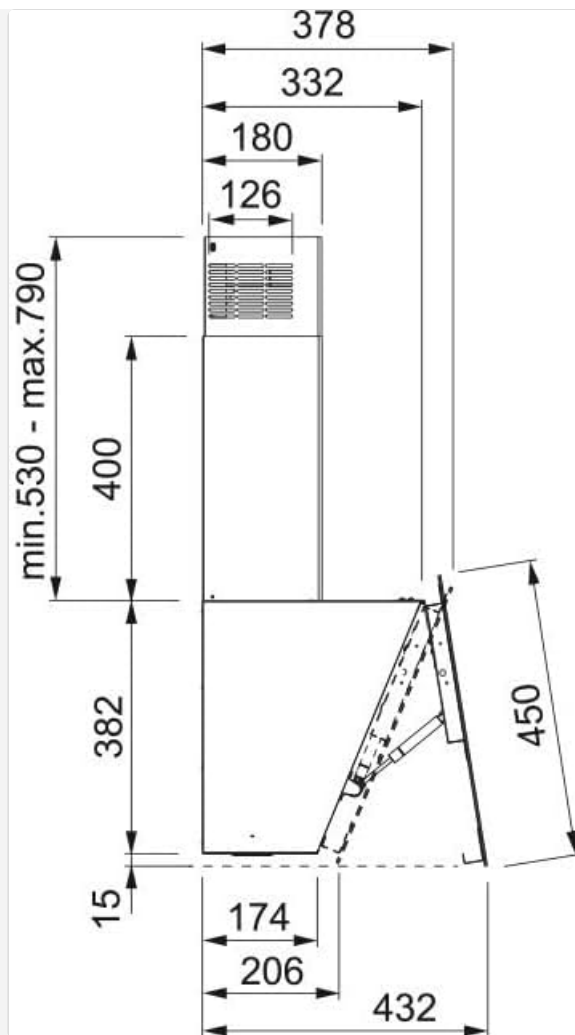


Figure 4.2: Side view dimensional drawing of the Franke 110.0361.903 range hood. This diagram details the depth of the hood (432mm), the minimum and maximum height of the chimney (530-790mm), and the distance from the wall.

4.2 Electrical Connection

Connect the range hood to a grounded electrical outlet. The appliance operates at 230V. Ensure the circuit is protected by an appropriate fuse or circuit breaker.

4.3 Ducting Installation

Connect the air outlet to an external ducting system using a Ø 150mm or Ø 120mm duct. Ensure the ducting is as short and straight as possible to maximize extraction efficiency. Avoid sharp bends.

5. OPERATING INSTRUCTIONS

The Franke 110.0361.903 range hood is operated via touch controls located on the front panel.

5.1 Power On/Off

Press the power button (usually indicated by a circle with a vertical line) to turn the hood on or off.

5.2 Fan Speed Selection

Select one of the three available fan speeds by pressing the corresponding speed button. Use lower speeds for light cooking and higher speeds for heavy cooking or strong odors.

5.3 Intensive Function

Activate the intensive function for maximum extraction power. This mode is ideal for quickly clearing very strong fumes. The intensive mode typically runs for a set period (e.g., 5-10 minutes) before reverting to the previous speed setting or turning off.

5.4 Lighting

Press the light button (usually indicated by a light bulb icon) to turn the integrated lighting on or off, illuminating your cooking area.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your range hood.

6.1 Cleaning the Aluminum Grease Filter

The aluminum grease filter should be cleaned regularly, typically every 2-4 weeks depending on usage. A dirty filter reduces extraction efficiency and increases fire risk.

1. Disconnect the range hood from the power supply.
2. Locate and release the latches holding the grease filter in place.
3. Carefully remove the filter.
4. Wash the filter by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
5. Allow the filter to dry completely before re-installing.
6. Re-insert the filter and secure the latches.

6.2 Cleaning the Exterior Surfaces

Clean the stainless steel and glass surfaces with a soft cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that could scratch the finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply; Blown fuse/tripped breaker.	Check power connection; Reset breaker or replace fuse.
Poor extraction performance.	Dirty grease filters; Blocked ducting; Incorrect ducting size.	Clean or replace filters; Check ducting for obstructions; Ensure correct duct diameter.
Excessive noise.	Loose components; Obstruction in fan; Incorrect installation.	Check for loose parts; Remove any obstructions; Consult installer.
Lights not working.	Faulty bulb; Loose connection.	Replace bulb (if applicable); Check connections.

If the problem persists after attempting these solutions, please contact Franke customer support or a qualified service technician.

8. TECHNICAL SPECIFICATIONS

Model Number: 110.0361.903

Brand: FRANKE

Product Type: Wall-Mounted Range Hood

Material: Stainless Steel, Glass

Color: White

Dimensions (Product): 59.6 x 37.8 x 117.2 cm (W x D x H)

Item Weight: 11.5 Kilograms

Wattage: 1 watts

Voltage: 230V

Number of Speeds: 3

Noise Level: 63 Decibels

Energy Efficiency Class: C

Annual Energy Consumption: 82 Kilowatt Hours

Mounting Type: Wall Mount

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This Franke appliance is covered by a manufacturer's warranty. The specific terms and duration of the warranty may vary by region and purchase date. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, spare parts, or warranty inquiries, please contact Franke customer service. You can find contact information on the official Franke website or through your local dealer.

Website: www.franke.com

© 2023 FRANKE. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E1GSPTQ>

More documents and user manuals: <https://manuals.plus/>