

[Manuals.plus](#) /

› [CLEANmaxx](#) /

› CLEANmaxx 09860 Robotic Vacuum Cleaner with Mopping Function User Manual

CLEANmaxx 09860

CLEANmaxx 09860 Robotic Vacuum Cleaner with Mopping Function

User Manual

Model: 09860 | Brand: CLEANmaxx

INTRODUCTION

Thank you for choosing the CLEANmaxx 09860 Robotic Vacuum Cleaner with Mopping Function. This 2-in-1 device is designed to simplify your floor cleaning routine by automatically vacuuming and mopping various floor types. Its compact design allows it to clean effectively even under furniture. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance of your device.

IMPORTANT SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this appliance to prevent electric shock, fire, or serious injury. Keep this manual for future reference.

- Ensure the power adapter voltage matches your local power supply before connecting.
- Do not immerse the device, power adapter, or battery in water or other liquids.
- Do not operate the device with a damaged power cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use the device to pick up large objects, sharp objects, or burning/smoking materials.
- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Supervise children and ensure they do not play with the appliance.
- Only use manufacturer-specified attachments and accessories.
- Remove the battery if the device will not be used for an extended period.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all components are present and undamaged.

- CLEANmaxx 09860 Robotic Vacuum Cleaner

- Power Adapter
- Microfiber Mopping Cloths (3 included)
- Dust Bin (pre-installed)
- Lithium-ion Battery (pre-installed)
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Top view of the CLEANmaxx 09860 Robotic Vacuum Cleaner, showcasing its compact, circular design with a red top panel and black base. The power button is visible on the side.



Figure 2: Top view of the robotic vacuum cleaner, highlighting the access panel for the dust bin. The panel is black and contrasts with the red main body.



Figure 3: A hand demonstrating the removal of the dust bin from the top compartment of the robotic vacuum cleaner. The dust bin is black and rectangular.



Figure 4: A hand holding the dust bin upside down, showing accumulated dust and debris being emptied from it. The dust bin features a filter screen.



Figure 5: Three white microfiber mopping cloths, provided for the mopping function of the robotic vacuum cleaner. These cloths are washable and reusable.



Figure 6: The power adapter for the CLEANmaxx 09860, featuring a black plug and cable with a barrel connector for charging the device.



Figure 7: Bottom view of the robotic vacuum cleaner, showing the two large drive wheels, the front swivel wheel, and the attachment point for the microfiber mopping cloth. The white mopping cloth is visible.



Figure 8: The CLEANmaxx 09860 robotic vacuum cleaner operating under a light-colored armchair on a carpeted floor, demonstrating its ability to clean in hard-to-reach areas due to its compact design.

SETUP GUIDE

1. Charging the Battery

1. Locate the charging port on the side of the robotic vacuum cleaner.
2. Connect the power adapter to the charging port.
3. Plug the power adapter into a wall outlet.
4. Allow the device to charge fully before first use. The charging indicator light will change color or turn off when charging is complete.

2. Attaching the Mopping Cloth

1. Turn the robotic vacuum cleaner upside down.
2. Align the microfiber mopping cloth with the designated attachment area on the bottom of the device (refer to Figure 7).
3. Securely attach the cloth using the hook-and-loop fasteners or clips provided.
4. For optimal mopping, slightly dampen the cloth with water before attaching.

3. Preparing the Cleaning Area

- Remove any large obstacles, loose cables, or small items from the floor that could obstruct the robot's movement.
- Ensure the floor surface is suitable for both vacuuming and mopping (e.g., hardwood, tile, laminate, vinyl). Avoid

using the mopping function on carpets.

OPERATING INSTRUCTIONS

Starting a Cleaning Cycle

1. Place the robotic vacuum cleaner on the floor in the area you wish to clean.
2. Press the power button located on the side of the device (refer to Figure 1). The robot will emit an audible signal and begin its cleaning cycle.
3. The robot will navigate autonomously using its built-in sensors, cleaning the floor and moving under furniture.
4. To pause or stop the cleaning cycle, press the power button again.

Cleaning Modes

The CLEANmaxx 09860 operates in an automatic cleaning mode, adapting its path to cover the cleaning area efficiently. It combines vacuuming and mopping simultaneously when the microfiber cloth is attached.

Battery Life

A fully charged battery provides approximately 60 minutes of cleaning time. When the battery is low, the device may return to its starting point or stop operating. Recharge the device as soon as possible.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your CLEANmaxx 09860.

1. Emptying the Dust Bin

1. Press the release button on the top cover to open the dust bin compartment (refer to Figure 2).
2. Carefully lift out the dust bin (refer to Figure 3).
3. Open the dust bin and empty its contents into a waste bin (refer to Figure 4).
4. Clean the dust bin and filter with a brush or cloth. Do not wash the filter with water unless specified by the manufacturer.
5. Reinsert the dust bin and close the top cover securely.

2. Cleaning the Microfiber Mopping Cloths

- Remove the mopping cloth from the device after each use.
- Hand wash or machine wash the microfiber cloths with mild detergent. Do not use bleach or fabric softener.
- Allow the cloths to air dry completely before reattaching.

3. Cleaning Sensors and Wheels

- Periodically wipe the sensors on the front and sides of the robot with a soft, dry cloth to ensure proper navigation.
- Check the drive wheels and front swivel wheel for any tangled hair or debris and remove them carefully.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not start.	Battery is low or not charged.	Charge the robot fully. Ensure the power adapter is properly connected.
Robot stops unexpectedly.	Low battery; Obstruction; Sensors are dirty.	Recharge the battery. Remove any obstructions. Clean the sensors.
Poor cleaning performance.	Dust bin is full; Filter is clogged; Mopping cloth is dirty.	Empty the dust bin. Clean or replace the filter. Wash or replace the mopping cloth.
Robot gets stuck frequently.	Too many obstacles; Uneven surfaces.	Clear the cleaning area of obstacles. Ensure the robot is used on suitable surfaces.

SPECIFICATIONS

- Brand:** CLEANmaxx
- Model Number:** 09860
- Color:** Multicolored (Red/Black)
- Dimensions (L x W x H):** 33 x 33 x 10.2 cm (13 x 13 x 4 inches)
- Weight:** 1.69 kg (3.73 lbs)
- Power:** 14 Watts
- Voltage:** 240 Volts
- Battery Type:** Lithium-ion (7.4 V, 1800 mAh)
- Battery Life:** Approximately 60 minutes
- Special Feature:** Cordless, 2-in-1 Vacuum and Mop
- Recommended Surface:** Wood, Concrete, Tile, Laminate, Vinyl
- Filter Type:** Cartridge
- Included Components:** Microfiber Mopping Cloth

WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact CLEANmaxx customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Please note that availability of spare parts information is currently unavailable as per product specifications.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E5NPH4G>

More documents and user manuals: **<https://manuals.plus/>**