

[Manuals.plus](#) /

› [Epson](#) /

› Epson 410 Claria Premium Ink Cartridge Combo Pack (T410XL-BCS) User Manual

Epson T410XL-BCS

Epson 410 Claria Premium Ink Cartridge Combo Pack User Manual

Model: T410XL-BCS | Brand: Epson

1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Epson 410 Claria Premium Ink Cartridge Combo Pack. These cartridges are designed to deliver high-quality prints with sharp text and vibrant, long-lasting photos when used with compatible Epson Expression Premium printers.

Compatible Printer Models:

- Epson Expression Premium XP-530
- Epson Expression Premium XP-630
- Epson Expression Premium XP-640
- Epson Expression Premium XP-7100
- Epson Expression Premium XP-830

DESIGNED *for*
EXCELLENCE



EPSON®
EXCEED YOUR VISION

410XL

High-capacity
Grande capacité



Black
Noir

410

Standard-capacity
Capacité standard



Photo Black
Noir Photo



Cyan



Magenta



Yellow
Jaune



Image 1.1: Front view of the Epson 410 Claria Premium Ink Cartridge Combo Pack packaging.

2. PACKAGE CONTENTS

Your Epson 410 Claria Premium Ink Cartridge Combo Pack (T410XL-BCS) includes the following genuine Epson ink

cartridges:

- 1 x Epson 410XL High-Capacity Black Ink Cartridge
- 1 x Epson 410 Standard-Capacity Photo Black Ink Cartridge
- 1 x Epson 410 Standard-Capacity Cyan Ink Cartridge
- 1 x Epson 410 Standard-Capacity Magenta Ink Cartridge
- 1 x Epson 410 Standard-Capacity Yellow Ink Cartridge

IN THE BOX



GENUINE EPSON® INK 

Image 2.1: Diagram illustrating the individual ink cartridges included in the combo pack.

3. SETUP: INK CARTRIDGE INSTALLATION

Follow these general steps to install the ink cartridges in your compatible Epson Expression Premium printer. For

detailed, model-specific instructions, refer to your printer's user guide.

1. **Power On:** Ensure your printer is powered on.
2. **Open Scanner Unit:** Lift the scanner unit (printer cover) until it locks into place. The print head will move to the replacement position.
3. **Remove Old Cartridges (if applicable):** If replacing cartridges, gently press the tab on the old cartridge and lift it straight out.
4. **Unpack New Cartridge:** Remove the new ink cartridge from its packaging. **Do not touch the green chip on the cartridge.**
5. **Insert New Cartridge:** Insert the new cartridge into the correct slot for its color. Push it down firmly until it clicks into place.
6. **Close Scanner Unit:** Carefully lower the scanner unit until it closes completely. The printer will begin initializing the ink system. This process may take a few minutes.

The printer's control panel will indicate when the ink cartridges are successfully recognized and ready for use.

ENGINEERED EXCLUSIVELY FOR YOUR EPSON PRINTER



GENUINE EPSON® INK



Image 3.1: Epson Claria Premium Ink is engineered for optimal performance with Epson printers.

4. OPERATING GUIDELINES

To achieve the best print results and ensure efficient use of your Epson ink cartridges, consider the following guidelines:

- **Print Settings:** Always select the appropriate print settings in your printer driver for the type of paper and content you are printing (e.g., Photo Paper Glossy for photos, Plain Paper for documents).
- **Genuine Epson Paper:** For optimal photo quality and longevity, use genuine Epson photo paper.
- **Check Ink Levels:** Regularly check your ink levels through your printer's control panel or the Epson printer utility software on your computer. This helps prevent interruptions during important print jobs.
- **Printing Frequency:** Print at least once a month to help prevent ink from drying in the print head nozzles.

5. MAINTENANCE

Proper care of your ink cartridges and printer can extend their lifespan and maintain print quality.

5.1 Cartridge Storage

- Store unopened ink cartridges in their original, sealed packaging until ready for use.
- Keep cartridges in a cool, dark place, away from direct sunlight and extreme temperatures.
- Avoid storing cartridges upside down or on their side.

5.2 Print Head Cleaning

If you notice a decline in print quality, such as missing lines or incorrect colors, perform a print head cleaning cycle. This can be done through your printer's control panel or the Epson printer utility software.

1. Access your printer's maintenance utility or control panel.
2. Select the "Print Head Cleaning" option.
3. Follow the on-screen prompts. This process uses a small amount of ink.
4. After cleaning, print a nozzle check pattern to verify if the print quality has improved. Repeat cleaning if necessary.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your ink cartridges and printer.

6.1 Poor Print Quality (Streaks, Faded Colors, Incorrect Colors)

- **Low Ink Levels:** Check ink levels and replace any cartridges that are low or empty.
- **Clogged Nozzles:** Perform a print head cleaning cycle (refer to Section 5.2). After cleaning, print a nozzle check pattern to confirm improvement.
- **Incorrect Print Settings:** Ensure your printer settings match the paper type and desired print quality.
- **Non-Genuine Ink:** Using non-genuine Epson ink can lead to poor print quality and potential printer damage. This product uses genuine Epson ink.

6.2 Printer Not Recognizing Cartridges

- **Reinstall Cartridge:** Remove and reinsert the cartridge firmly until it clicks into place.
- **Clean Contacts:** Gently wipe the gold electrical contacts on the cartridge with a lint-free cloth. Do not touch the print head nozzles.
- **Restart Printer:** Turn off the printer, unplug it for a minute, then plug it back in and turn it on.
- **Damaged Cartridge:** If the issue persists, the cartridge may be faulty. Contact Epson support.

6.3 Blank Pages or Missing Colors

- **Empty Cartridge:** Verify that the specific color cartridge is not empty.

- **Nozzle Clogs:** Perform multiple print head cleaning cycles and nozzle checks.
- **Protective Tape:** Ensure all protective tape has been removed from the cartridge before installation.

7. SPECIFICATIONS

Feature	Description
Model Number	T410XL-BCS
Ink Type	Claria Premium Ink
Ink Colors Included	Black (410XL), Photo Black (410), Cyan (410), Magenta (410), Yellow (410)
Compatible Printers	Epson Expression Premium XP-530, XP-630, XP-640, XP-7100, XP-830
Package Dimensions (LxWxH)	3.1 x 4.4 x 6.3 inches
Package Weight	5.6 ounces
Special Feature	Quick Dry
Ink Base	Water

8. SUPPORT AND WARRANTY

For further assistance, technical support, or warranty information regarding your Epson 410 Claria Premium Ink Cartridge Combo Pack, please visit the official Epson support website or contact Epson customer service.

Epson Support Website: epson.com/support

Please have your printer model and ink cartridge model number (T410XL-BCS) available when contacting support.

© 2025 Epson Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E5WS3Q6>

More documents and user manuals: <https://manuals.plus/>