

- Manuals.plus /
- › [Redi-Remote](#) /
- › Redi-Remote Replacement Remote Control Instruction Manual for JBL SDP2 (Models 750-11342, RT75011342)

Redi-Remote RT75011342

Redi-Remote Replacement Remote Control Instruction Manual

For JBL SDP2 Digital Surround Processor Models 750-11342, RT75011342

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for use with JBL SDP2 Digital Surround Processor models 750-11342 and RT75011342. This remote is a custom replacement and is not an original JBL product. It offers direct compatibility without requiring programming.

PRODUCT OVERVIEW



Figure 1: Front view of the Redi-Remote replacement remote control.

The Redi-Remote replacement remote control features a standard layout with an upper section for primary functions and a lower section for advanced controls, accessible by sliding down a cover. The remote is designed for intuitive operation of your JBL

Remote Control Layout Description:

- **Top Section:** Contains power, input selection, display, sleep timer, channel, volume, mute, menu, recall, and numeric keypad buttons.
- **Bottom Section (Under Sliding Cover):** Reveals additional controls for specific functions such as power for other devices (OFF, ON), bypass, VCR controls (VCR1, VCR2), tuner, V-Disc, TV, effect, volume, tape, auxiliary, CD, record zone 2, done, select, and balance adjustments. The cover clearly indicates "SLIDE DOWN" for access.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. *Note: Batteries are included with the remote.*
4. Close the battery compartment cover securely.

This Redi-Remote replacement control requires no programming. It is pre-configured for immediate use with compatible JBL SDP2 Digital Surround Processors.

OPERATING INSTRUCTIONS

Basic Functions (Top Section):

- **PWR (Power):** Turns the JBL SDP2 unit on or off.
- **TV/VIDEO:** Selects TV or video input sources.
- **DISP (Display):** Adjusts or cycles through display modes.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **CH+ / CH- (Channel Up/Down):** Changes channels.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores audio output.
- **MENU:** Accesses the system menu.
- **RECALL:** Recalls the previously selected channel or input.
- **Numeric Keypad (0-9, 100, ENT):** Directly enters channel numbers or other numerical inputs. "ENT" confirms entries.

Advanced Functions (Lower Section - Slide Down Cover):

To access advanced functions, gently slide down the cover located at the bottom of the remote control. This will reveal additional buttons for specific device controls and audio adjustments.

- **OFF / ON:** Power control for auxiliary devices (e.g., TV, VCR).
- **BYPASS:** Activates or deactivates bypass mode.
- **VCR1 / VCR2:** Selects VCR 1 or VCR 2 input.
- **TUNER:** Selects the tuner input.
- **V-DISC:** Selects the V-Disc input.
- **TV:** Selects the TV input.
- **EFFECT:** Adjusts sound effects or modes.
- **VOLUME (Up/Down Arrows):** Fine-tunes volume.

- **TAPE:** Selects the tape input.
- **AUX (Auxiliary):** Selects the auxiliary input.
- **CD:** Selects the CD input.
- **RECORD ZONE 2:** Initiates recording for Zone 2.
- **DONE:** Confirms or exits a setting.
- **SELECT (Up/Down Arrows):** Navigates through menu options.
- **BALANCE (Left/Right Arrows):** Adjusts audio balance between left and right channels.

Note: Redi-Remotes are designed to control the specific unit they are intended for and cannot be programmed to control auxiliary devices beyond their pre-defined functions.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Verify there is a clear line of sight between the remote control and the JBL SDP2 unit's infrared receiver.
 - Remove any obstructions between the remote and the unit.
- **Specific functions not working:**
 - Confirm you are pressing the correct button for the desired function.
 - For advanced functions, ensure the sliding cover is fully open.
 - Remember that this remote is designed for the JBL SDP2 and cannot be programmed for other devices.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT75011342
Compatible Devices	JBL SDP2 Digital Surround Processor (Models: 750-11342, RT75011342)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Specific JBL unit)
Product Dimensions	7 x 3 x 1 inches
Item Weight	5 ounces
Batteries	4 AAA batteries (included)

SUPPORT

For any concerns or questions regarding your Redi-Remote replacement remote control, please contact the manufacturer, Redi-Remote, or the seller directly. Refer to your purchase documentation for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E67NH8E>

More documents and user manuals: <https://manuals.plus/>