

- Manuals.plus /
- > [Redi-Remote](#) /
 - > Redi-Remote Replacement Remote Control for VOCOPRO Hero-RV, HERORV Instruction Manual

Redi-Remote RTHERORV

Redi-Remote Replacement Remote Control for VOCOPRO Hero-RV, HERORV Instruction Manual

Model: RTHERORV

1. INTRODUCTION

This instruction manual provides detailed information for the Redi-Remote replacement remote control, specifically designed to operate VOCOPRO Hero-RV and HERORV units. This remote is a custom-built replacement and is not an original VOCOPRO product. It is pre-programmed and requires no additional setup for compatible devices.

2. PRODUCT OVERVIEW

The Redi-Remote replacement remote control features a standard layout with clearly labeled buttons for intuitive operation. A protective cover slides down to reveal additional functions located on the lower half of the remote.



Figure 1: Redi-Remote Replacement Remote Control for VOCOPRO Hero-RV. The remote is dark gray with blue and black buttons. The upper section includes power, channel, volume, and numeric keys. The lower section, revealed by sliding down a cover, contains specific function buttons for media playback and karaoke features.

3. BATTERY INSTALLATION

The remote control requires 4 AAA batteries, which are included. To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: Always replace all batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4. BASIC OPERATION

This section details the functions of the primary buttons on the remote control.

PWR (Power): Turns the connected VOCOPRO unit on or off.

TV/VIDEO: Switches between TV and video input modes.

SETUP: Accesses the system setup menu.

DISP (Display): Changes or shows display information.

PROGRAM: Initiates programming functions (refer to your VOCOPRO unit's manual for specific programming instructions).

SLEEP: Sets a timer for the unit to automatically power off.

CH+ / CH- (Channel Up/Down): Changes channels or navigates through menu options.

VOL+ / VOL- (Volume Up/Down): Adjusts the master volume level.

MUTE: Silences the audio output.

MENU: Opens the main menu.

RECALL: Recalls the previously selected channel or function.

AUTO REPEAT: Activates or deactivates the auto-repeat function for media playback.

Numeric Keypad (0-9, 100): Used for direct channel selection or entering numerical values.

ENT (Enter): Confirms selections or inputs.

5. ADVANCED FUNCTIONS (LOWER PANEL)

Slide down the lower cover of the remote to access these additional functions.

EJECT: Ejects media from the disc tray.

AV1 / AV2: Selects auxiliary audio/video inputs.

MIC/LINE MASTER (Up/Down Arrows): Adjusts the master volume for microphone/line inputs.

TUNER/MP3/LAPTOP: Selects the Tuner, MP3, or Laptop input source.

DVD/USB/SD CARD: Selects the DVD, USB, or SD Card input source.

MUSIC MASTER (Up/Down Arrows): Adjusts the master volume for music playback.

VOCAL C/P (Vocal Cancel/Partner): Activates or deactivates vocal cancellation or partner mode.

ENTER: Confirms selections within menus or functions.

PLAY/PAUSE: Starts or pauses media playback.

AM/FM STOP: Stops AM/FM radio playback.

ST/MONO L/R: Switches between stereo and mono audio output, or left/right channel selection.

SEARCH (Left/Right Arrows): Navigates through search results or media files.

B-SCAN / F-SCAN (Backward Scan / Forward Scan): Scans backward or forward through media.

PRESET PREV / NEXT: Navigates through radio presets or previous/next tracks.

P/N (Progressive/Normal): Switches between progressive and normal scan modes for video output.

AUDIO: Selects audio tracks or audio output modes.

ANGLE: Changes the camera angle during DVD playback (if supported by the disc).

PBC (Playback Control): Activates or deactivates Playback Control for VCDs.

A-B: Sets and repeats a specific segment of media playback.

SLOW: Activates slow-motion playback.

STEP: Advances media playback frame by frame.

TITLE: Displays the title menu of a DVD.

MODE: Switches between different operational modes of the unit.

KEY CONTROL (b/#): Adjusts the key (pitch) of music for karaoke.

SUB-T (Subtitle): Toggles subtitles on or off during video playback.

OSO (On-Screen Operations): Displays on-screen operation guides or menus.

6. TROUBLESHOOTING

If the remote control does not function as expected, consider the following:

- **Check Batteries:** Ensure the batteries are correctly installed with the proper polarity and are not depleted. Replace all batteries if necessary.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the infrared sensor on your VOCOPRO unit. Obstructions can block the signal.
- **Distance:** Operate the remote within the effective range of your VOCOPRO unit.
- **Interference:** Strong light sources or other infrared devices can interfere with the remote's signal. Try operating the remote in a different environment.
- **Unit Compatibility:** Verify that your VOCOPRO unit is one of the compatible models (Hero-RV, HERORV). This remote is specifically designed for these models.

7. SPECIFICATIONS

Brand: Redi-Remote

Model Number: ROTHERORV

Compatible Devices: VOCOPRO Hero-RV, HERORV

Connectivity Technology: Infrared

Power Source: 4 x AAA Batteries (included)

Product Dimensions: Approximately 7.5 x 2.25 x 0.75 inches (19 x 5.7 x 1.9 cm)

Item Weight: Approximately 5 ounces (142 grams)

Special Feature: No Programming Needed

Max Number of Supported Devices: 1

8. SUPPORT

For any concerns or questions regarding the Redi-Remote replacement remote control, please contact the manufacturer, Redi-Remote, directly. This product is designed to function as a direct replacement and does not require programming.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E67NHPW>

More documents and user manuals: <https://manuals.plus/>