

Anker SoundCore Nano

Anker SoundCore Nano Bluetooth Speaker User Manual

Model: SoundCore Nano | Brand: Anker

INTRODUCTION

Thank you for choosing the Anker SoundCore Nano Bluetooth Speaker. This compact and portable wireless speaker is designed to deliver clear audio and features a built-in microphone for hands-free calling. This manual provides essential information for setting up, operating, and maintaining your device.

PRODUCT OVERVIEW

The SoundCore Nano features a minimalist design with intuitive controls. Familiarize yourself with the speaker's components:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Buttons:** Adjust the playback volume.
- **Play/Pause Button:** Control music playback and answer/end calls.
- **Bluetooth Pairing Button:** Initiate Bluetooth pairing mode.
- **Micro USB Port:** For charging the speaker.
- **LED Indicator:** Displays power, charging, and Bluetooth status.
- **Built-in Microphone:** For hands-free calls.



Image: The Anker SoundCore Nano Bluetooth Speaker, showcasing its compact design and controls.

SETUP

1. Charging the Speaker

1. Connect the provided Micro USB cable to the charging port on the speaker.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., solid red while charging, off when fully charged).
4. Allow approximately 2-3 hours for a full charge.

2. Powering On/Off

- **To Power On:** Press and hold the Power button for 2 seconds. The LED indicator will flash blue.
- **To Power Off:** Press and hold the Power button for 2 seconds. The LED indicator will turn off.

3. Bluetooth Pairing

To connect your SoundCore Nano to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and the LED indicator is flashing blue, indicating it is in pairing mode.
2. On your Bluetooth device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "SoundCore Nano" from the list of devices.
4. Once connected, the LED indicator will turn solid blue, and you will hear an audible confirmation.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

OPERATING THE SPEAKER

Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up/Down:** Use the Volume + or Volume - buttons on the speaker, or adjust from your connected device.
- **Next Track:** Press and hold the Volume + button.
- **Previous Track:** Press and hold the Volume - button.

Call Handling

With the built-in microphone, you can manage calls directly through the speaker:

- **Answer/End Call:** Press the Play/Pause button once.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.
- **Transfer Call:** During a call, press and hold the Play/Pause button for 2 seconds to switch the audio between the speaker and your phone.

MAINTENANCE

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or excessive moisture.
- Store the speaker in a cool, dry place when not in use for extended periods.
- This speaker is **NOT waterproof**. Avoid contact with water or liquids.

TROUBLESHOOTING

- **Cannot Pair with Device:**
 - Ensure the speaker is in pairing mode (flashing blue LED).
 - Make sure Bluetooth is enabled on your device.
 - Move the speaker closer to your device.
 - Turn both devices off and on again.
 - Clear the Bluetooth pairing list on your device and try pairing again.
- **No Sound:**
 - Check the volume levels on both the speaker and your connected device.
 - Ensure the speaker is properly paired and connected to your device.
 - Verify that the audio output on your device is set to the SoundCore Nano.
- **Charging Issues:**
 - Ensure the Micro USB cable is securely connected to both the speaker and the power source.

- Try a different USB cable or power adapter.
- Confirm the power source is functional.

SPECIFICATIONS

Brand	Anker
Model Name	SoundCore nano
Model Number	AK-848061067385
UPC	848061067385
Speaker Maximum Output Power	3 Watts
Connectivity Technology	Bluetooth
Connectivity Protocol	Bluetooth
Mounting Type	Tabletop Mount
Speaker Type	Outdoor
Additional Features	Built-in Microphone, Portable
Is Waterproof	FALSE
Controller Type	Battery Powered
Item Weight	0.18 Pounds
Power Source	Battery Powered
Number of Batteries	1 Lithium Polymer battery required
Compatible Devices	Smartphone
Battery Capacity	400 mAh

WARRANTY AND SUPPORT

Anker provides a warranty for this product. For detailed warranty information, technical support, or customer service inquiries, please refer to the official Anker website or contact their customer support directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E724CL4>

More documents and user manuals: <https://manuals.plus/>