

ALLIMITY RC1825

ALLIMITY RC1825 Remote Control User Manual

Model: RC1825 (MX-RC1825-GM)

- Introduction
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

This manual provides instructions for the ALLIMITY RC1825 remote control. This remote is designed as a replacement for various television models from brands including Alba, Celcus, Digihome, Hitachi, JMB, and Luxor. It operates using infrared technology and requires no complex programming for compatible devices. Please read this manual thoroughly before use.

2. SETUP

2.1. Battery Installation

The RC1825 remote control requires two AAA batteries (not included). Follow these steps to install them:

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Slide the cover downwards or press the latch (if present) to open it.
- 3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2.2. Initial Use

This remote control is designed to work directly with compatible TV models without requiring any programming. Once batteries are installed, point the remote at your television and press the **Power** button to test functionality.

3. OPERATION

The ALLIMITY RC1825 remote control features a standard layout for easy navigation and control of your television. Refer to the image below for button identification and their primary functions.





Figure 1: ALLIMITY RC1825 Remote Control. This image displays the full layout of the black remote control, showing all buttons and their labels.

3.1. Button Functions

- **Power Button** (Red, top center): Turns the television on or off.
- **Colored Function Buttons** (Red, Green, Yellow, Blue): These buttons typically correspond to specific functions within TV menus or teletext, as indicated on your TV screen.
- **M (Menu)**: Accesses the main menu of the television.
- **RETURN**: Returns to the previous menu or screen.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate through menus and confirm selections. **OK** confirms the selection.
- **SOURCE**: Selects the input source (e.g., HDMI 1, AV, TV).
- **PRESETS**: Accesses preset channels or settings.
- **INFO**: Displays information about the current program or input.
- **EPG (Electronic Program Guide)**: Opens the electronic program guide.
- **Volume Up/Down (V+/V-)**: Adjusts the volume level.
- **Mute** (Speaker icon with cross): Mutes or unmutes the sound.
- **Channel Up/Down (P+/P-)**: Changes the television channel.
- **Numeric Keypad (0-9)**: Directly enters channel numbers or other numerical inputs.
- **FAV (Favorites)**: Accesses favorite channels list.
- **SCREEN**: Adjusts screen display settings or aspect ratio.
- **LANG. (Language)**: Changes audio language or subtitle language.
- **SUBTITLE**: Toggles subtitles on or off.
- **SLEEP**: Sets a sleep timer for the television.
- **Other Buttons** (e.g., EX, circled arrow): These buttons may have specific functions depending on your TV model. Refer to your TV's manual for details.

4. MAINTENANCE

4.1. Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.
- Ensure no liquid enters the remote control.

4.2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or it stops functioning. Refer to Section 2.1 for battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	◦ Dead or incorrectly installed batteries. ◦ Obstruction between remote and TV. ◦ Remote control is out of range. ◦ Infrared sensor on TV is blocked or faulty.	◦ Replace batteries with new ones, ensuring correct polarity. ◦ Remove any objects blocking the line of sight between the remote and the TV. ◦ Move closer to the TV (within 10 meters). ◦ Check your TV's manual for the location of its IR sensor and ensure it's clear.
Some buttons do not function.	◦ Button is not compatible with your specific TV model. ◦ Dirty contacts under the button.	◦ Refer to your TV's original manual for specific button functions. ◦ Clean the remote control (see Section 4.1). If the issue persists, the button may be faulty.
Remote control range is poor.	◦ Weak batteries. ◦ Interference from other electronic devices.	◦ Replace batteries. ◦ Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) or other IR devices are interfering.

6. SPECIFICATIONS

- **Model Number:** RC1825 (MX-RC1825-GM)
- **Brand:** ALLIMITY
- **Connectivity Technology:** Infrared
- **Number of Buttons:** 4
- **Maximum Range:** 10 Meters
- **Supported Devices:** 1 (per remote)
- **Compatible TV Brands:** Alba, Celcus, Digihome, Hitachi, JMB, Luxor, Telefunken, Vestel.
- **Compatible TV Models (Examples):**
 - CELCUS: 32882HDLCD, 40913FHD
 - Hitachi: L19VG07U, L22VG07U, L26VG07UJ, L24VG07U, L32HK04U, L32HK04UA, L32HK04UJ, L32HK04UK, L32HK04UL
 - JMB: 32883HD, JT012200102B, JT012200103B, JT0122002B/01
 - Telefunken: T42FHD916CT, T40R906DVBCT, T40R970LED
 - VESTEL: T32FHD845CTV2, T32FHD912LEDDVBT, T32FHD850CT
- **Power Source:** 2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided with your purchase or contact the seller directly. For technical support or further assistance, please reach out to the retailer or the ALLIMITY customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01E8U97M4>

More documents and user manuals: <https://manuals.plus/>