

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› [VINABTY N2QAYB000926 Remote Control User Manual for Panasonic Smart LED LCD TVs](#)

VINABTY N2QAYB000926

VINABTY N2QAYB000926 Remote Control User Manual

For Panasonic Smart LED LCD TVs (AS520, AS530, AS630, ASU534, AS680 Series)

INTRODUCTION

This manual provides instructions for the VINABTY N2QAYB000926 replacement remote control. This remote is designed to be compatible with various Panasonic Smart LED LCD TV models, including those in the AS520, AS530, AS630, ASU534, and AS680 series. It offers direct functionality without requiring complex programming or setup.

Compatible TV models include, but are not limited to: TC-39AS530U, TC-40AS520U, TC-L42E60, TC-42AS630U, TC-50AS530U, TC-50CX600, TC-50AS530UE, TC-50LE64, TC-L50E60, TC-50AS630U, TC-50ASU534, TC-55AS530U, TC-55AS530UE, TC-55AS680U, TC-32AS500C, TC-39AS500C, TC-60AS540C, TC-55AS540C, TC-55CX650U, TC-55CX800U, TC-55CX850U, TC-55ASU534, TC-L58E60, TC-58LE64, TC-60AS530U, TC-60CX650U, TC-60CX800U, TC-60AS530UE, TC-60AS640U, TC-60ASU534, TC-L65E60, TC-65CX650U, TC-65CX800U, TC-65CX850U.

SETUP

Battery Installation

The VINABTY N2QAYB000926 remote control operates on two AAA batteries (not included). No programming or pairing is required; simply insert the batteries to begin use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

After installing the batteries, the remote is ready for immediate use with your compatible Panasonic TV.

OPERATING INSTRUCTIONS

This section details the primary functions of the buttons on your VINABTY N2QAYB000926 remote control.



Image: Front view of the VINABTY N2QAYB000926 remote control, displaying its full button layout.

- **Power (●)**: Turns the TV on or off.
- **Sleep**: Sets a timer for the TV to turn off automatically.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **SAP (Secondary Audio Program)**: Switches between available audio tracks.
- **Menu**: Accesses the TV's main menu.
- **Info (i)**: Displays information about the current program or input.
- **Surround**: Activates or deactivates surround sound mode.
- **Favorite (F)**: Accesses favorite channels or content.

- **Format:** Changes the screen aspect ratio.
- **Exit (X):** Exits menus or on-screen displays.
- **Apps:** Opens the TV's applications menu.
- **Home:** Navigates to the TV's home screen.
- **Input:** Selects the input source (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Option:** Displays context-sensitive options.
- **Return:** Goes back to the previous screen or menu.
- **Color Buttons (Red, Green, Yellow, Blue):** Perform specific functions as indicated by on-screen prompts.
- **Volume (+/-):** Adjusts the TV volume.
- **Mute:** Mutes or unmutes the TV audio.
- **Channel (CH ^/v):** Changes channels up or down.
- **Number Pad (0-9):** Directly enters channel numbers.
- **Netflix:** Direct access button for the Netflix application.
- **Media Controls (Rewind, Play, Fast Forward, Stop, Pause, Skip Back, Skip Forward):** Controls media playback.
- **Last:** Returns to the previously viewed channel.
- **Player:** Likely related to media player functions.
- **Help (?):** Accesses the TV's help function.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, which can cause internal damage.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common troubleshooting steps:

1. Remote Not Responding:

- Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Point the remote directly at the TV.

2. Specific Buttons Not Working:

- Clean the remote control, especially around the problematic buttons, to remove any dirt or debris that might be interfering with button presses.
- Verify that the button function is applicable to your specific TV model. Some buttons may have different or no functionality depending on the TV's features.

3. Internet/Smart Features Button Behavior.

- Note that on some Panasonic TV models, the button labeled "Home" on this remote may function as the primary access point for smart features and internet applications, rather than a dedicated "Internet" button.
- The "Apps" button is designed to directly open the TV's application menu.

SPECIFICATIONS

Model Number	N2QAYB000926
Brand	VINABTY
Compatible Devices	Panasonic Smart LED LCD TVs (AS520, AS530, AS630, ASU534, AS680 Series)
Power Source	2 x AAA Batteries (not included)
Dimensions	9 x 2 x 1 inches (approximately 22.86 x 5.08 x 2.54 cm)
Item Weight	2.89 ounces (approximately 81.9 grams)
Color	Black



21.5 cm / 8.46 in



Image: Remote control with indicated dimensions for length and width.

SUPPORT

For further assistance or inquiries regarding your VINABTY N2QAYB000926 remote control, please contact the seller or manufacturer through your purchase platform. Provide your order details and the model number (N2QAYB000926) for efficient support.