

Dobe DJOYK-XO

Dobe DJOYK-XO Wired Controller for Xbox One

Instruction Manual

1. INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Dobe DJOYK-XO Wired Controller. This controller is designed for use with the Xbox One console and offers a reliable gaming experience with its wired connection.

2. SETUP

2.1 Connecting to Xbox One

1. Ensure your Xbox One console is powered on.
2. Locate an available USB port on your Xbox One console.
3. Insert the USB connector of the Dobe DJOYK-XO controller into the USB port.
4. The controller will automatically connect to the console. The indicator light on the controller will illuminate to confirm a successful connection.



Image: The Dobe DJOYK-XO wired controller showing its integrated USB cable, ready for connection.

2.2 Connecting to PC (Windows)

1. Ensure your PC is powered on.
2. Locate an available USB port on your PC.
3. Insert the USB connector of the Dobe DJOYK-XO controller into the USB port.
4. Your PC will automatically detect and install the necessary drivers. This process may take a few moments.
5. Once drivers are installed, the controller will be ready for use with compatible PC games.

3. OPERATING THE CONTROLLER

The Dobe DJOYK-XO controller features a standard layout for intuitive gameplay. Familiarize yourself with the button functions for optimal use.

3.1 Key Features and Controls

- **Thumbsticks:** Redesigned for enhanced precision and comfort during gameplay.
- **D-Pad:** For directional input.
- **Action Buttons (A, B, X, Y):** Standard action buttons for in-game commands.
- **Shoulder Buttons (LB, RB) and Triggers (LT, RT):** For various in-game actions, including the Impulse Triggers for tactile feedback.
- **Menu and View Buttons:** For accessing game menus and other system functions.
- **Xbox Button:** For accessing the Xbox Guide or dashboard.
- **Headset Jack:** A 3.5mm port for connecting compatible headsets.



Image: Front view of the Dobe DOJYK-XO controller, highlighting the thumbsticks, D-pad, and action buttons.



Image: Angled view of the Dobe DJOYK-XO controller, showing the ergonomic grips and trigger buttons.

4. MAINTENANCE

4.1 Cleaning

- Disconnect the controller from your console or PC before cleaning.
- Use a soft, dry cloth to wipe the surface of the controller.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Do not allow liquids to enter the controller's openings.

4.2 Storage

- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid wrapping the cable tightly around the controller to prevent damage to the wire.

5. TROUBLESHOOTING

5.1 Controller Not Responding

- **Check Connection:** Ensure the USB cable is securely plugged into both the controller and the console/PC. Try a different USB port.
- **Restart Device:** Power cycle your Xbox One console or restart your PC.
- **Test on Another Device:** If possible, test the controller on another Xbox One or PC to determine if the issue is with the controller or the original device.

5.2 Buttons or Thumbsticks Not Working Correctly

- **Clean Controller:** Dust or debris might be interfering with button mechanisms. Refer to the cleaning instructions

in Section 4.1.

- **Software Check (PC):** On PC, ensure drivers are correctly installed. You can check Device Manager for any issues.

6. SPECIFICATIONS

Feature	Detail
Model Number	DJOYK-XO
Connectivity	Wired USB
Cable Length	1.9 meters (approximately)
Compatibility	Xbox One, PC (Windows)
Item Weight	340 g
Package Dimensions	18.2 x 15.4 x 8.2 cm
Manufacturer	Dobe

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

Dobe DJOYK-XO Wired Controller User Manual

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question