

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Furby](#) /

› [Furby Connect B6084 Instruction Manual](#)

Furby B6084

Furby Connect B6084 Instruction Manual

Model: B6084

INTRODUCTION

Welcome to the world of Furby Connect! This interactive electronic pet offers a unique experience with its expressive eyes, Furbish language, and connectivity to the Furby Connect World app. This manual will guide you through the setup, operation, and care of your Furby Connect B6084.



Image: Furby Connect B6084 packaging. The box displays the teal Furby, its light-up antenna, and a tablet showcasing the Furby Connect World app interface.

SETUP

1. Battery Installation

Your Furby Connect B6084 requires batteries for operation. Batteries are not included.

- Locate the battery compartment on the underside of your Furby.
- Use a screwdriver to open the battery compartment cover.
- Insert 4 x AA alkaline batteries, ensuring correct polarity (+/-).
- Replace the battery compartment cover and secure it with the screw.

2. Initial Power-Up

Once batteries are installed, your Furby Connect will typically power on automatically. If not, gently press the antenna or interact with it to wake it up.

3. App Connection (Optional)

For an enhanced experience, download the "Furby Connect World" app on a compatible mobile device.

- Ensure your mobile device's Bluetooth is enabled.
- Open the Furby Connect World app and follow the on-screen instructions to pair your Furby.
- The Furby's light-up antenna will glow when new content is available in the app.



Image: A boy holds a Furby Connect B6084. A blue sleep mask is visible on the table, indicating its use for putting Furby to sleep.

OPERATING YOUR FURBY CONNECT

1. Basic Interactions

Your Furby Connect responds to various physical interactions:

- **Petting:** Gently stroke Furby's head or back.
- **Tickling:** Lightly tickle Furby's sides or belly.
- **Shaking:** Gently shake Furby to elicit a reaction.
- **Turning Upside Down:** Invert Furby to see its response.
- **Moving Antenna:** Use the antenna like a joystick for different reactions.
- **Pulling Tail:** Gently pull Furby's tail for a response.



Image: A close-up of a hand petting the Furby Connect B6084, demonstrating a common interaction method.



Image: A boy holds the Furby Connect B6084 upside down, illustrating another way to interact with the toy.



Image: Two children interact with the Furby Connect B6084. One child gently pulls its tail, while the other holds a tablet displaying the app.

2. Expressive Features

- **Eyes:** Furby's colorful eyes display over 150 animations to convey its mood and reactions.
- **Language:** Furby speaks in its unique language, Furbish, but its expressions and context often make its meaning clear.

3. Furby Connect World App Integration

Connecting your Furby to the app unlocks additional features and content:

- **Discover Content:** Watch videos and listen to music together with Furby.
- **Feed Furby:** Use the app to virtually feed your Furby.
- **Raise Furblings:** Hatch and care for virtual Furblings within the app.
- **Updates:** Furby receives updates and new content by connecting to the app, ensuring fresh experiences.



Image: Two children engaging with the Furby Connect B6084 and a tablet, showcasing the interactive app experience.



Image: A boy interacts with the Furby Connect World app on a tablet, with the Furby Connect B6084 positioned next to the device.



Image: A close-up of hands using the Furby Connect World app on a tablet, with the Furby Connect B6084 visible in the background.



Image: Two children laughing and interacting with the Furby Connect B6084 and a tablet, highlighting the joyful experience.

4. Sleep Mode

To put your Furby Connect to sleep, place the included sleep mask over its eyes. Remove the mask to wake it up. If left unattended, Furby will enter sleep mode automatically after a period of inactivity.

MAINTENANCE

Cleaning

To clean your Furby Connect, gently wipe its surface with a dry, soft cloth. Do not use water or cleaning solutions, as this may damage the electronic components.

Battery Replacement

When Furby's responses become sluggish or it stops responding, it's likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section. Always use fresh alkaline batteries.

TROUBLESHOOTING

- **Furby is not responding:**

- Check if the batteries are correctly installed and have sufficient power. Replace if necessary.
- Ensure the sleep mask is not on Furby's face.
- Try gently interacting with Furby (petting, shaking) to wake it up.

- **App is not connecting to Furby:**

- Ensure Bluetooth is enabled on your mobile device.
- Make sure the Furby Connect World app is updated to the latest version.
- Restart both your Furby (by removing and reinserting batteries) and the app on your device.
- Ensure your device is compatible with the Furby Connect World app.

- **Furby is too loud or chatty:**

- Place the sleep mask on Furby to put it to sleep.
- If left without interaction, Furby will eventually go to sleep on its own.

SPECIFICATIONS

Model Number	B6084
Brand	Furby
Colour	Teal
Material	Plastic
Product Dimensions	13.46 x 27.94 x 22.61 cm
Item Weight	771.11 g
Batteries Required	Yes (4 x AA, not included)
Assembly Required	No
Language	English
Recommended Age	6 years and up
Connectivity	Bluetooth (for app integration)

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or replacement parts, please refer to the official Furby or Hasbro website, or contact their customer service directly. Specific warranty terms may vary by region and retailer.

