



[Manuals.plus](#) /

› [TASCO](#) /

› Tasco Essentials 8-24x25 Binoculars Instruction Manual

TASCO TASES82425Z

Tasco Essentials 8-24x25 Binoculars Instruction Manual

INTRODUCTION

Thank you for choosing the Tasco Essentials 8-24x25 Binoculars. These binoculars are designed to provide clear and bright viewing for various outdoor activities. Featuring multi-coated lenses for optimal light transmission and a rugged, weather-resistant housing with rubber armor, they offer durability and reliable performance. This manual provides detailed instructions for the proper setup, operation, and maintenance of your binoculars to ensure a satisfying user experience.



Image: Front view of the Tasco Essentials 8-24x25 Binoculars.

PACKAGE CONTENTS

Upon unpacking, please ensure all items are present:

- Tasco Essentials 8-24x25 Binoculars
- Carrying Case
- Neck Strap
- Objective Lens Caps
- Eyepiece Caps
- Lens Cleaning Cloth



Image: Tasco Essentials 8-24x25 Binoculars with included carrying case, neck strap, lens caps, and cleaning cloth.

PARTS OF THE BINOCULARS

Familiarize yourself with the main components of your binoculars:

1. **Objective Lenses:** The large lenses at the front of the binoculars that gather light.
2. **Eyepieces:** The lenses you look through.
3. **Center Focus Wheel:** Used to adjust the focus for both eyepieces simultaneously.
4. **Diopter Adjustment Ring:** Located on the right eyepiece, used to compensate for differences in vision between your eyes.
5. **Zoom Lever:** Adjusts the magnification from 8x to 24x.
6. **Eyecups:** Can be twisted up or down for comfortable viewing with or without eyeglasses.
7. **Strap Lugs:** Attachment points for the neck strap.



Image: Top view of the binoculars, highlighting the center focus wheel and zoom lever.



Image: Eyepieces with protective caps, showing the diopter adjustment on the right eyepiece.

SETUP

1. Attaching the Neck Strap

Thread the neck strap through the strap lugs on each side of the binoculars. Ensure the strap is securely fastened to prevent accidental drops.

2. Adjusting Eyecups

- **For non-eyeglass wearers:** Twist the eyecups up to their fully extended position.
- **For eyeglass wearers:** Twist the eyecups down to their lowest position to achieve the full field of view.

3. Adjusting Interpupillary Distance (IPD)

The interpupillary distance is the distance between the centers of your pupils. To adjust, hold the binoculars with both hands and look through them. Bend the binoculars at the hinge until you see a single, clear circular field of view. Note this setting for future use.

4. Focusing the Binoculars

Proper focusing involves two steps: adjusting the diopter and using the center focus wheel.

1. Diopter Adjustment:

- Set the zoom lever to its maximum magnification (24x).
- Close your right eye or cover the right objective lens.
- Look through the left eyepiece at a distant object and rotate the center focus wheel until the image is sharp and clear for your left eye.
- Now, open your right eye and close your left eye, or cover the left objective lens.
- Without touching the center focus wheel, rotate the diopter adjustment ring on the right eyepiece until the image is sharp and clear for your right eye.

2. **Using the Center Focus Wheel:** Once the diopter is set, you can use the center focus wheel to focus on objects at varying distances. The diopter setting should remain correct for your eyes, allowing you to focus across the entire 8x-24x zoom range without further diopter adjustments.

OPERATING YOUR BINOCULARS

Using the Zoom Function

The Tasco Essentials 8-24x25 Binoculars feature a variable zoom capability. To adjust the magnification:

- Locate the zoom lever, typically near the right eyepiece.
- While looking through the binoculars, slowly move the zoom lever to increase or decrease magnification.
- After changing the zoom level, you may need to slightly adjust the center focus wheel to regain optimal clarity.

Note: At higher magnifications (e.g., 24x), the field of view will naturally become narrower, and any hand movements will be more pronounced, making it harder to hold the image steady. For best results at high zoom, try to brace your arms or rest the binoculars on a stable surface.

CARE AND MAINTENANCE

Cleaning Lenses

Handle lenses with care to avoid scratches. Use the provided lens cleaning cloth or a soft, lint-free cloth. For stubborn dirt or smudges, a small amount of lens cleaning fluid designed for optics can be applied to the cloth, not directly to the lens. Avoid using abrasive cloths, paper towels, or harsh chemicals, as these can damage the lens coatings.

General Care and Storage

- Always replace lens caps when the binoculars are not in use to protect the lenses from dust and scratches.
- Store the binoculars in their carrying case in a cool, dry place when not in use.
- Avoid exposing the binoculars to extreme temperatures, direct sunlight for prolonged periods, or high humidity.
- Do not attempt to disassemble the binoculars, as this will void the warranty and can cause damage.

TROUBLESHOOTING

Blurred Image

- Ensure the center focus wheel is adjusted correctly for the distance of your object.
- Verify that the diopter adjustment on the right eyepiece is set correctly for your vision. Refer to the "Focusing the Binoculars" section.
- Check if the lenses are clean and free from smudges or condensation.

Narrow Field of View / Image Shaking at High Zoom

- This is a characteristic of zoom binoculars, especially at higher magnifications. The field of view naturally narrows as magnification increases.
- To minimize image shaking, try to stabilize the binoculars by resting your elbows on a surface or using a tripod (if compatible, though this model is compact and typically handheld).

Double Image or Misalignment

- If the binoculars have been dropped or subjected to impact, internal components may become misaligned, leading to a double image.
- Such issues typically require professional repair. Contact Tasco customer support for assistance.

Missing Lens Caps

- If lens caps are missing or damaged, contact Tasco customer support for replacement options.

SPECIFICATIONS

Model Number	TASES82425Z
Magnification	8-24x (Variable Zoom)
Objective Lens Diameter	25mm
Optics Coating	Fully Coated
Housing	Rugged, Weather-Resistant with Rubber Armor
Product Dimensions	5 x 2.75 x 6 inches
Item Weight	7.1 ounces

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Tasco customer service. Details regarding warranty coverage and service procedures can typically be found on the official Tasco website or by contacting their support team directly.

Please retain your proof of purchase for any warranty claims.

