

TOOLPORT 91119

TOOLPORT Party Tent 3x4 m Gazebo PE 450 N White-Grey Instruction Manual

Brand: TOOLPORT | Model: 91119

1. INTRODUCTION

This manual provides essential information for the safe and correct assembly, operation, and maintenance of your TOOLPORT Party Tent 3x4 m Gazebo. Please read these instructions carefully before beginning assembly and retain them for future reference. Proper installation and care will ensure the longevity and performance of your tent.

2. SAFETY INFORMATION

Important Safety Warnings:

- Always ensure the tent is securely anchored to the ground using the provided pegs and tension ropes, especially in windy conditions.
- This tent is designed for temporary outdoor events and moderate weather. It is not intended for permanent installation.
- Snow and heavy wind loads have not been tested for this tent. In case of strong winds or snowfall, it is recommended to temporarily remove the canopy.
- Remove any snow accumulation from the roof promptly to prevent structural damage.
- Check weather conditions before installing and using the tent. High winds can cause damage or collapse.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Do not use electrical appliances inside the tent without proper ventilation and safety precautions.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. The package includes:

- Steel frame components (tubes and connectors)
- Roof canopy (PE 450 N)
- Side panels with windows
- Front and rear panels with entrances
- Tension ropes
- Ground pegs
- Assembly instructions

If any parts are missing or damaged, please contact TOOLPORT customer support before proceeding with assembly.

4. SETUP INSTRUCTIONS

Assembly typically requires two or more people. Follow the steps below for a secure setup.

4.1. Prepare the Area

Choose a flat, level surface free from obstructions. Ensure adequate space for the 3x4 meter tent footprint and surrounding anchoring.

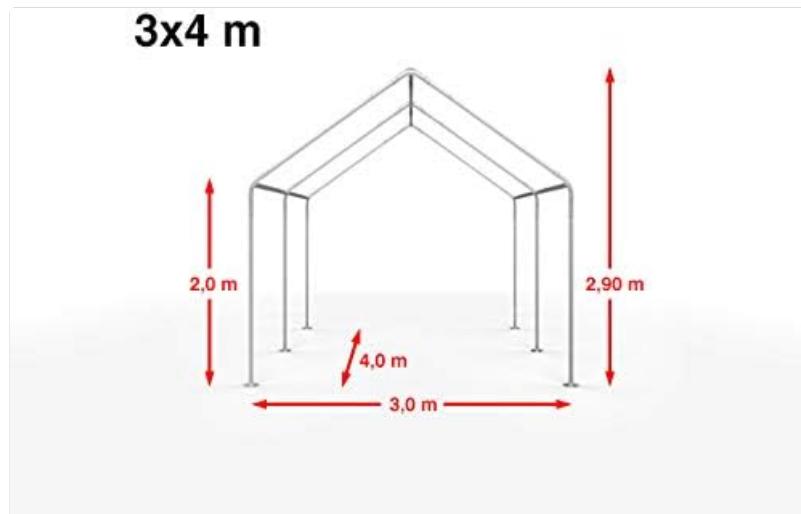


Image: Tent dimensions diagram (3x4 m). The tent measures 3 meters in width, 4 meters in length, with a side height of 2 meters and a peak height of 2.9 meters.

4.2. Assemble the Frame

1. Unpack all steel frame components. The frame consists of galvanized steel tubes (approx. 38mm diameter) and connectors (approx. 42mm diameter).
2. Connect the roof frame sections first. Use the provided through-bolts to secure connections, ensuring a robust and stable structure.
3. Attach the leg poles to the roof frame.
4. Ensure all connections are tight and secure.



Image: Detail of frame connection. This image shows how the galvanized steel tubes connect using through-bolts, providing a secure and easy-to-assemble joint.

4.3. Install the Roof Canopy

1. Carefully unfold the roof canopy (PE 450 N). The canopy is 100% waterproof and UV protected.
2. Drape the canopy over the assembled frame, ensuring it is centered and evenly distributed.
3. Secure the canopy to the frame using the integrated fastening points and elastic cords or straps. The single-span roof design enhances stability.

4.4. Attach Side and End Panels

1. Attach the side panels, which are individual 2-meter wide modules. These can be applied individually, allowing for flexible configurations.
2. Secure the panels to the frame using the integrated fasteners.
3. Install the front and rear panels, which include entrance openings.
4. The side panels feature ground deflectors for automatic climate control within the tent.



Image: Side panel window and attachment. This image illustrates the arched window design on the side panels and the method of securing the panel to the tent frame using a hook-and-loop strap.

4.5. Anchor the Tent

1. Use the provided ground pegs and tension ropes to firmly anchor the tent to the ground.
2. Ensure all ropes are taut and evenly distributed to provide maximum stability.



Image: Base plate and anchoring. This image shows the tent's base plate, approximately 9.5 cm in diameter, securely fastened to the ground with a peg and a tension rope, ensuring stability.





Image: Fully assembled TOOLPORT Party Tent. This image displays the tent fully erected on a lawn, showcasing its overall appearance with side panels and windows.



Image: Interior view of the party tent. This image provides a perspective from inside the tent, highlighting the spaciousness and the natural light entering through the arched windows.

5. OPERATING INSTRUCTIONS

This TOOLPORT Party Tent is designed for temporary use at events, markets, and private gatherings. It provides shelter from sun and light rain.

- **Weather Conditions:** Always monitor weather forecasts. Disassemble the tent or remove the canopy in anticipation of strong winds, heavy rain, or snow to prevent damage.
- **Ventilation:** The modular side panels allow for flexible opening and closing, providing ventilation as needed.
- **Anchoring:** Regularly check the tension ropes and ground pegs to ensure they remain secure, especially after changes in weather.

6. MAINTENANCE

Proper maintenance will extend the life of your party tent.

- **Cleaning:** Clean the canopy and side panels with mild soap and water. Avoid harsh chemicals or abrasive cleaners, as these can damage the PE material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** The galvanized steel frame is corrosion-resistant. If any rust spots appear, clean them and apply a rust-inhibiting paint.
- **Storage:** Ensure all fabric components are completely dry before folding and storing them in a cool, dry place. Store frame components neatly to prevent bending or damage.
- **Inspection:** Periodically inspect all components for wear and tear, especially before and after each use. Replace any damaged parts immediately.

7. TROUBLESHOOTING

Here are solutions to common issues:

- **Tent Instability:** Ensure all frame connections are tight and all ground pegs and tension ropes are securely fastened and taut. Re-anchor if necessary.
- **Water Accumulation on Roof:** Ensure the roof canopy is stretched tightly and evenly over the frame. Remove any standing water promptly to prevent damage.
- **Missing Parts:** If you discover missing parts upon unpacking, refer to the package contents list and contact TOOLPORT customer support for assistance.
- **Difficulty with Assembly:** Review the assembly instructions carefully. Ensure all components are correctly oriented. A second person can significantly ease the assembly process.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	400 x 300 x 200 cm (Side Height: 200 cm, Peak Height: 290 cm)
Weight	45.5 kg
Frame Material	Galvanized Steel (Tubes: approx. 38mm, Connectors: approx. 42mm)
Canopy Material	PE 450 N (100% waterproof, UV 30+ protection)
Color	White-Grey
Model Number	91119
Recommended Use	Parties, events, temporary outdoor shelter

9. WARRANTY INFORMATION

For specific warranty details regarding your TOOLPORT Party Tent, please refer to the warranty card included with your purchase or visit the official TOOLPORT website. Generally, products are covered against manufacturing defects for a specified period from the date of purchase. Damage resulting from improper assembly, misuse, extreme weather conditions, or lack of maintenance is typically not covered.

10. SUPPORT

If you require further assistance, have questions about assembly, or need to report a missing/damaged part, please contact TOOLPORT customer support. You can typically find contact information on the product packaging, the official TOOLPORT website, or through your retailer.

For online resources, visit the [TOOLPORT Brand Store on Amazon](#).