

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KidKraft](#) /

› [KidKraft Double-Sided Wooden Train and Activity Table \(Model 18006\) Instruction Manual](#)

## KidKraft 18006

# KidKraft Double-Sided Wooden Train and Activity Table (Model 18006) Instruction Manual

## INTRODUCTION

The KidKraft Double-Sided Wooden Train and Activity Table is designed to provide a versatile play surface for children aged 36 months to 3 years. This durable wooden table features a reversible tabletop for varied play scenarios and a built-in storage drawer to help keep play areas tidy. Its natural finish complements various home decors, offering a dedicated space for imaginative play.

## SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Adult supervision is recommended during play.

- **Recommended Age:** This product is suitable for children aged 36 months to 3 years.
- **Small Parts:** The product may contain small parts before assembly. Keep away from young children to prevent choking hazards.
- **Adult Assembly Required:** Assembly must be performed by an adult.
- **Stability:** Ensure the table is placed on a flat, stable surface. Do not allow children to climb or stand on the table.
- **Rounded Corners:** The table features rounded corners to help protect against sharp bumps.

## PARTS LIST

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact KidKraft customer support.

- Table panels (reversible tabletop)
- Table legs
- Storage drawer components
- Assembly hardware (screws, dowels, etc.)
- Assembly instructions

## SETUP AND ASSEMBLY

Assembly is designed to be straightforward and typically takes one adult an hour or less. Follow the included step-by-step instructions carefully.

- **Preparation:** Clear a spacious area for assembly. Lay out all parts and hardware.
- **Careful Handling:** When attaching components, avoid overtightening screws, as this may cause the wood to crack. Ensure all parts are aligned correctly before tightening.
- **Secure Connections:** Confirm all screws and fasteners are securely tightened to ensure the table's stability.



*Image: Front view of the KidKraft Double-Sided Wooden Train and Activity Table.*

*Video: Installation information and features of the KidKraft Double-Sided Wooden Train and Activity Table.*

## OPERATING INSTRUCTIONS

The activity table offers multiple ways to engage children in play.

### Reversible Tabletop

The tabletop consists of multiple panels that can be flipped to reveal different play surfaces:

- **Illustrated Play Surface:** One side features a colorful, illustrated landscape, ideal for train tracks,

vehicles, and figurines.

- **Whiteboard Surface:** The reverse side is a solid white surface, perfect for drawing with dry-erase markers (not included) or engaging in crafts like clay and play dough.



*Image: The table set up with wooden train tracks and various play accessories.*



*Image: The table showing its whiteboard surface, used for drawing and creative activities.*

#### **Built-in Storage Drawer**

The table includes a convenient pull-out storage drawer. This drawer allows children to easily store their train pieces, building blocks, and other small toys when not in use, helping to maintain a clean play area.



*Image: A child opening the integrated storage drawer to access toys.*

*Video: Demonstrating the multi-use functionality and storage of the KidKraft Activity Table.*

*Video: A review highlighting the KidKraft Activity Table as a versatile play surface.*

## MAINTENANCE

---

Proper care will ensure the longevity of your KidKraft Activity Table.

- **Cleaning:** Wipe the table surfaces with a damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the wood and painted surfaces.
- **Wood Care:** The table is crafted from durable wood. To maintain its appearance, avoid prolonged exposure to direct sunlight or extreme temperatures.
- **Inspections:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

## TROUBLESHOOTING

---

If you encounter any issues with your activity table, consider the following:

- **Assembly Issues:** If parts do not fit correctly or appear damaged, double-check the assembly instructions. Ensure screws are not overtightened, which can cause cracking.
- **Table Stability:** If the table feels wobbly, verify that all leg connections and frame screws are fully tightened. Ensure the table is on a level surface.
- **Drawer Functionality:** If the drawer is stiff or does not slide smoothly, check for any obstructions in the tracks or ensure the drawer components were assembled correctly.

## SPECIFICATIONS

---

| Feature                      | Detail   |
|------------------------------|--|
| Product Dimensions           | 47.5 x 31.75 x 15.75 inches  |
| Item Weight                  | 3.52 ounces ( <i>Note: This weight may refer to a component, not the entire table.</i> ) |
| Item Model Number            | 18006  |
| Manufacturer Recommended Age | 36 months - 3 years  |
| Manufacturer                 | KidKraft - Domestic  |

## WARRANTY AND SUPPORT

---

For warranty information, missing parts, or further assistance, please contact KidKraft customer support directly. Refer to the contact details provided in your product packaging or on the official KidKraft website.