

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MoKo](#) /
- › [MoKo Universal Foldable Keyboard User Manual](#)

MoKo 78-9963

MoKo Universal Foldable Keyboard User Manual

Model: 78-9963

Brand: MoKo

1. INTRODUCTION

Thank you for choosing the MoKo Universal Foldable Keyboard. This ultra-thin, portable wireless Bluetooth keyboard is designed for seamless compatibility with iOS, Android, and Windows tablet and smartphone devices. Its innovative foldable design makes it an ideal companion for productivity on the go. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The MoKo Universal Foldable Keyboard shown both folded for portability and unfolded for use, highlighting its compact and ergonomic design.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Foldable Bluetooth Keyboard
- Micro-USB charging cable
- User manual

3. SETUP GUIDE

3.1 Charging the Keyboard

Before initial use, fully charge the keyboard. Connect the included Micro-USB charging cable to the keyboard's charging port and the other end to any standard USB power source (e.g., computer USB port, USB wall adapter).

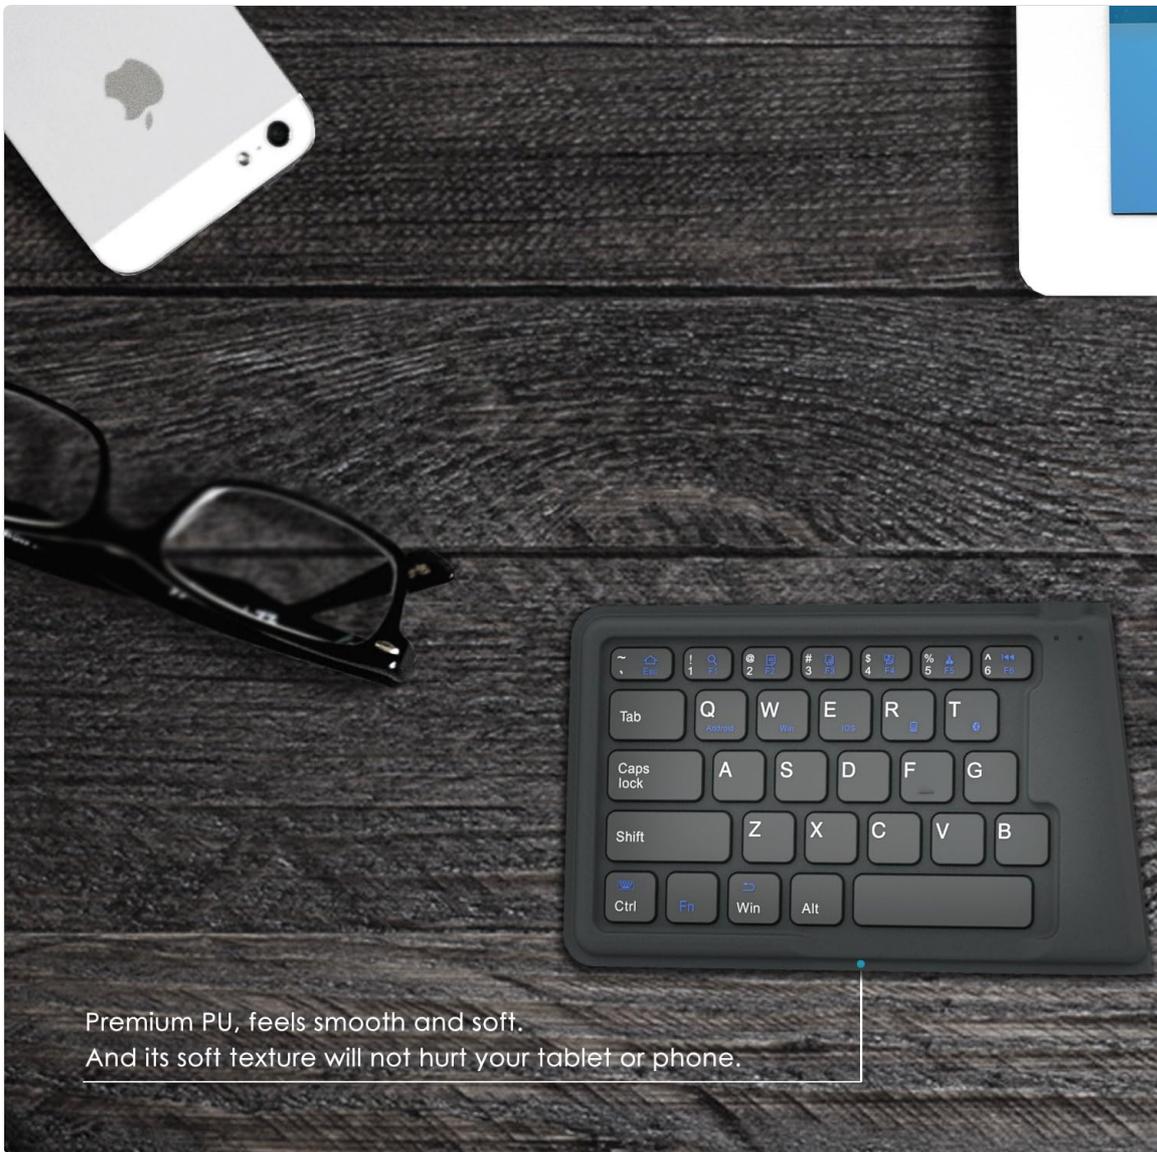


Image: An illustration showing the keyboard's excellent battery life, including 60 hours of consecutive working time and 30 days of standby time, with a charging time of less than 2 hours.

3.2 Power On/Off

The keyboard features an automatic magnetic switch. Simply unfold the keyboard to power it on. Fold the keyboard to power it off and conserve battery life.



MAGNETISM SWITCH

Simple unfold the keyboard, it will turn on and fold to turn off.



Image: A visual representation of the keyboard's magnetism switch, illustrating how unfolding the keyboard turns it on and folding it turns it off.

3.3 Bluetooth Pairing

1. Ensure the keyboard is powered on (unfolded).
2. On your device (tablet, smartphone), go to Bluetooth settings and turn on Bluetooth.
3. Press the **Fn + T** keys simultaneously on the keyboard to enter pairing mode. The blue LED indicator on the keyboard will blink.
4. On your device, search for "Foldable Bluetooth Keyboard" in the list of available devices and select it.
5. Wait for your device to show "Connected".



EFFICIENT BLUETOOTH CONNECTION

(**Fn+T** enter into pairing mode)
Adopting high-quality bluetooth chip makes bluetooth connection more quick and stable.

Image: A close-up of the keyboard highlighting the 'Fn' and 'T' keys, with a smartphone screen in the background showing the Bluetooth settings and the keyboard listed as 'Foldable Bluetooth Keyboard' ready for connection.

Your browser does not support the video tag.

Video: This video demonstrates the Bluetooth pairing process for the MoKo Foldable Bluetooth Keyboard, showing how to activate pairing mode and connect to a device.

4. OPERATING INSTRUCTIONS

4.1 System Compatibility

The MoKo Universal Foldable Keyboard is compatible with major operating systems. To switch between systems, press the following key combinations:

- **Fn + Q:** For Android System
- **Fn + W:** For Windows System
- **Fn + E:** For iOS System



ULTRA-THIN AND LIGHTWEIGHT

Fold into a small-sized one to put in bag or pocket, convenient to take with you wherever you go.



Image: Various devices (monitors, tablets, smartphones) are displayed, along with logos for Windows, iOS, and Android, indicating the keyboard's wide system compatibility.

Your browser does not support the video tag.

Video: This video showcases the MoKo Universal Foldable Keyboard's features, including its ultra-thin design, ergonomic layout, USB rechargeability, and compatibility with iOS, Android, and Windows systems.

4.2 Typing Experience

The keyboard features a full-size keyset and an ergonomic design with a 166° natural typing gesture, providing a comfortable and efficient typing experience. The sensitive and operative keys ensure accurate input.



Image: The MoKo Universal Foldable Keyboard is shown fully unfolded, highlighting its ergonomic split design for comfortable typing.

5. MAINTENANCE

5.1 Cleaning

To clean the keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish or internal components. Ensure the keyboard is powered off before cleaning.

5.2 Storage

When not in use, fold the keyboard to protect the keys and screen. Store it in a cool, dry place away from direct sunlight and extreme temperatures. The compact, folded size (6.2" x 4" x 0.5") allows it to easily fit into a purse, bag, or pocket.



Image: The keyboard is shown folded, emphasizing its ultra-thin and lightweight design, and its ability to be easily carried in a bag or pocket.

5.3 Battery Care

To prolong battery life, avoid fully discharging the keyboard frequently. Charge it regularly, especially if it will be stored for an extended period. Do not expose the keyboard to extreme heat or cold.

6. TROUBLESHOOTING

6.1 Keyboard Not Connecting

- Ensure the keyboard is fully charged.
- Make sure Bluetooth is enabled on your device.
- Re-enter pairing mode on the keyboard (**Fn + T**) and try searching for it again on your device.
- If previously paired, try 'forgetting' the device in your Bluetooth settings and then re-pairing.
- Ensure the keyboard is within the effective Bluetooth range (typically 10 meters).

6.2 Keys Not Responding

- Check if the keyboard is connected to your device.
- Verify that the correct operating system mode is selected (**Fn + Q/W/E**).
- Recharge the keyboard if the battery is low.
- Restart both the keyboard (fold and unfold) and your device.

6.3 Unexpected Behavior

- Interference from other wireless devices can affect performance. Move away from other Bluetooth or Wi-Fi devices.
- Ensure your device's operating system is up to date.

7. SPECIFICATIONS

Feature	Description
Brand	MoKo
Model Number	78-9963
Connectivity Technology	Bluetooth
Hardware Platform	Tablet, Smartphone
Operating System Compatibility	Windows, Mac OS, iOS, Android
Item Weight	6.2 ounces (176g)
Product Dimensions (Folded)	6.22 x 4 x 0.5 inches
Product Dimensions (Unfolded)	12.9"L x 4"W x 0.23"H
Color	Gray
Power Source	Battery Powered (1 Lithium Polymer battery included)
Number of Keys	64



EXCELLENT BATTERY LIFE

Consecutive 60-hour using time from a single charge and the standby time is up to 30 days.

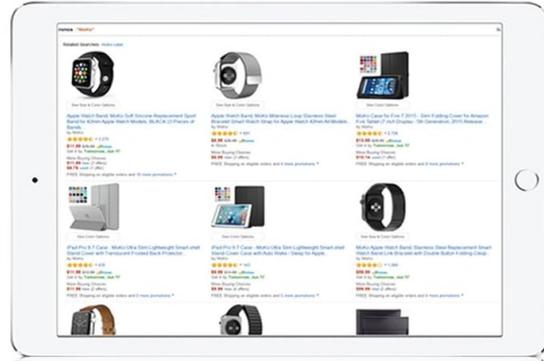
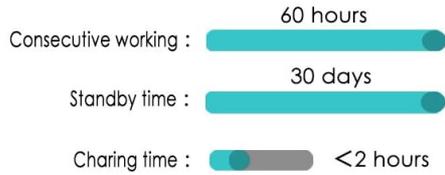


Image: A technical drawing showing the precise dimensions of the MoKo Foldable Keyboard in both its unfolded and folded states, including length, width, and thickness measurements.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact MoKo customer service directly. You can typically find contact details on the official MoKo website or through your purchase platform.

For additional resources, a PDF user manual is available for download: [Download User Manual \(PDF\)](#)