

[Manuals.plus](#) /

› [Farberware](#) /

› Farberware Countertop Microwave 1000 Watts, 1.3 Cu. Ft. - Microwave Oven With LED Lighting and Child Lock - Perfect for Apartments and Dorms - Easy Clean Stainless Steel 1.3 Cu. Ft. Stainless Steel

Farberware FMWO13AHTBKE

Farberware Countertop Microwave User Manual

Model: FMWO13AHTBKE

Brand: Farberware

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new Farberware Countertop Microwave Oven. Please read all instructions carefully before use and retain this manual for future reference.

The Farberware 1.3 Cu. Ft. Stainless Steel Microwave Oven is designed for convenience and performance. It features 1000 watts of output power, multiple power levels, and one-touch cooking programs to simplify your meal preparation. Its compact size makes it ideal for various spaces, including apartments, dorms, and office break rooms. The easy-to-clean interior and exterior, along with an LED display and child safety lock, enhance its functionality and user experience.



Image: Front view of the Farberware 1.3 Cu. Ft. Stainless Steel Countertop Microwave Oven, showcasing its sleek design and control

SETUP GUIDE

Unpacking and Placement

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.
3. Place the microwave on a flat, stable surface that can support its weight (approximately 33.7 pounds). Ensure there is adequate ventilation space: at least 4 inches (10 cm) of clearance on the top, sides, and rear.
4. Ensure the power cord is not pinched or damaged.

Electrical Requirements

- The microwave oven requires a standard 120V, 60Hz AC outlet with a grounded 3-prong plug.
- Do not use an extension cord unless absolutely necessary. If one is used, ensure it is a grounded 3-wire cord of the proper voltage and wattage rating.

Initial Setup

- Plug the microwave oven into a grounded electrical outlet.
- Place the glass turntable and turntable ring inside the oven cavity. Ensure they are properly seated.

Get the Perfect Fit.

compact size to
make the most of
your space



Image: Side view of the microwave with dimensions, highlighting its compact design for various spaces.

OPERATING INSTRUCTIONS

Control Panel Overview

The intuitive control panel allows for easy selection of cooking functions and settings.

Cooking Made Easy.



defrost options

six auto-cook presets

intuitive control panel

one touch start

child safety lock

Image: Close-up of the microwave's control panel, showing defrost options, auto-cook presets, intuitive control panel, one-touch start, and child safety lock.

Basic Cooking

- **Time Cook:** Enter desired cooking time using the number pad, then press "START".
- **Power Levels:** Press "Power" button, then select a power level from 1-10 using the number pad. Default is 10 (100% power).
- **Express Cook:** For quick cooking, press any number from 1 to 6 for instant cooking of 1 to 6 minutes at 100% power. Press "START +30SEC." to add 30 seconds to cooking time.

One-Touch Cooking Programs

The microwave includes six popular one-touch cooking programs:

- **Popcorn:** For pre-packaged microwave popcorn.
- **Potato:** For baking potatoes.

- **Pizza:** For reheating pizza slices.
- **Frozen Vegetable:** For cooking frozen vegetables.
- **Beverage:** For heating drinks.
- **Dinner Plate:** For reheating a dinner plate.

Simply press the corresponding button for the desired food item. The oven will automatically set the appropriate cooking time and power level.

Defrost Options

- **Time Defrost:** Enter the desired defrosting time.
- **Weight Defrost:** Enter the weight of the food to be defrosted. The oven will calculate the defrosting time automatically.

Child Safety Lock

To activate the child safety lock, press and hold the "STOP/CANCEL" button for 3 seconds. The display will show "LOCK". To deactivate, press and hold the "STOP/CANCEL" button again for 3 seconds.

Product Feature Video

Your browser does not support the video tag.

Video: An official product feature video demonstrating the various functions and ease of use of the Farberware Countertop Microwave Oven.

CARE AND MAINTENANCE

Cleaning the Exterior

- Wipe the exterior with a damp cloth and mild soap. Dry thoroughly.
- Avoid using abrasive cleaners or scouring pads, as they can scratch the stainless steel finish.

Cleaning the Interior

- For spills and splatters, wipe the interior with a damp cloth immediately.
- For stubborn stains, place a bowl of water with a few lemon slices inside the oven and microwave on high for 2-3 minutes. The steam will loosen the grime, making it easier to wipe clean.
- The glass turntable and turntable ring can be removed and washed with warm, soapy water or in the dishwasher.

General Care

- Always ensure the oven cavity is clean before use to prevent odors and maintain efficiency.
- Do not operate the microwave oven when empty.

Easy, Clean, Convenient.

easy-to-clean
interior is perfect for
the home and office



FARBERWARE

Image: The microwave door is open, revealing the easy-to-clean interior and glass turntable, with a bowl of popcorn inside.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Oven will not start.	• Power cord not plugged in securely. • Door is not closed properly. • Incorrect cooking time set. • Circuit breaker tripped or fuse blown.

Problem	Possible Cause / Solution
Food is not heating evenly.	- Food quantity is too large. - Food is not stirred or turned during cooking. - Turntable is not rotating properly.
Unusual noise during operation.	- Turntable or turntable ring is not positioned correctly. - Food container is touching the oven walls.
Child lock is active.	Press and hold "STOP/CANCEL" button for 3 seconds to deactivate.

If problems persist after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Model Number	FMWO13AHTBKE
Capacity	1.3 Cubic Feet
Wattage	1000 Watts
Voltage	120 Volts
Product Dimensions (D x W x H)	16.65"D x 20.43"W x 12.36"H
Item Weight	33.7 Pounds
Material	Stainless Steel
Installation Type	Countertop
Manufacturer	Farberware
Country of Origin	China

WARRANTY INFORMATION

This Farberware microwave oven typically comes with a 1-year limited warranty from the date of purchase, covering defects in material and workmanship under normal household use. Please refer to the official product documentation or contact customer support for specific warranty terms and conditions, as these may vary.

Extended protection plans may also be available for purchase, offering additional coverage beyond the standard manufacturer's warranty.

CUSTOMER SUPPORT

For technical assistance, warranty claims, or general inquiries regarding your Farberware Countertop Microwave Oven, please refer to the following resources:

- **Online User Manual:** A digital version of this manual can be found at [Farberware User Manual \(PDF\)](#).
- **Manufacturer Website:** Visit the official Farberware website for product registration, FAQs, and additional support information.
- **Customer Service:** Contact Farberware customer service directly for personalized assistance. Contact details are typically provided in the product packaging or on the official website.

Please have your model number (FMWO13AHTBKE) and purchase date ready when contacting support.

© 2025 Farberware. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question