

Farberware FMWO11AHTWHC

Farberware 1000-Watt Microwave Oven

MODEL: FMWO11AHTWHC

User Manual

Introduction

Thank you for purchasing the Farberware 1000-Watt Microwave Oven. This manual provides important information for the proper installation, operation, and maintenance of your appliance. Please read this manual thoroughly before using the microwave oven and keep it for future reference. Following these instructions will ensure safe and efficient operation of your new microwave oven.

Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, or injury to persons, do not operate the oven when empty.
- Do not attempt to tamper with, or make any adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
- Ensure the appliance is properly grounded. Connect only to properly grounded outlets.
- Do not use the oven for purposes other than heating food.
- Do not heat sealed containers, as they may explode.
- Always supervise children when they are near the microwave oven.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not immerse cord, plugs, or oven in water or other liquid.
- Maintain proper ventilation around the unit.

Product Overview



Figure 1: Front view of the Farberware 1000-Watt Microwave Oven, showcasing its white exterior and digital control panel.



Figure 2: The microwave oven with its door open, revealing the spacious 1.1 cubic feet cooking cavity and the removable glass turntable.

Components:

- **Door:** Features a handle for opening and closing.
- **Door Safety Lock System:** Prevents operation when the door is open.
- **Oven Window:** Allows viewing of food during cooking.
- **Turntable Ring:** Supports the glass turntable.
- **Glass Turntable:** Rotates food for even cooking.
- **Control Panel:** Contains the digital display and function buttons.

- **Waveguide Cover:** Located inside the oven cavity, protects the microwave components. Do not remove.

Control Panel:





Figure 3: Detailed view of the control panel, highlighting the LED display and button layout for various cooking functions.

The control panel features a digital LED display and various buttons for setting cooking times, power levels, and special functions:

- **Digital Display:** Shows time of day, cooking time, and power level.
- **Time Cook:** Used to set manual cooking time.
- **Time Defrost:** Defrosts food based on time input.
- **Weight Defrost:** Defrosts food based on weight input.
- **Power:** Adjusts cooking power level (10 levels).
- **Clock:** Sets the current time.
- **Kitchen Timer:** Functions as a standalone kitchen timer.
- **One-Touch Cooking Buttons:** Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate for pre-programmed cooking.
- **Express Cook (1-6):** Starts cooking immediately for 1 to 6 minutes with a single touch.
- **Number Pad (0-9):** Used to enter time, weight, or other numerical values.
- **STOP/Cancel:** Stops cooking, clears settings, or cancels a program. Press and hold to activate child lock.
- **START/+30SEC.:** Starts cooking or adds 30 seconds to the cooking time.

Setup

Unpacking:

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not install if damaged. Retain the carton and packing materials for future use or dispose of them properly.

Turtable Assembly:

1. Place the turntable ring on the oven cavity floor.
2. Place the glass turntable on top of the turntable ring, ensuring it sits securely in the center hub.

Placement:

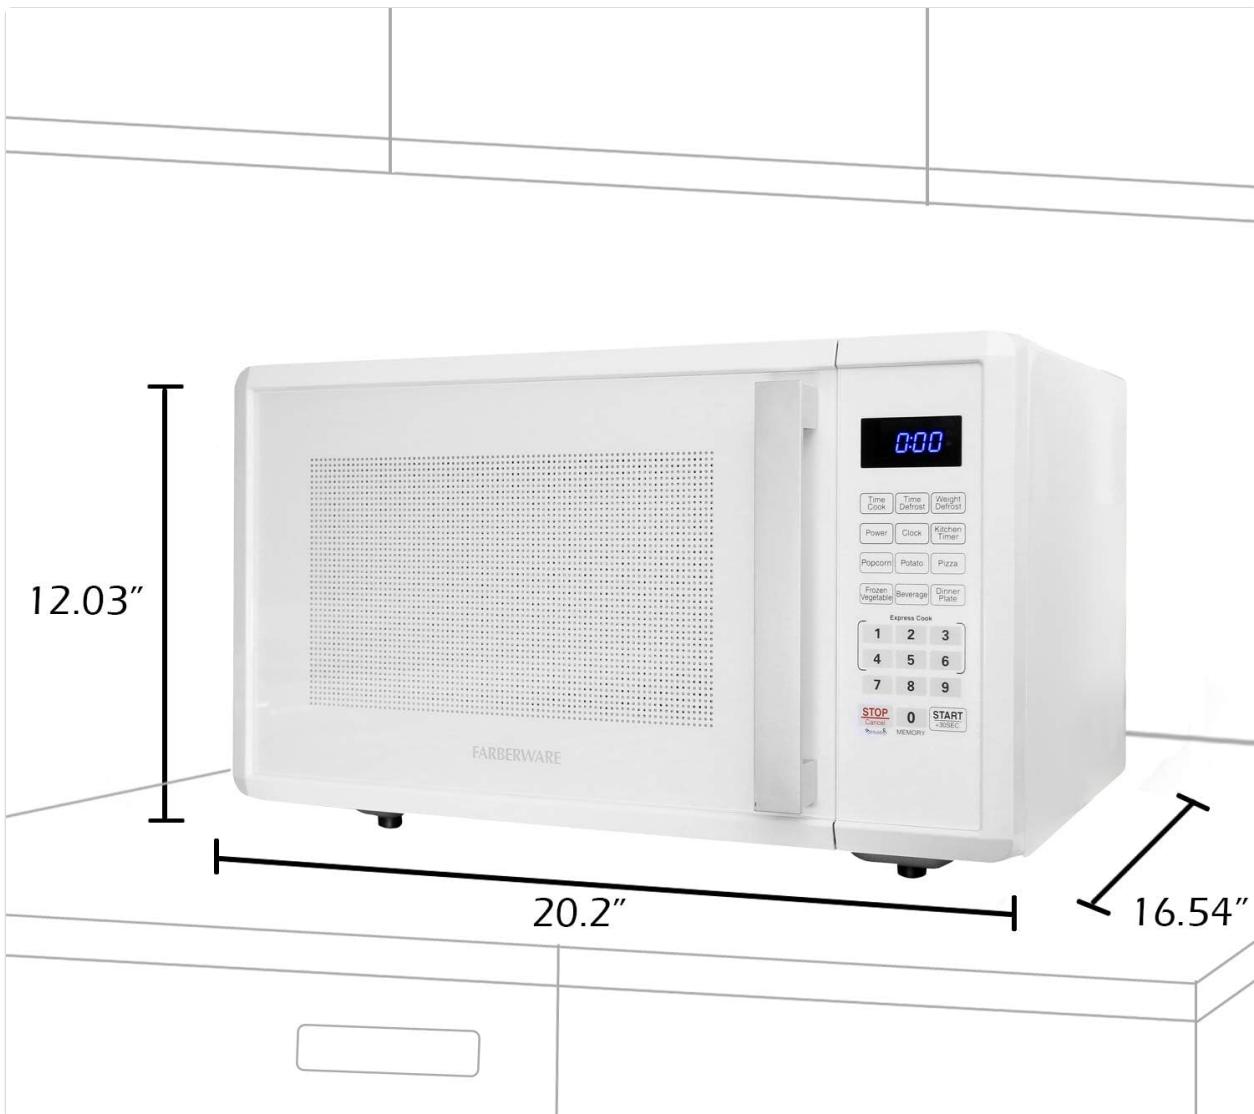


Figure 4: Dimensions of the microwave oven, useful for planning countertop placement.

- Place the oven on a flat, stable surface.
- Ensure adequate ventilation: Leave a minimum of 3 inches (7.6 cm) of space on the top, sides, and rear of the oven for proper airflow.
- Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.
- Do not place the oven in a cabinet unless specifically designed for built-in installation.

Power Connection:

Plug the power cord into a standard 3-prong, 120V AC, 60Hz grounded electrical outlet. Do not use an extension cord unless it is a grounded 3-wire cord.

Operating Instructions

Setting the Clock:

1. Press the **CLOCK** button once.
2. Use the number pad to enter the current time (e.g., 12:30 for 12:30 PM).
3. Press the **CLOCK** button again to confirm.

Basic Cooking (Time Cook):

1. Place food in the microwave-safe dish on the turntable. Close the door.
2. Press the **TIME COOK** button.
3. Use the number pad to enter the desired cooking time (e.g., 1 for 1 minute, 100 for 1 minute 00 seconds).
4. To adjust power level (optional): Press the **POWER** button, then use the number pad to enter a power level from 1 to 10 (10 being 100% power).
5. Press the **START/+30SEC.** button to begin cooking.

Express Cook:

For quick cooking at 100% power:

- Press any number from **1** to **6** on the number pad. The oven will start cooking immediately for that many minutes (e.g., pressing **2** will cook for 2 minutes).
- To add 30 seconds during cooking, press the **START/+30SEC.** button.

One-Touch Cooking:

The oven has pre-programmed settings for common foods:

- **Popcorn:** Press **POPCORN**.
- **Potato:** Press **POTATO** (press multiple times for quantity).
- **Pizza:** Press **PIZZA** (press multiple times for quantity).
- **Frozen Vegetable:** Press **FROZEN VEGETABLE** (press multiple times for quantity).
- **Beverage:** Press **BEVERAGE** (press multiple times for quantity).
- **Dinner Plate:** Press **DINNER PLATE**.

After selecting the desired one-touch function, the oven will automatically start cooking.

Defrosting:

Time Defrost:

1. Press the **TIME DEFROST** button.
2. Use the number pad to enter the desired defrosting time.
3. Press the **START/+30SEC.** button.

Weight Defrost:

1. Press the **WEIGHT DEFROST** button.
2. Use the number pad to enter the weight of the food in ounces (e.g., 16 for 16 oz).
3. Press the **START/+30SEC.** button.

Kitchen Timer:

1. Press the **KITCHEN TIMER** button.
2. Use the number pad to enter the desired time.
3. Press the **START/+30SEC.** button. The timer will count down without microwave operation.

Stopping/Canceling Operation:

To stop cooking temporarily, open the door. To cancel a program or clear the display, press the **STOP/Cancel** button once. To cancel a program and return to the clock display, press the **STOP/Cancel** button twice.

Maintenance and Cleaning

Regular cleaning of your microwave oven will help maintain its performance and extend its lifespan.

- **Interior:** Wipe the inside of the oven with a damp cloth after each use. For stubborn stains, use a mild detergent or microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Door Seal:** Wipe the door and door seal with a soft, damp cloth to remove any spills or splatters. Ensure the door seals are clean and free of debris to maintain proper closure.
- **Turntable and Ring:** The glass turntable and turntable ring can be washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Microwave on high for 5-7 minutes. Let it cool, then wipe the interior.

Always unplug the microwave oven before cleaning.

Troubleshooting

If you experience issues with your microwave oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
No heat.	Door not closed properly; Incorrect cooking time/power level set.	Ensure door is firmly closed; Verify cooking settings.
Turntable does not rotate.	Turntable not properly placed; Food too large or heavy.	Re-position turntable and ring; Use smaller dish or divide food.
Light not working.	Bulb burned out.	Contact qualified service personnel for bulb replacement.
Oven makes strange noises.	Turntable not properly seated; Food container touching oven walls.	Adjust turntable; Ensure dish is centered and not touching sides.

If the problem persists after trying these solutions, please contact customer support.

Specifications

- **Brand:** Farberware

- **Model:** FMWO11AHTWHC
- **Power Output:** 1000 Watts
- **Capacity:** 1.1 Cubic Feet
- **Color:** White
- **Dimensions (W x D x H):** Approximately 20.2 in x 16.54 in x 12.03 in (51.31 cm x 42.01 cm x 30.56 cm)
- **Special Features:** Programmable, Digital Control, LED Display, One-Touch Cooking Functions
- **Input Voltage:** 120V ~ 60Hz

Warranty and Support

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Farberware website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact Farberware customer service through their official channels.