

Farberware FMO07ABTBKA

Farberware Countertop 700-Watt Microwave Oven

Model: FMO07ABTBKA

Brand: Farberware

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not attempt to service or repair this appliance yourself. Refer all servicing to qualified service personnel.
- Ensure proper ventilation around the microwave oven. Maintain at least 4 inches of clearance from the back and sides, and 12 inches from the top.
- This appliance is designed for countertop use only. Do not install it in a cabinet or on a wall.
- Always use oven mitts when removing items from the microwave, as containers and food can become very hot.

PRODUCT OVERVIEW

The Farberware Countertop 700-Watt Microwave Oven is designed for convenient and efficient cooking. Familiarize yourself with its components and control panel for optimal use.

Components

- **Oven Cavity:** The interior space where food is heated.
- **Glass Turntable:** Rotates food for even heating.
- **Turntable Ring:** Supports the glass turntable.
- **Door Assembly:** Includes the door handle and viewing window.
- **Control Panel:** Contains the digital display and function buttons.



Image Description: A front view of the Farberware 0.7 cu ft 700-Watt Microwave Oven. The microwave is black with a dark tinted door and a digital control panel on the right side. The Farberware logo is visible below the door.

Control Panel

The intuitive control panel allows for easy operation of all microwave functions.

Cooking Made Easy.



defrost options

six auto-cook presets

intuitive control panel

one touch start

child safety lock

Image Description: A close-up view of the microwave's control panel. Labels point to key features: 'defrost options' (Time Cook, Time Defrost, Weight Defrost), 'six auto-cook presets' (Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate), 'intuitive control panel' (number pad 1-9, 0), 'one touch start' (START/+30SEC button), and 'child safety lock' (STOP/ECO button).

- **Digital Display:** Shows time, power level, and cooking status.
- **Time Cook:** Used to set manual cooking time.
- **Power:** Adjusts cooking power levels (1-10).
- **Defrost Options (Time/Weight):** For defrosting food by time or weight.
- **One-Touch Cooking Buttons:** Pre-programmed settings for common foods like Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, and Dinner Plate.
- **Number Pad (0-9):** Used to enter time or weight.
- **START/+30SEC:** Starts cooking or adds 30 seconds to cooking time.
- **STOP/ECO:** Stops cooking, clears settings, or activates child lock.
- **Memory:** Saves customized cooking settings.

Proper setup ensures safe and efficient operation of your microwave oven.

Unpacking

- Remove all packing materials from inside and outside the oven.
- Inspect the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches, or dents inside the cavity or on the door. If any damage is present, do not operate the oven and contact customer service.

Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.

- Ensure adequate ventilation. Maintain a minimum of 4 inches (10 cm) of space from the back and sides, and 12 inches (30 cm) from the top of the oven to allow for proper airflow.
- Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.
- Do not place the oven in a damp area or near water.

Get the Perfect Fit.

compact size to
make the most of
your space



Image Description: A side view of the Farberware microwave oven, illustrating its compact dimensions. The width is indicated as 17.75 inches, depth as 12.91 inches, and height as 10.1 inches. This image highlights the microwave's suitability for small spaces.

Electrical Connection

- Plug the microwave oven into a properly grounded 120V, 60Hz AC outlet.
- Do not use extension cords or adapters.

Turntable Installation

- Place the turntable ring in the center of the oven cavity floor.
- Place the glass turntable on top of the turntable ring, ensuring it sits securely in the center hub.

OPERATING INSTRUCTIONS

This section details how to use the various functions of your Farberware microwave oven.

Setting the Clock

1. Press the 'Clock' button.
2. Use the number pad to enter the current time (e.g., 12:30).
3. Press the 'Clock' button again to confirm.

Basic Cooking (Time Cook)

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Press the 'Time Cook' button.
4. Use the number pad to enter the desired cooking time (e.g., 1 for 1 minute, 10 for 10 seconds).
5. Press 'Power' to adjust power level (optional, default is 100%). Use number pad for power level (e.g., 5 for 50% power).
6. Press 'START/+30SEC' to begin cooking.

One-Touch Cooking

For quick cooking of popular items, simply press the corresponding button:

- **Popcorn:** Press once for standard popcorn bag.
- **Potato:** Press once for one potato, twice for two, etc.
- **Pizza:** Press once for a slice of pizza.
- **Frozen Vegetable:** Press once for a serving of frozen vegetables.
- **Beverage:** Press once for a cup of beverage.
- **Dinner Plate:** Press once for a standard dinner plate.

Defrosting

The microwave offers two defrost options: Time Defrost and Weight Defrost.

Weight Defrost

1. Press the 'Weight Defrost' button.
2. Enter the weight of the food using the number pad (e.g., 1.0 for 1.0 lb).
3. Press 'START/+30SEC'. The oven will automatically calculate the defrosting time.



Image Description: Two pieces of frozen tuna are shown on a rustic wooden cutting board, illustrating food suitable for the defrost function.

Time Defrost

1. Press the 'Time Defrost' button.
2. Enter the desired defrosting time using the number pad.
3. Press 'START/+30SEC'.

Kitchen Timer

1. Press the 'Timer/Clock' button.
2. Enter the desired time using the number pad.
3. Press 'START/+30SEC'. The timer will count down without microwave operation.

Child Safety Lock

To prevent unsupervised operation, especially by children, activate the child safety lock.

1. To activate: Press and hold the 'STOP/ECO' button for 3 seconds. A lock indicator will appear on the display.
2. To deactivate: Press and hold the 'STOP/ECO' button for 3 seconds again. The lock indicator will disappear.



Image Description: A small child stands on tiptoes, reaching towards a kitchen counter, emphasizing the importance of the child safety lock feature on the microwave.

Memory Function

The memory function allows you to save and recall your favorite cooking settings.

1. Set your desired cooking time and power level.
2. Press the 'Memory' button.
3. To recall, press 'Memory' and then 'START/+30SEC'.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will help prolong the life of your microwave oven.

Exterior Cleaning

- Wipe the exterior with a damp cloth and mild soap. Dry thoroughly.
- Avoid abrasive cleaners or scouring pads, as they can damage the finish.

Interior Cleaning

- Clean the inside of the oven regularly with a damp cloth. For stubborn stains, a mild detergent can be used.
- To remove odors, boil a cup of water with a few slices of lemon in the microwave for several minutes.
- Ensure the interior is dry after cleaning to prevent moisture buildup.

Easy, Clean, Convenient.

easy-to-clean
interior is perfect for
the home and office



FARBERWARE

Image Description: The Farberware microwave oven with its door open, revealing a bowl of popcorn inside. This image highlights the easy-to-clean interior and the capacity for common food items.

Turntable and Turntable Ring

- The glass turntable and turntable ring can be removed for cleaning.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly Plug not securely in outlet Fuse blown or circuit breaker tripped Child safety lock activated	Ensure door is firmly closed. Check plug and outlet. Check household fuse or reset circuit breaker. Deactivate child safety lock (hold STOP/ECO for 3 seconds).
Food not heating	Cooking time or power level set incorrectly Door not closed properly	Adjust cooking time and power level. Ensure door is firmly closed.
Turntable not rotating	Turntable or ring not positioned correctly Food too large or heavy	Reposition turntable and ring. Use a smaller dish or reduce food quantity.
Oven light not working	Bulb needs replacement	Contact qualified service personnel for bulb replacement.
Excessive moisture inside oven	Normal condensation from food Poor ventilation	Wipe interior dry after use. Ensure proper clearance around the oven.

If the problem persists after attempting these solutions, please contact Farberware customer support.

SPECIFICATIONS

- **Model:** FMO07ABTBKA
- **Capacity:** 0.7 Cubic Feet
- **Wattage:** 700 Watts
- **Voltage:** 120 Volts
- **Product Dimensions (D x W x H):** 12.91" x 17.75" x 10.1"
- **Item Weight:** 22.9 Pounds
- **Color:** Black
- **Control Type:** Touch
- **Special Feature:** Programmable
- **Installation Type:** Countertop
- **Included Components:** Microwave Oven, Turntable, User Guide
- **Manufacturer:** EMG East, Inc.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official documentation.

- **User Manual (PDF):** For comprehensive instructions and safety guidelines, please refer to the [official User Manual PDF](#).
- **Warranty Information (PDF):** Details regarding your product's warranty coverage can be found in the [official Warranty PDF](#).

- **Protection Plans:** Additional protection plans may be available for purchase to extend coverage beyond the standard warranty.

For further assistance, please visit the official Farberware website or contact their customer service department.

© 2024 Farberware. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question