

[manuals.plus](#) /› [Farberware](#) /› [Farberware 0.7 Cu. Ft. Countertop Microwave Oven - Instruction Manual](#)

Farberware 0.7 Cu. Ft. Countertop Microwave Oven

Farberware 0.7 Cu. Ft. Countertop Microwave Oven

MODEL: 0.7 Cu. Ft. COUNTERTOP MICROWAVE OVEN

Front view of the Farberware 0.7 Cu. Ft. Countertop Microwave Oven in white.

1. Introduction

This manual provides essential information for the safe and efficient operation of your new Farberware 0.7 Cu. Ft. Countertop Microwave Oven. Please read all instructions thoroughly before use and retain this manual for future reference.

2. Safety Information

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, observe the following basic precautions:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. Ensure the door closes properly and there is no damage to the door, hinges, latches, or sealing surfaces.
- Only qualified service personnel should adjust or repair this oven.
- Liquids such as water, coffee, or tea can overheat beyond the boiling point without appearing to be

boiling. Always exercise caution when handling containers.

- Do not heat sealed containers or aerosol cans.

3. Product Overview

The Farberware 0.7 Cu. Ft. Countertop Microwave Oven is designed for convenient and efficient food preparation. It features a compact design suitable for various kitchen spaces.



This image highlights the microwave's 0.7 cu. ft. capacity, 10 power levels, and 700 watts of power.

Key Features:

- **700 Watts Output Power:** Provides efficient heating for various food items.
- **Ten Power Levels:** Offers flexibility for precise cooking control.
- **Six One-Touch Cooking Programs:** Simplifies preparation for popular food items like popcorn, potato, and pizza.
- **Defrost Settings:** Allows defrosting by weight or by time.
- **Digital Screen with Clock and Timer:** Easy-to-read display for time and cooking status.
- **Memory Function:** Customize and save your preferred cooking settings.
- **Easy-Grip Handle:** Designed for comfortable and secure door opening.
- **Child Safety Lock:** Enhances safety by preventing unintended operation.
- **Easy-to-Clean Interior and Exterior:** Facilitates simple maintenance.

4. Setup

Unpacking:

1. Remove all packaging materials from the oven cavity and accessories.
2. Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

3. Remove any protective film from the exterior surfaces.

Placement:

- Place the oven on a flat, stable surface capable of supporting its weight (approximately 22.9 pounds).
- Ensure adequate ventilation: allow at least 3.9 inches (10 cm) of free space from the top, sides, and rear of the oven.
- Do not place the oven near heat sources or in areas with high humidity.
- The microwave dimensions are approximately 17.75"D x 12.91"W x 10.1"H.



This image illustrates the compact dimensions of the microwave, ideal for small spaces.

Turntable Installation:

1. Place the turntable ring inside the oven cavity.
2. Position the glass turntable plate securely on top of the turntable ring. Ensure it sits correctly on the center support.



The interior of the microwave with the glass turntable and a bowl of popcorn, demonstrating its capacity.

5. Operating Instructions

Control Panel Overview:

The control panel features a digital display, number pad, and dedicated function buttons for easy operation.



A close-up of the control panel, showing defrost options, auto-cook presets, and the child safety lock feature.

Basic Operation:

- **Setting the Clock:** Press the 'Clock' button, enter the current time using the number pad, and press 'Clock' again to confirm.
- **Time Cook:** Press 'Time Cook', enter the desired cooking time, and press 'Start'.
- **Express Cook:** For quick cooking, simply press a number from 1 to 6 for 1 to 6 minutes of cooking time at full power. Press 'Start' to add 30 seconds to the current cooking time.
- **Power Level:** To adjust power, press 'Power', select a power level from 1-10 using the number pad, then enter cooking time and press 'Start'.

Auto Cook Settings:

The microwave includes six one-touch auto cook programs:

- **Popcorn:** For pre-packaged popcorn.
- **Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Frozen Vegetable:** For cooking frozen vegetables.
- **Beverage:** For heating drinks.
- **Dinner Plate:** For reheating a dinner plate.

To use, simply press the corresponding auto cook button. The oven will automatically set the appropriate cooking time and power level.

Defrost Settings:

- **Weight Defrost:** Press 'Weight Defrost', enter the food's weight, and press 'Start'.
- **Time Defrost:** Press 'Time Defrost', enter the desired defrosting time, and press 'Start'.

Child Safety Lock:

To activate the child safety lock, press and hold the 'Stop/Cancel' button for 3 seconds. The lock indicator will appear on the display. To deactivate, press and hold 'Stop/Cancel' again for 3 seconds.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Exterior:** Clean the exterior with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Interior:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild microwave-safe cleaner.
- **Turntable:** The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher.
- **Door Seals:** Keep the door seals clean to ensure proper closure and efficient operation.

7. Troubleshooting

If you encounter any issues with your microwave, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door firmly; Replace fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power level; Metal objects in oven.	Adjust time/power; Remove metal objects.
Turntable not rotating	Turntable not properly seated; Debris under turntable.	Ensure turntable is correctly placed; Clean under turntable.
Oven light not working	Light bulb burned out.	Contact customer service for bulb replacement.

8. Specifications

Feature	Specification
Product Dimensions (D x W x H)	17.75 x 12.91 x 10.1 inches
Item Weight	22.9 pounds
Capacity	0.7 Cubic Feet

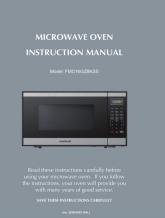
Feature	Specification
Wattage	700 watts
Voltage	120 Volts
Color	White
Installation Type	Countertop
Material	Stainless Steel
Included Components	Microwave Oven, Turntable, User Guide

9. Warranty and Support

This Farberware microwave oven comes with a limited manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, service, or warranty claims, please contact Farberware customer service. Contact information can typically be found in your product packaging or on the official Farberware website.

Related Documents - 0.7 Cu. Ft. Countertop Microwave Oven

 User Manual of Product 1: Farberware Countertop Microwave Oven with LED Lighting and Child Lock. Model: FMO11AHTBKO. Includes: 1000W Microwave with LED Lighting and Child Lock. Perfect for Apartments and Dorms - Easy Clean Metallic Red.	<p>Farberware FMO11AHTBKO Microwave Oven User Manual & Safety Guide</p> <p>Comprehensive user manual for the Farberware FMO11AHTBKO countertop microwave oven. Includes safety instructions, operating procedures, maintenance tips, and warranty information for this 1000-watt appliance.</p>
 MICROWAVE OVEN INSTRUCTION MANUAL Model FMO16GZBKSS FARBERWARE	<p>Farberware FMO16GZBKSS Microwave Oven Instruction Manual</p> <p>This instruction manual provides detailed guidance for operating the Farberware FMO16GZBKSS 1.6 cu. ft. countertop microwave oven. It covers essential safety precautions, installation steps, detailed operation instructions for various cooking modes, control panel functions, cleaning and maintenance, and warranty information.</p>
 FARBERWARE	<p>Farberware 0.7 Cu. Ft. Microwave Oven FMG07BLK Instruction Manual</p> <p>Comprehensive instruction manual for the Farberware 0.7 Cu. Ft. Microwave Oven (Model FMG07BLK). Covers safety precautions, operation, features, cleaning, maintenance, and warranty information.</p>

 <p>FARBERWARE</p>	<p><u>Farberware FMO11WEIWH Microwave Oven Instruction Manual</u></p> <p>Comprehensive instruction manual for the Farberware FMO11WEIWH microwave oven. Includes safety precautions, specifications, operating instructions, cleaning tips, maintenance, and warranty information.</p>
 <p>FARBERWARE</p>	<p><u>Farberware FMR17BLK Microwave Oven Instruction Manual</u></p> <p>This instruction manual provides essential safety precautions, operating instructions, maintenance tips, and warranty information for the Farberware FMR17BLK microwave oven.</p>
	<p><u>Farberware Professional 5-Liter Complete Portable Countertop Dishwasher Use and Care Manual</u></p> <p>This manual provides important safety information, operating instructions, and troubleshooting tips for the Farberware Professional 5-Liter Complete Portable Countertop Dishwasher. Learn how to load, operate, and maintain your dishwasher for optimal performance.</p>