

[Manuals.plus](#) /

› [SKMEI](#) /

› SKMEI Digital Sports Watch User Manual - Model SKM060107

SKMEI SKM060107

SKMEI Digital Sports Watch User Manual

MODEL: SKM060107

1. Introduction

Thank you for purchasing the SKMEI Digital Sports Watch, Model SKM060107. This manual provides detailed instructions on how to operate and maintain your watch. Please read it carefully to ensure proper use and to enjoy all the features this watch offers.

Key Features:

- Digital Time Display (Hour, Minute, Second)
- Date and Day of the Week Display
- Daily Alarm Function
- Chronograph (Stopwatch)
- LED Backlight
- 30 Meters (3 ATM) Water Resistance

2. Parts and Button Functions

Familiarize yourself with the watch's buttons and their functions:



Figure 1: SKMEI Digital Sports Watch - Front View with Button Labels

This image displays the watch face with the time 22:17:45, day SU 1-28, and indicators for ALM (Alarm) and SIG (Hourly Chime). The four buttons are clearly visible around the bezel.

- **A (LIGHT) Button (Top Left):** Activates the LED backlight for illumination in dark conditions.
- **B (START) Button (Top Right):** Starts and stops the chronograph. Used to adjust values when setting time or alarm.
- **C (MODE) Button (Bottom Left):** Cycles through the watch's different modes: Time Display → Alarm Setting → Chronograph.
- **D (RESET) Button (Bottom Right):** Resets the chronograph. Used to select items or move to the next setting field when setting time or alarm.

3. Initial Setup: Setting Time and Date

Follow these steps to set the current time and date:

1. From the normal time display mode, press the **C (MODE)** button three times. The seconds digits will start flashing, indicating you are in time setting mode.
2. Press the **D (RESET)** button to cycle through the settings in the following order: Seconds → Hour → Minute → Month → Date → Day of the Week.
3. While a digit is flashing, press the **B (START)** button to adjust the value. Hold the **B (START)** button to advance the digits quickly.
4. Once all settings are correct, press the **C (MODE)** button to exit the setting mode and return to the normal time display.

4. Operating Modes

4.1. Time Display Mode

This is the default mode, showing the current time (hours, minutes, seconds), date, and day of the week.

4.2. Alarm Mode

To set the alarm:

1. From the normal time display, press the **C (MODE)** button once to enter Alarm Mode. The alarm time will be displayed.
2. Press the **D (RESET)** button to select the hour or minute digits.
3. Press the **B (START)** button to adjust the flashing hour or minute.
4. Press the **C (MODE)** button to exit alarm setting.

To activate/deactivate the alarm and hourly chime:

- In Alarm Mode, press the **B (START)** button to toggle the alarm ON/OFF. An alarm icon (ALM) will appear/disappear on the display.
- Press the **D (RESET)** button to toggle the hourly chime ON/OFF. An hourly chime icon (SIG) will appear/disappear on the display.

4.3. Chronograph (Stopwatch) Mode

To use the stopwatch:

1. From the normal time display, press the **C (MODE)** button twice to enter Chronograph Mode. The display will show 00:00:00.
2. Press the **B (START)** button to start the stopwatch.
3. Press the **B (START)** button again to stop the stopwatch.
4. Press the **D (RESET)** button to reset the stopwatch to 00:00:00.
5. Press the **C (MODE)** button to return to the normal time display.

4.4. LED Backlight

Press the **A (LIGHT)** button to illuminate the display for a few seconds.

5. Maintenance and Care

5.1. Water Resistance

This watch is rated for 30 Meters (3 ATM) water resistance. This means it is suitable for daily use, such as splashes, rain, and hand washing. It is **not** suitable for showering, bathing, swimming, diving, or any water sports where it might be submerged.

- Do not operate buttons while the watch is wet or submerged.
- Avoid exposing the watch to hot water or steam, as this can damage the seals.

5.2. Cleaning

Wipe the watch case and band with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying thoroughly. Avoid using chemical cleaners, as they may damage the watch's materials.

5.3. Battery Replacement

When the display becomes dim or the backlight stops working, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

6. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim	Low battery	Replace battery.
Buttons do not respond	Temporary malfunction	Remove and reinsert battery (if comfortable), or allow watch to sit for a few minutes. If issue persists, seek professional service.
Time is inaccurate	Low battery; watch exposed to strong magnetic fields	Replace battery. Keep watch away from strong magnets. Reset time.

7. Specifications

- **Model Number:** SKM060107
- **Display Type:** Digital
- **Movement:** Quartz
- **Case Material:** Plastic
- **Band Material:** Plastic
- **Dial Window Material:** Plastic
- **Case Diameter:** 43 mm
- **Case Thickness:** 14 mm
- **Band Width:** 29 mm
- **Band Length:** Approximately 28 cm
- **Weight:** 80 g
- **Water Resistance:** 30 Meters (3 ATM)
- **Functions:** Time, Date, Day, Alarm, Chronograph, LED Backlight

8. Warranty and Support

This SKMEI watch comes with a **12-month (1-year) warranty** from the date of purchase, covering manufacturing defects. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims or technical support, please contact your original retailer or the SKMEI customer service department

through their official website.

© 2023 SKMEI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question