

Fakir Prestige AC 9

Fakir Prestige AC 9 Portable Air Conditioner

USER MANUAL

1. Introduction

This manual provides essential information for the safe and efficient operation of your Fakir Prestige AC 9 Portable Air Conditioner. Please read these instructions thoroughly before installation and use, and retain them for future reference. This appliance is designed for cooling, heating, dehumidifying, and fan-only operation in indoor environments.

2. Safety Information

- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the unit with a damaged cord or plug.
- Keep the appliance away from heat sources and direct sunlight.
- Do not block air inlets or outlets.
- Always unplug the unit before cleaning or maintenance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.

3. Product Overview



Figure 1: Front view of the Fakir Prestige AC 9 Portable Air Conditioner. This image displays the compact design of the unit, featuring a white body with a black top panel where the control interface is located. The air outlet is visible on the upper front section.

The Fakir Prestige AC 9 is a versatile portable air conditioner offering four primary functions: cooling, heating, dehumidifying, and fan-only operation. It features a user-friendly control panel and comes with a remote control for convenient operation.

4. Setup and Installation

4.1 Unpacking

1. Carefully remove the appliance from its packaging.
2. Check for any damage during transit. If damaged, do not operate and contact your retailer.
3. Retain the packaging for future storage or transport.

4.2 Placement

- Place the unit on a firm, level surface to minimize noise and vibration.
- Ensure there is at least 30 cm (12 inches) of clear space around the unit for proper airflow.
- Position the unit near a window or door for exhaust hose installation.

4.3 Exhaust Hose Installation

1. Attach the exhaust hose connector to the back of the unit.
2. Extend the exhaust hose and attach the window kit adapter to the other end.

3. Install the window kit into a partially open window, ensuring a tight seal to prevent outside air from entering.
4. Route the exhaust hose through the window kit. Keep the hose as short and straight as possible to maximize efficiency.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Do not use extension cords or multi-sockets.

5. Operating Instructions

5.1 Control Panel and Display



Figure 2: Close-up view of the control panel and display on the Fakir Prestige AC 9. The digital display shows the current temperature, and various buttons for mode selection, fan speed, timer, and swing function are clearly visible.

The control panel on the top of the unit allows direct control of all functions. The digital display shows the set temperature or other relevant information.

5.2 Remote Control

The included remote control provides convenient access to all functions from a distance. Ensure batteries are correctly inserted.

5.3 Operating Modes

- **Cool Mode:** Press the 'Mode' button until the 'Cool' indicator lights up. Use the temperature adjustment buttons to set your desired temperature (16°C - 32°C).
- **Heat Mode:** Press the 'Mode' button until the 'Heat' indicator lights up. Set your desired temperature

(16°C - 32°C).

- **Dehumidify Mode (DRY):** Press the 'Mode' button until the 'Dry' indicator lights up. The unit will operate to remove moisture from the air. Temperature and fan speed are typically not adjustable in this mode.
- **Fan Mode:** Press the 'Mode' button until the 'Fan' indicator lights up. The unit will circulate air without cooling or heating.

5.4 Fan Speed Adjustment

In Cool, Heat, and Fan modes, press the 'Fan Speed' button to cycle through Low, Mid, and High settings.

5.5 Timer Function

The timer allows you to set a specific time for the unit to turn on or off automatically. Press the 'Timer' button and use the adjustment buttons to set the desired duration (up to 24 hours).

5.6 Swing Function

Press the 'Swing' button to activate the automatic oscillation of the air outlet louvers, distributing air more evenly.

6. Maintenance

6.1 Cleaning the Air Filter

The air filter should be cleaned every two weeks or more frequently depending on usage. A dirty filter reduces efficiency. To clean:

1. Unplug the unit from the power outlet.
2. Remove the filter from the back or side of the unit (refer to diagram in full manual if available).
3. Wash the filter with lukewarm water and a mild detergent. Rinse thoroughly.
4. Allow the filter to air dry completely before reinstalling. Do not expose to direct sunlight.

6.2 Draining Condensed Water

During cooling and dehumidifying operations, water condenses inside the unit. The unit has a self-evaporating system, but in high humidity conditions, the internal water tank may fill. When full, the unit will stop operating and display an error code (e.g., 'FL').

- Unplug the unit.
- Place a shallow pan or tray under the drainage outlet at the bottom rear of the unit.
- Remove the drain plug to allow water to flow out.
- Once drained, replace the drain plug securely.

6.3 Cleaning the Exterior

Wipe the exterior of the unit with a soft, damp cloth. Do not use harsh chemicals, abrasives, or solvents.

6.4 Storage

If storing the unit for an extended period:

1. Drain all condensed water.
2. Clean the air filter.
3. Run the unit in fan-only mode for a few hours to dry the interior.

4. Unplug the unit and coil the power cord.
5. Store in a dry, cool place, preferably in its original packaging.

7. Troubleshooting

Problem	Possible Cause	Solution
Unit does not turn on	No power supply Power cord not plugged in Full water tank (in DRY/COOL mode)	Check power outlet Ensure plug is firmly inserted Drain the water tank
Unit not cooling/heating effectively	Air filter dirty Exhaust hose blocked or improperly installed Doors/windows open Room too large for unit capacity	Clean air filter Check and clear exhaust hose; ensure proper sealing Close all doors and windows Consider using in a smaller room
Unusual noise or vibration	Unit not on a level surface Obstruction in fan	Place on a flat, stable surface Unplug and check for obstructions (contact service if inaccessible)
Error Code 'FL' (or similar)	Water tank full	Drain the water tank as per Section 6.2

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Feature	Specification
Brand	Fakir
Model	Prestige AC 9
Cooling Capacity	9000 BTU/H (2.6 kW)
Heating Capacity	9000 BTU/H (2.6 kW)
Dehumidifying Capacity	14.4 Liters/day
Energy Efficiency Class (Cooling)	A
Energy Efficiency Class (Heating)	A+
Seasonal Energy Efficiency Ratio (SEER)	2.6
Fan Speeds	3 (Low, Mid, High)
Temperature Range	16°C - 32°C

