

Severin MW 7869

SEVERIN MW 7869 Microwave with Grill User Manual

Model: MW 7869 | Brand: Severin

INTRODUCTION

Thank you for choosing the SEVERIN MW 7869 Microwave with Grill. This appliance combines the convenience of a microwave oven with the versatility of a grill, offering 9 power levels and a defrost function to meet all your cooking needs. Please read this manual carefully before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Figure 1: The SEVERIN MW 7869 Microwave with Grill, showcasing its sleek silver and black design and front controls.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock,

injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- Do not use corrosive chemicals or vapors in this appliance.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape from the oven surfaces. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation around the appliance. Maintain a minimum clearance of 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.

Turtable Installation

The glass turntable and turntable ring must be installed before use. Place the turntable ring on the oven floor, then place the glass turntable securely on top of the ring, ensuring it sits correctly on the central hub.



Figure 2: Proper placement of the glass turntable inside the microwave oven, essential for even cooking.



Figure 3: The grill rack positioned on the turntable, used for grilling functions.

OPERATING INSTRUCTIONS

The SEVERIN MW 7869 features intuitive jog dial controls for power level selection and timer settings.

Control Panel Overview

- **Upper Dial:** Power Level Selector (Microwave, Grill, Defrost, Combination).
- **Lower Dial:** Timer (up to 30 minutes).

Microwave Cooking

This appliance offers 9 power levels for microwave cooking, allowing precise control over heating intensity.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Upper Dial** to select the desired microwave power level.
4. Turn the **Lower Dial** to set the cooking time (up to 30 minutes). The oven will start automatically.
5. The oven will stop and chime when the set time expires.

Grill Function

The integrated grill function is ideal for browning and crisping food. Use the provided grill rack for best results.

1. Place food on the grill rack, which should be placed on the glass turntable.
2. Close the oven door securely.
3. Turn the **Upper Dial** to the "Grill" setting.
4. Turn the **Lower Dial** to set the grilling time.
5. Monitor food closely to prevent over-browning.

Defrost Function

The defrost function allows for quick and efficient thawing of frozen foods.

1. Place frozen food on the glass turntable.
2. Close the oven door securely.
3. Turn the **Upper Dial** to the "Defrost" setting.
4. Turn the **Lower Dial** to set the defrosting time. The time will vary based on the weight and type of food.
5. Periodically check and turn the food during defrosting for even thawing.

Combination Cooking (Microwave + Grill)

This feature allows you to combine microwave cooking with grilling for faster cooking and browning results.

1. Place food in a suitable container on the grill rack or turntable.
2. Close the oven door securely.
3. Turn the **Upper Dial** to one of the combination settings (e.g., Microwave + Grill).
4. Turn the **Lower Dial** to set the cooking time.
5. The oven will automatically cycle between microwave and grill functions.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven. Always unplug the appliance before cleaning.

- **Interior Cleaning:** The lacquered interior surface is designed for easy cleaning. Wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen food particles, then wipe clean.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Turntable and Ring:** The glass turntable and turntable ring can be removed and washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Regularly clean the door seals and adjacent parts with a damp cloth to ensure proper sealing and efficient operation.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Fuse blown or circuit breaker tripped; Door not closed properly.	Ensure plug is securely in outlet; Check household fuse/circuit breaker; Close door firmly.
Food not heating.	Power level set too low; Cooking time too short.	Increase power level or cooking time.
Turntable not rotating.	Turntable not properly seated; Debris under turntable ring.	Re-seat turntable and ring; Clean under the turntable ring.
Excessive steam from door.	Normal during cooking of high-moisture foods.	This is normal and not a fault.

If the problem persists after trying these solutions, please contact Severin customer support.

SPECIFICATIONS

Brand	Severin
Model Number	MW 7869
Color	Silver/Black
Capacity	22 Litres
Special Features	Defrost function, Grill, Keep warm function, Turntable
Recommended Uses	Domestic
Installation Type	Freestanding
Power	900 Watts
Material	Stainless Steel
Controller Type	Jog Dial

WARRANTY AND SUPPORT

Severin products are manufactured to high-quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, spare parts, or service inquiries, please visit the official Severin website or contact their customer service department. Ensure you have your model number (MW 7869) and purchase details ready when contacting support.

You can find more information and support at the [Severin Brand Store on Amazon](#).

© 2024 Severin. All rights reserved.