

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [VIZIO](#) /

> VIZIO XRT122 Remote Control User Manual

VIZIO XRT122

VIZIO XRT122 Remote Control User Manual

Model: XRT122

INTRODUCTION

This manual provides comprehensive instructions for the VIZIO XRT122 remote control. Designed for ease of use, this remote allows you to control various functions of your compatible VIZIO television. Please read this manual thoroughly to ensure proper operation and to maximize your viewing experience.

Compatible VIZIO TV Models:

- D39H-D0, D39HD0
- D50U-D1, D50UD1
- D55U-D1, D55UD1
- D58U-D3, D58UD3
- D65U-D2, D65UD2
- E32-C1, E32C1
- E32H-C1, E32HC1
- E40-C2, E40C2
- E40X-C2, E40XC2
- E43-C2, E43C2
- E48-C2, E48C2
- E50-C1, E50C1
- E55-C1, E55C1
- E55-C2, E55C2
- E60-C3, E60C3
- E65-C3, E65C3
- E65X-C2, E65XC2
- E70-C3, E70C3

SETUP

Battery Installation

The VIZIO XRT122 remote control requires two (2) AAA batteries for operation. Ensure batteries are inserted with correct polarity.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two new AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



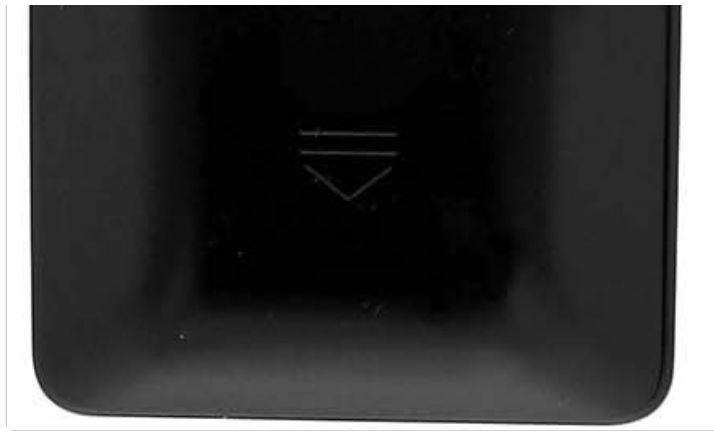


Image: Back of the VIZIO XRT122 remote control, showing the battery compartment. The compartment is located at the top-center of the remote's back, designed for easy access to insert or replace AAA batteries.

OPERATING INSTRUCTIONS

To operate your VIZIO TV with the XRT122 remote, point the remote directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.



Image: Front view of the VIZIO XRT122 remote control. This image displays the full layout of the remote, including the power button, input selection, navigation pad, volume and channel controls, and dedicated app buttons for XUMO, Netflix, and iHeartRadio.

Button Functions

Button	Function
Power	Turns the TV on or off.
INPUT	Cycles through available input sources (HDMI, AV, etc.).
XUMO / NETFLIX / IHEARTRADIO	Direct access buttons to launch the respective streaming applications.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.

Button	Function
MENU	Opens the TV's main menu.
INFO	Displays information about the current program or input.
EXIT	Exits the current menu or screen.
BACK	Returns to the previous menu or screen.
VOL (+/-)	Adjusts the volume level.
CH (Up/Down)	Changes TV channels.
Mute	Mutes or unmutes the TV audio.
CC	Activates or deactivates Closed Captions.
PIC	Accesses picture settings.
GUIDE	Opens the electronic program guide (if available).
Number Pad (0-9)	Direct channel entry.
ENTER	Confirms selections, similar to OK button.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback for compatible content.

MAINTENANCE

Cleaning the Remote

To maintain the remote's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or damage.

Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your VIZIO XRT122 remote control, refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).

- Replace the batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the problematic buttons, to remove any dirt or debris that might be interfering with button presses.
 - If only specific app buttons (XUMO, Netflix, iHeartRadio) are not working, ensure your TV is connected to the internet and the apps are properly installed and updated on your VIZIO Smart TV.
- **Remote range is limited:**
 - Ensure batteries are fresh. Weak batteries can reduce the remote's effective range.
 - Minimize strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.
- **TV not listed as compatible:**
 - This remote is specifically designed for the VIZIO models listed in the Introduction section. While it may work with some other VIZIO TVs, full functionality is not guaranteed for unlisted models.

SPECIFICATIONS

Feature	Detail
Brand	VIZIO
Model Name	XRT122
Connectivity Technology	Infrared
Compatible Devices	Television (Specific VIZIO models)
Number of Buttons	39
Battery Type	2 x AAA Alkaline batteries (not included)
Item Weight	70 Grams
Color	Black
Special Feature	Ergonomic design

WARRANTY INFORMATION

Specific warranty details for the VIZIO XRT122 remote control are typically provided by the original manufacturer or the retailer at the time of purchase. Please refer to your purchase documentation or the official VIZIO website for the most accurate and up-to-date warranty terms and conditions. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your VIZIO XRT122 remote control, please visit the official VIZIO support website or contact their customer service department.

VIZIO Official Website: www.vizio.com/support

When contacting support, please have your remote control model number (XRT122) and your VIZIO TV model number readily available.