

## HORI PSV-143

# HORI PS Vita 2000 L2/R2 L3/R3 Remote Play Assist Attachment Instruction Manual

## INTRODUCTION

---

This manual provides instructions for the proper setup, operation, and maintenance of your HORI PS Vita 2000 L2/R2 L3/R3 Remote Play Assist Attachment. This accessory is designed to enhance your PlayStation Vita 2000 (Slim model) gaming experience, particularly for PlayStation 4 Remote Play, by adding physical L2, R2, L3, and R3 buttons.

## SETUP

---

Follow these steps to correctly attach the HORI Remote Play Assist Attachment to your PS Vita 2000 console.

1. Ensure your PlayStation Vita 2000 (Slim model) is powered off or in standby mode before attachment.
2. Gently open the attachment's clamp mechanism. The clamp is designed to securely hold your PS Vita.
3. Carefully align your PS Vita 2000 with the attachment. Ensure that the console sits flush within the attachment's frame and that all necessary ports and buttons remain accessible.
4. Close the clamp mechanism until it securely locks the PS Vita in place. Do not apply excessive force.
5. Verify that the L2, R2, L3, and R3 buttons on the attachment align correctly with the corresponding areas on the PS Vita's rear touch panel.



Figure 1: Front view of the PS Vita 2000 with the HORI attachment installed.



Figure 2: Side view illustrating the ergonomic design of the attachment.

## OPERATING INSTRUCTIONS

The HORI Remote Play Assist Attachment provides physical buttons that interact with the PS Vita's rear touch panel, simulating touches for L2, R2, L3, and R3 inputs. This is particularly beneficial for PlayStation 4 Remote Play, offering a more traditional controller layout.

- **L2/R2 Buttons:** These buttons are typically used for triggers in games, such as aiming and firing in shooters, or accelerating and braking in racing games.
- **L3/R3 Buttons:** These buttons are often used for specific actions like melee attacks, sprinting, or camera resets, replicating the functionality of pressing down on analog sticks.

**Important Note:** The functionality of these buttons depends on the specific game's Remote Play control scheme. While this attachment provides physical buttons, some games may still map L2/R2/L3/R3 functions to the PS Vita's front touchscreen or other controls. Always refer to the in-game control settings for optimal use.



Figure 3: Proper hand placement for using the attachment.

## MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your HORI Remote Play Assist Attachment.

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the attachment. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic finish. Do not immerse the attachment in water.
- **Storage:** When not in use, store the attachment in a clean, dry environment away from direct sunlight, extreme temperatures, and excessive humidity. Avoid placing heavy objects on top of the attachment.
- **Handling:** Handle the attachment with care. Avoid dropping it or applying undue force, particularly to the clamping mechanism and the L2/R2/L3/R3 buttons, to prevent damage.



Figure 4: Rear view of the attachment, showing button mechanisms.

## TROUBLESHOOTING

If you encounter issues with your HORI Remote Play Assist Attachment, refer to the following common problems and solutions.

- **Buttons not responding:**

- Ensure the PS Vita 2000 is correctly seated within the attachment and that the buttons are making proper contact with the rear touch panel.
- Verify that the game you are playing supports L2/R2/L3/R3 input via the rear touch panel during Remote Play. Some games may utilize the front touchscreen for these functions.
- Check for any debris or obstructions between the attachment's buttons and the PS Vita's rear touch panel.

- **Attachment feels loose or unstable:**

- Confirm that the clamping mechanism is fully engaged and securely locked.
- Ensure you are using the attachment with a PlayStation Vita 2000 (Slim model). This attachment is specifically designed for the Slim model and is not compatible with the original 'Phat' PS Vita

model.

- **Difficulty attaching or removing the PS Vita:**

- Gently open and close the clamp mechanism. Do not force the attachment onto or off the PS Vita, as this may cause damage to either device.

## SPECIFICATIONS

<b>Model Number</b>	PSV-143
<b>Compatibility</b>	PlayStation Vita 2000 (Slim model)
<b>Function</b>	Adds physical L2, R2, L3, R3 buttons for rear touch panel input
<b>Material</b>	Plastic
<b>Date First Available</b>	April 28, 2016

## WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please visit the official HORI website or contact HORI customer service directly. Please retain your proof of purchase for any warranty claims.