

Mr.Go CQ-DL501A

Mr.Go 11-Inch LED Egg Lamp User Manual

Model: CQ-DL501A

1. INTRODUCTION

Thank you for choosing the Mr.Go 11-Inch LED Egg Lamp. This versatile lighting product features a color-changing LED, is cordless, waterproof, and rechargeable, making it suitable for various indoor and outdoor settings. This manual provides essential information for the safe and effective use of your LED Egg Lamp.

2. SAFETY INFORMATION

- Read all instructions before use and retain for future reference.
- Use only the provided charger. Using an incompatible charger may damage the battery or the lamp.
- Do not attempt to open or modify the lamp. This will void the warranty and may cause damage or injury.
- Keep the charging port dry and clean. Ensure the waterproof seal is properly closed when not charging, especially when used near water.
- Avoid exposing the lamp to extreme temperatures or direct sunlight for prolonged periods.
- This product is not a toy. Keep out of reach of children unless supervised.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Mr.Go 11-Inch LED Egg Lamp
- 1 x Charger with Power Cord (US Standard Plug)
- 1 x IR Remote Control
- 1 x User Manual



Image: Components of the Mr.Go LED Egg Lamp package, including the lamp, remote, and charger, with dimensions indicated.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the LED Egg Lamp. Locate the charging port on the underside of the lamp, protected by a rubber plug. Gently open the plug and connect the provided charger. The charging indicator (if present) will illuminate. A full charge typically takes approximately 1.5 to 2 hours. Once fully charged, disconnect the charger and ensure the rubber plug is securely closed to maintain the lamp's waterproof integrity.



Image: The Mr.Go LED Egg Lamp emitting a warm light, placed on a wooden nightstand next to a bed.

5. OPERATION

5.1 Powering On/Off

- **Using the Remote Control:** Point the IR remote control directly at the lamp and press the 'ON' or 'OFF' button.
- **Using the Lamp Button:** A physical ON/OFF button is located near the charging port on the underside of the lamp. Press it to cycle through basic modes or to turn the lamp on/off.

5.2 Remote Control Functions

The included IR remote control allows for comprehensive adjustment of the lamp's lighting features within a 3-5 meter range:

- **Color Selection:** Choose from 16 distinct RGB colors, including red, green, blue, white, pink, purple, and yellow.
- **Brightness Control:** Adjust the light intensity with 8 dimmable brightness levels.
- **Mode Selection:** Select from 4 dynamic lighting effects:
 - **Flash:** Rapid color changes.
 - **Strobe:** Quick flashes of a single color.
 - **Fade:** Gradual transition between colors.
 - **Smooth:** Slow, continuous color blending.
- **Speed Control:** Adjust the speed of the Flash, Strobe, Fade, and Smooth modes.

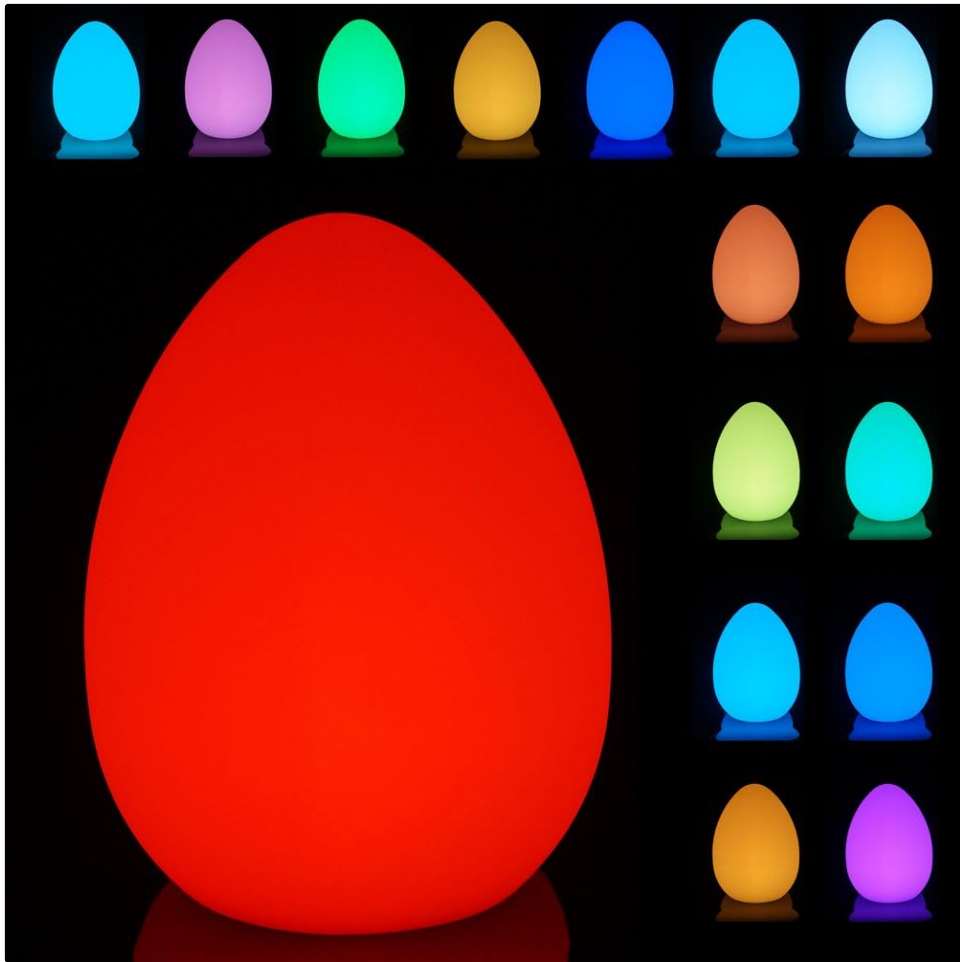


Image: A collection of Mr.Go LED Egg Lamps illuminated in different colors, demonstrating the range of available hues.



Image: A large Mr.Go LED Egg Lamp glowing brightly as a decorative centerpiece on a table set for an outdoor event.

6. CARE AND MAINTENANCE

6.1 Cleaning

To clean the lamp, wipe it with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the polyethylene shell. Ensure the charging port's rubber plug is sealed before cleaning with water.

6.2 Storage

When storing the lamp for extended periods, ensure it is fully charged and then turn it off. Store in a cool, dry place away from direct sunlight. Recharge the lamp every 3-6 months to maintain battery health.

6.3 Waterproof Feature

The lamp has an IP65 waterproof rating, making it suitable for outdoor use and exposure to splashes. However, it is not designed for prolonged submersion. Always ensure the charging port is securely sealed when the lamp is exposed to water.



Image: The Mr.Go LED Egg Lamp illuminating a garden area during the evening, demonstrating its outdoor suitability.

7. TROUBLESHOOTING

- **Lamp does not turn on:** Ensure the lamp is charged. Connect the charger and check if the charging indicator activates. If the battery is completely depleted, it may take a few minutes for the indicator to appear.
- **Remote control not working:** Check if the remote control's battery needs replacement. Ensure there are no obstructions between the remote and the lamp, and that you are within the 3-5 meter operating range.
- **Light is dim or inconsistent:** The battery may be low. Recharge the lamp fully.

- **Charging issue:** Verify the charger is correctly plugged into both the lamp and a working power outlet. Ensure the charging port on the lamp is clean and free of debris.

8. SPECIFICATIONS

Feature	Specification
Model Number	CQ-DL501A
Dimensions (H x D)	11 inches x 8.7 inches
Weight	1.8 Pounds
Material	PE Shell (Polyethylene)
Power Consumption	1.5W
Charger Input	AC 100V-240V 50/60Hz
Charger Output	1A 5V DC
Battery	Li-ion 3.7V 1000mAh
LED Quantity	6pcs
LED Colors	16 RGB colors (4 main: Red, Green, Blue, White)
Flash Modes	Flash, Strobe, Fade, Smooth
Remote Control Range	3-5 meters
Charging Time	Approx. 1.5 to 2 Hours
Working Time	Approx. 8 to 48 Hours (depending on brightness)
Water Resistance	IP65
Cordless	Yes
Switch Type	Push Button / Remote
Voltage	5 Volts
UPC	756040845681

9. WARRANTY AND SUPPORT

Mr.Go products are manufactured with quality and durability in mind. For specific warranty details or technical support, please refer to the warranty card included with your purchase or contact Mr.Go customer service directly through their official website or the retailer where the product was purchased. Please have your model number (CQ-DL501A) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question