

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Urbanista](#) /

› [Urbanista Melbourne Bluetooth Speaker \(Model 1033403\) User Manual](#)

Urbanista 1033403

Urbanista Melbourne Bluetooth Speaker (Model 1033403) User Manual

INTRODUCTION

Welcome to your new Urbanista Melbourne Bluetooth Speaker. This manual provides comprehensive instructions for setting up, operating, and maintaining your speaker. The Urbanista Melbourne delivers high-quality sound from an ultra-compact, flat design, connecting to your music via Bluetooth. It is compatible with Android, iOS, and Windows devices, offering a built-in microphone for call handling and touch controls for ease of use.

WHAT'S IN THE BOX

Typically, your Urbanista Melbourne package includes the following items:

- Urbanista Melbourne Bluetooth Speaker
- USB Charging Cable
- User Manual




The Urbanista Melbourne Bluetooth Speaker neatly placed within its original retail packaging, indicating how the product is

presented.

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.

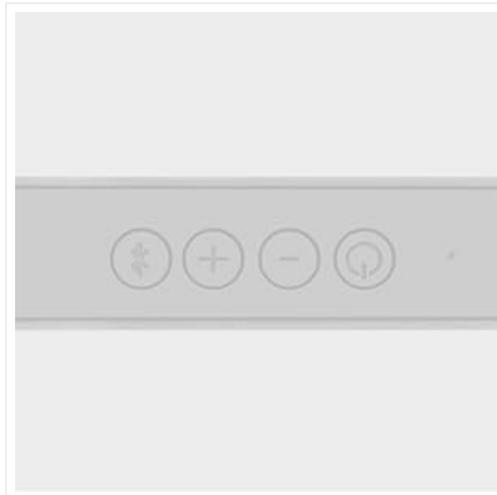

Close-up view of the top panel of the Urbanista Melbourne speaker, highlighting the power, volume, and Bluetooth/call control buttons.

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Up (+) / Next Track:** Press to increase volume. Press and hold to skip to the next track.
- **Volume Down (-) / Previous Track:** Press to decrease volume. Press and hold to go to the previous track.
- **Bluetooth / Play / Pause / Call Button:** Press to play/pause music. Press to answer/end calls. Press and hold to reject a call or activate Bluetooth pairing mode.

SETUP

1. Charging the Speaker


Before first use, ensure the speaker is fully charged. Connect the provided USB charging cable to the speaker's charging port and to a compatible USB power source (e.g., wall adapter, computer USB port). The LED indicator will illuminate to show charging status and turn off or change color when fully charged.

2. Powering On/Off

- To power on: Press and hold the **Power Button** until you hear an audible cue or see the LED indicator light up.
- To power off: Press and hold the **Power Button** again until you hear an audible cue or the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure the Urbanista Melbourne speaker is powered on and within close proximity to your device.
2. Activate Bluetooth on your audio source device (smartphone, tablet, laptop).
3. On your device, search for available Bluetooth devices. You should see "Urbanista Melbourne" in the list.
4. Select "Urbanista Melbourne" to initiate the connection. The speaker will provide an audible confirmation once successfully paired.

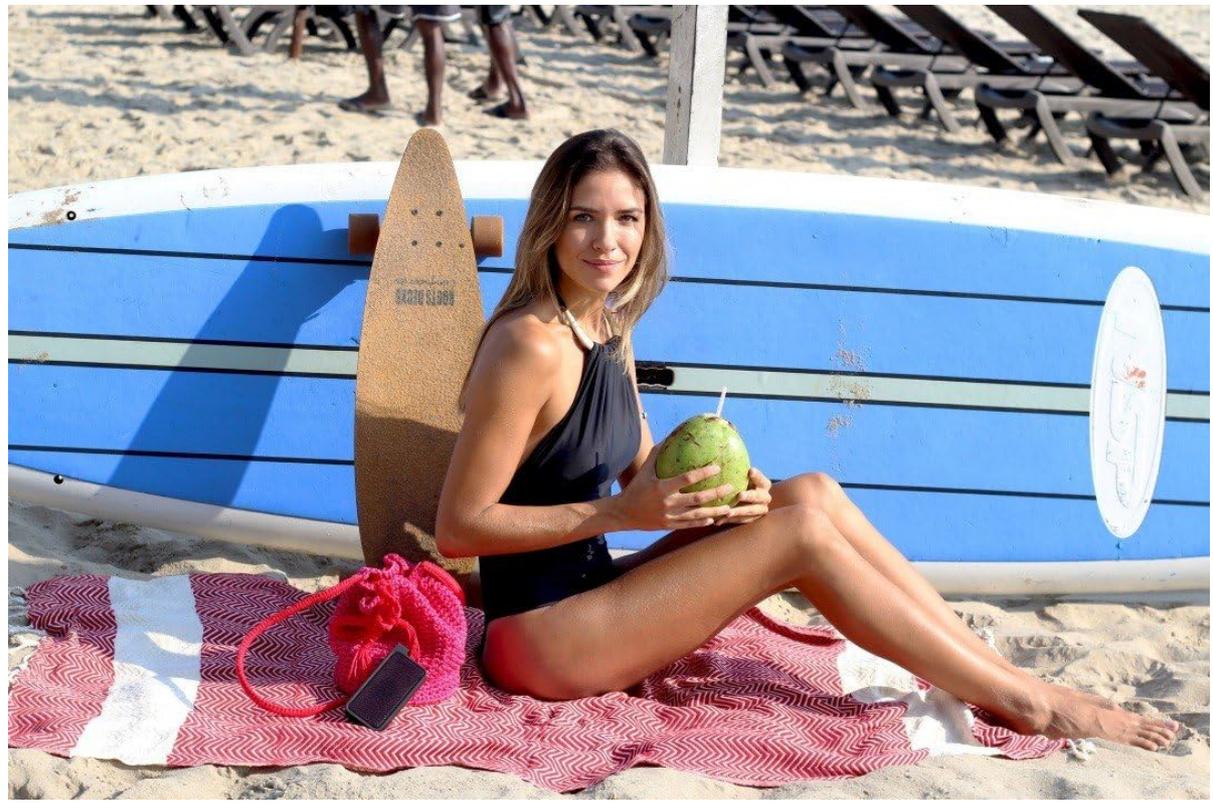

A clear front view of the Urbanista Melbourne Bluetooth Speaker in Fluffy Cloud White, showcasing its compact and flat design.

OPERATING INSTRUCTIONS

Playing Music

Once your device is successfully connected via Bluetooth, you can start playing music from your preferred application. Use the **Play/Pause/Call Button** on the speaker to control playback.

Volume Control

- To increase volume: Press the **Volume Up (+) Button**.
- To decrease volume: Press the **Volume Down (-) Button**.

Track Navigation

- To skip to the next track: Press and hold the **Volume Up (+) Button**.
- To go to the previous track: Press and hold the **Volume Down (-) Button**.

Call Handling

The Urbanista Melbourne features a built-in microphone for hands-free calling.

- To answer an incoming call: Press the **Play/Pause/Call Button**.
- To end an active call: Press the **Play/Pause/Call Button**.
- To reject an incoming call: Press and hold the **Play/Pause/Call Button**.



The Urbanista Melbourne Bluetooth Speaker shown in a casual outdoor environment, demonstrating its portability and suitability for on-the-go use.

MAINTENANCE

Cleaning

To clean your speaker, gently wipe its surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or internal components.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity. Protect it from dust and physical impact.

Battery Care

To maximize battery lifespan, fully charge the speaker before storing it for long durations. Avoid completely discharging the battery frequently, as this can reduce its overall capacity over time.

TROUBLESHOOTING

If you encounter any issues with your Urbanista Melbourne speaker, please refer to the following common problems and solutions:

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable and allow it to charge for a period.

Problem	Solution
Cannot pair with Bluetooth device.	Ensure the speaker is powered on and in Bluetooth pairing mode. Turn off and then on Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device and try pairing again.
No sound or low volume.	Check the volume level on both the speaker and your connected device. Ensure the speaker is properly paired and connected to your device.
Sound distortion.	Move the speaker closer to your device to avoid interference. Reduce the volume on both the speaker and your device to prevent clipping.

SPECIFICATIONS

Detailed technical specifications for the Urbanista Melbourne Bluetooth Speaker:

Feature	Detail
Model Name	Urbanista Melbourne
Model Number	1033403
Speaker Type	Bluetooth speaker
Special Feature	Built-in Microphone
Connectivity Technology	Bluetooth
Wireless Type	Bluetooth
Power Source	Battery Powered (1 Lithium Ion battery included)
Speaker Maximum Output Power	3 Watts
Signal-to-Noise Ratio	80 dB
Audio Driver Type	Dynamic Driver
Audio Output Mode	Stereo
Control Method	Touch
Item Weight	325 Grams (11.5 ounces)
Product Dimensions (LxWxH)	0.39 x 0.39 x 0.39 inches
Color	Fluffy Cloud White
Manufacturer	Urbanista

Feature	Detail
GTIN	07350088301166
Compatible Devices	Desktop, Gaming Console, Laptop, MP3 Player, Smartphone, Tablet, Television
Recommended Uses	Music, Travel, Outdoor Activities, On-the-go Listening
Mounting Type	Tabletop Mount
Waterproof	No

WARRANTY INFORMATION

The Urbanista Melbourne Bluetooth Speaker comes with a limited warranty. For detailed terms, conditions, and duration of your warranty, please refer to the warranty card included in your product packaging. You may also visit the official Urbanista website for the most up-to-date warranty policy.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or product inquiries not covered in this manual, please visit the official Urbanista support website or contact their customer service department.

Official Urbanista Store on Amazon: [Visit the Urbanista Store](#)