

[Manuals.plus](#) /

› [TRIXIE](#) /

› Trixie TX 33677 Thermoplastic Rubber Ball User Manual

TRIXIE 33677

Trixie TX 33677 Thermoplastic Rubber Ball User Manual

Model: 33677

INTRODUCTION

This manual provides essential information for the safe and effective use of your Trixie TX 33677 Thermoplastic Rubber Ball. Designed for dogs of all breeds and sizes, this robust and durable toy offers engaging play and features an integrated sound element for added stimulation. Please read these instructions carefully before use.

PRODUCT OVERVIEW



Image 1: A vibrant pink thermoplastic rubber ball with a textured surface, designed for dogs. The ball features various nubs and protrusions for enhanced grip and dental stimulation during play.

The Trixie TX 33677 Ball is constructed from thermoplastic rubber (TPR), known for its durability and flexibility. Its design includes various textures and nubs, which can aid in dental hygiene and provide an interesting tactile experience for your pet. The ball also contains a sound mechanism to capture and maintain your dog's attention during play.

SETUP

1. **Unpackaging:** Carefully remove the Trixie TX 33677 Ball from its packaging.
2. **Inspection:** Before first use, inspect the ball for any signs of damage or manufacturing defects. Ensure all parts are intact and there are no loose pieces.
3. **Cleaning:** It is recommended to clean the ball with warm water and mild soap before initial use, especially if your dog will be mouthing it extensively. Rinse thoroughly.

OPERATING INSTRUCTIONS

The Trixie TX 33677 Ball is designed for interactive play between a dog and its owner, or for solo play under supervision.

- **Throwing and Fetching:** The ball's robust construction and textured surface make it suitable for throwing and fetching games. Its irregular bounce can add an element of unpredictability to play.
- **Chewing:** While durable, this ball is not an indestructible chew toy. Supervise your dog during play, especially if they are strong chewers. The thermoplastic rubber material is designed to withstand moderate chewing.
- **Sound Feature:** The integrated sound element activates upon compression or movement, providing auditory stimulation for your dog.
- **Supervision:** Always supervise your pet during play with any toy to prevent accidental ingestion of parts or injury.

MAINTENANCE

- **Regular Cleaning:** Clean the ball regularly with warm water and mild, pet-safe soap to remove dirt, saliva, and debris. Rinse thoroughly to ensure no soap residue remains.
- **Drying:** Allow the ball to air dry completely before storing or allowing your pet to play with it again.
- **Storage:** Store the ball in a clean, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.
- **Inspection:** Periodically inspect the ball for wear and tear. If the ball becomes damaged, cracked, or pieces begin to break off, discontinue use immediately to prevent choking hazards or injury to your pet.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Ball appears damaged or broken.	Excessive chewing, impact, or general wear over time.	Discontinue use immediately and replace the ball to prevent ingestion of small parts.
Sound feature no longer works.	Internal sound mechanism failure due to impact or water exposure.	The sound mechanism is sealed and not user-serviceable. The ball can still be used for play without the sound. If the loss of sound is critical, consider replacement.
Ball is dirty or has an odor.	Accumulation of dirt, saliva, or food particles.	Clean the ball thoroughly with warm water and mild, pet-safe soap. Rinse well and air dry.

SPECIFICATIONS

- **Model:** TX 33677
- **Brand:** TRIXIE
- **Material:** Thermoplastic Rubber (TPR)
- **Diameter:** 7 cm (2.76 inches)
- **Weight:** Approximately 0.06 Kilograms (2.12 ounces)
- **Features:** Robust, durable, with sound element, textured surface
- **Target Audience:** Dogs (All Breed Sizes, Adult dogs)

WARRANTY INFORMATION

TRIXIE products are manufactured to high-quality standards. This product is covered by a standard manufacturer's warranty

against defects in materials and workmanship. The warranty does not cover damage caused by misuse, normal wear and tear, or accidental damage. For specific warranty terms and conditions, please refer to the information provided at the point of purchase or contact TRIXIE customer support.

CUSTOMER SUPPORT

Should you have any questions, concerns, or require assistance with your Trixie TX 33677 Thermoplastic Rubber Ball, please contact TRIXIE customer service. Contact details can typically be found on the product packaging or on the official TRIXIE website. When contacting support, please have your product model number (33677) and purchase information readily available.

© 2023 TRIXIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B01EV0PKPO>

More documents and user manuals: <https://manuals.plus/>